


Part Description							
ID							
1	Pump, complete	11	Needle roller bearing	21	Cup for spring	31	Sealing ring
2	Shaft with bearing (left hand thread)	12	Cup	22	Stop ring	32	Sealing ring
3	Set of seven cylinders	13	Deflector	23	Screw f. securing bearing	33	Ball bearing
4	Spring for valve	14	Spring for bush	24	Nut f. securing bearing	34	screw
5	Spring for piston	15	Bush with gasket	25	Pisron rod	35	
6	Valve	16	Nut for pulley (left hand thread)	26	Sealing ring	36	
7	Pulley (2 grooves)	17	Lock plate	27	Key	37	
8	Body for pump	18	Ball f. locking finger	28	Sealing ring	38	
9	Bearing	19	Locking finger	29	Sealing ring	39	
10	Cover	20	Diatnace piece f. cylinder	30	Sealing ring	40	

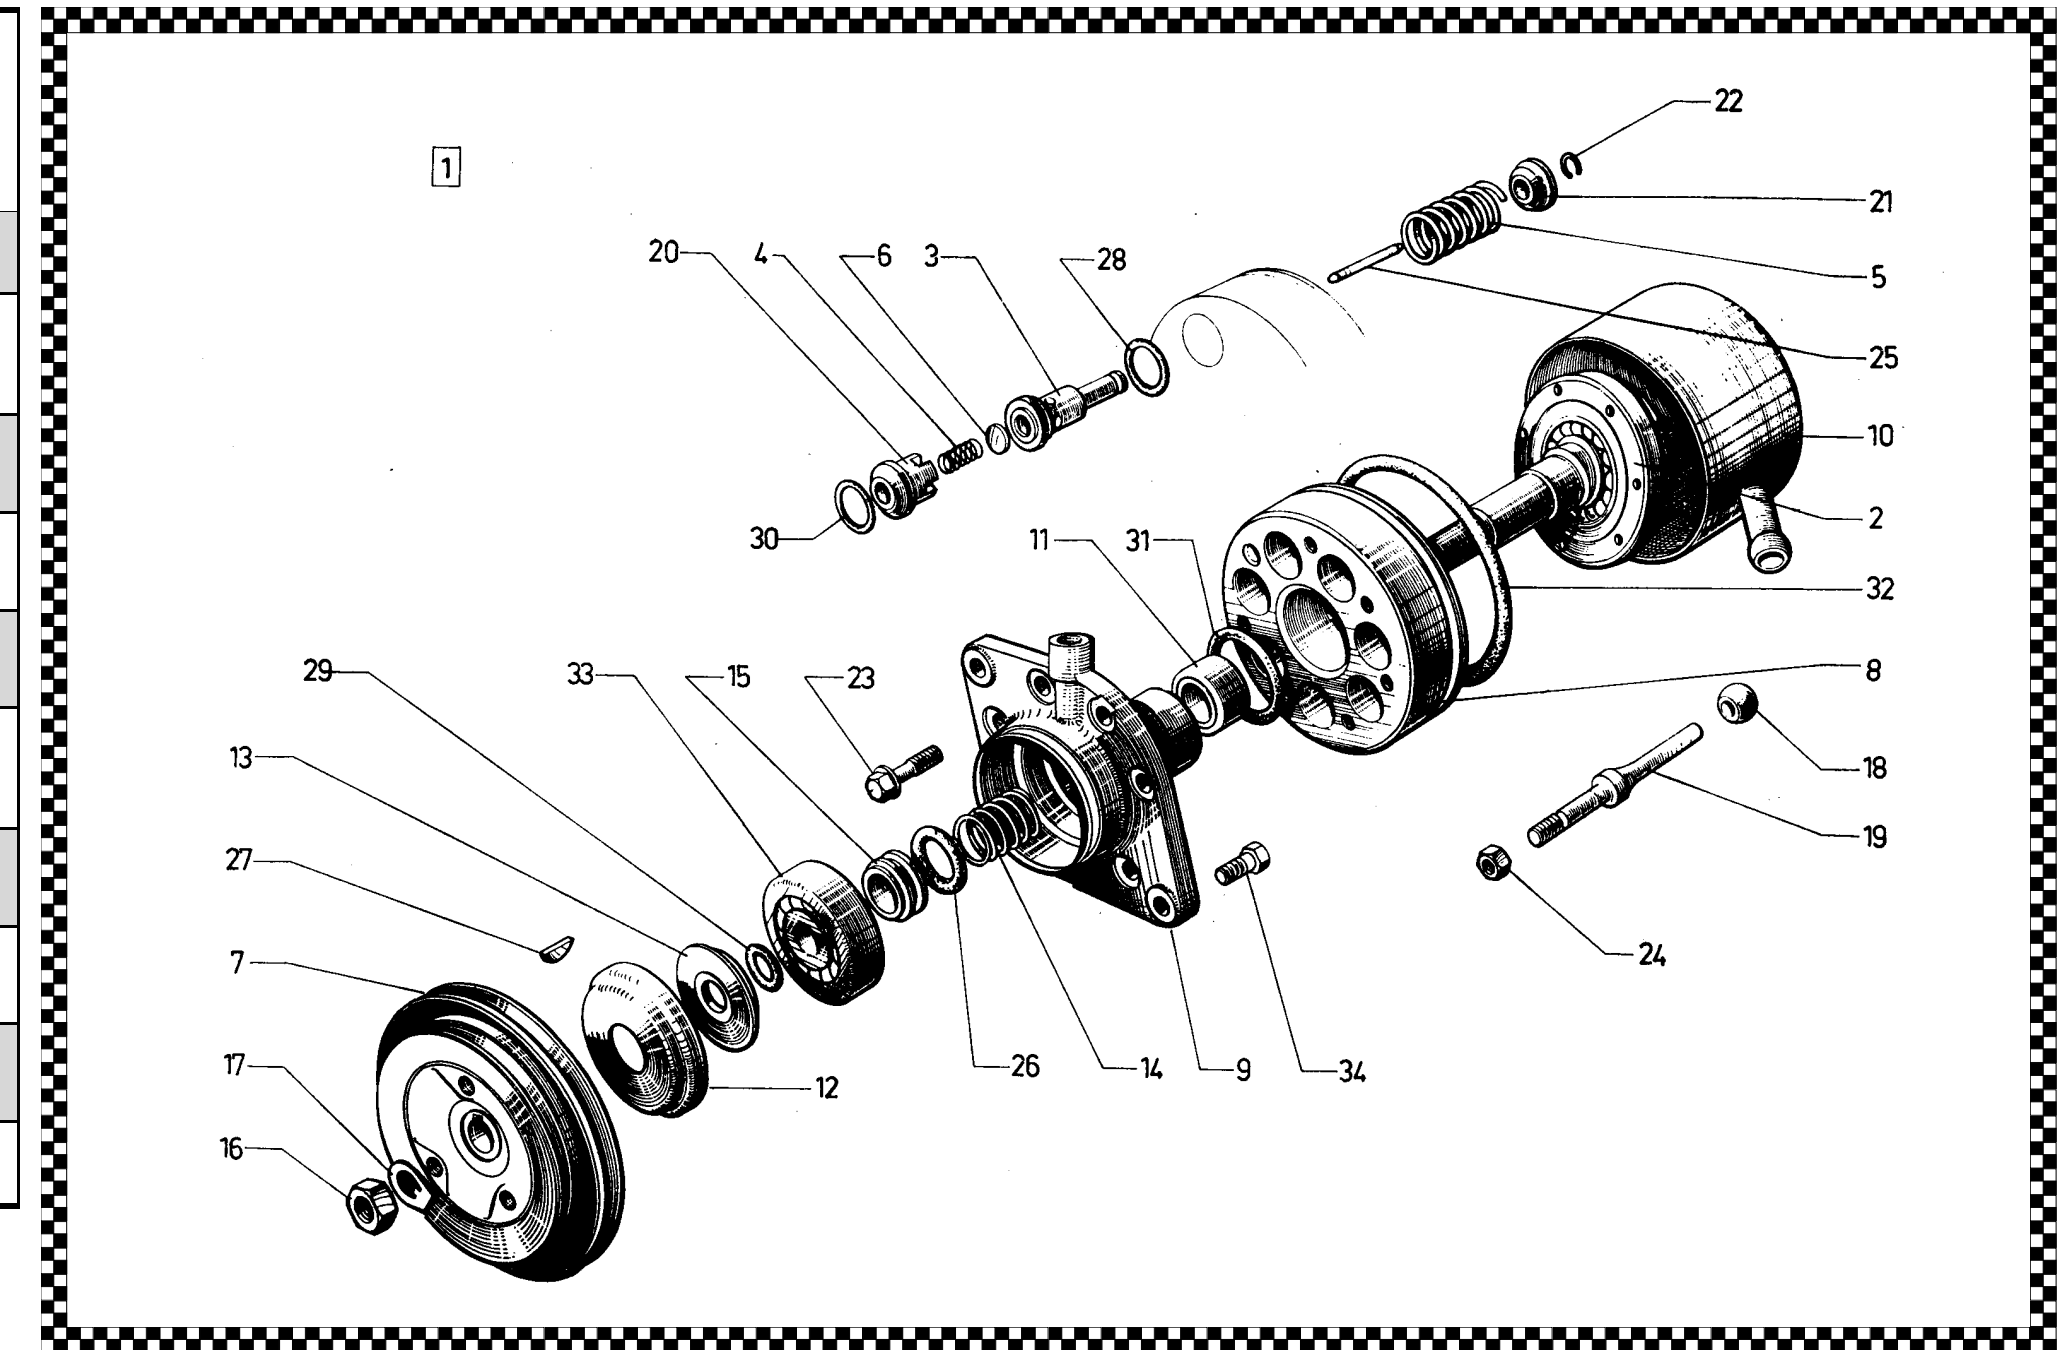


Group 3: High Pressure Pump



Part ID	Description						
1	Regulator, complete	11	Adjusting shim	21	Bleed screw ball	31	
2	Connection spring	12	Ring for regulator	22	Sealing ring	32	
3	Connection cap	13	Lock ring	23	Sealing ring	33	
4	Seat for cutting out	14	Main accumulator	24	Sealing ring	34	
5	Cutting out spring	15	Screw	25	Sealing ring	35	
6	Cup for cutting out	16	Screw	26		36	
7	Cup for connection	17	Screw	27		37	
8	Plate f. ball	18	Screw	28		38	
9	Bleed screw	19	Shouldered screw	29		39	
10	Adjusting shim	20	Inlet ball	30		40	




Group 3: Pressure Regulator Main Accumulator

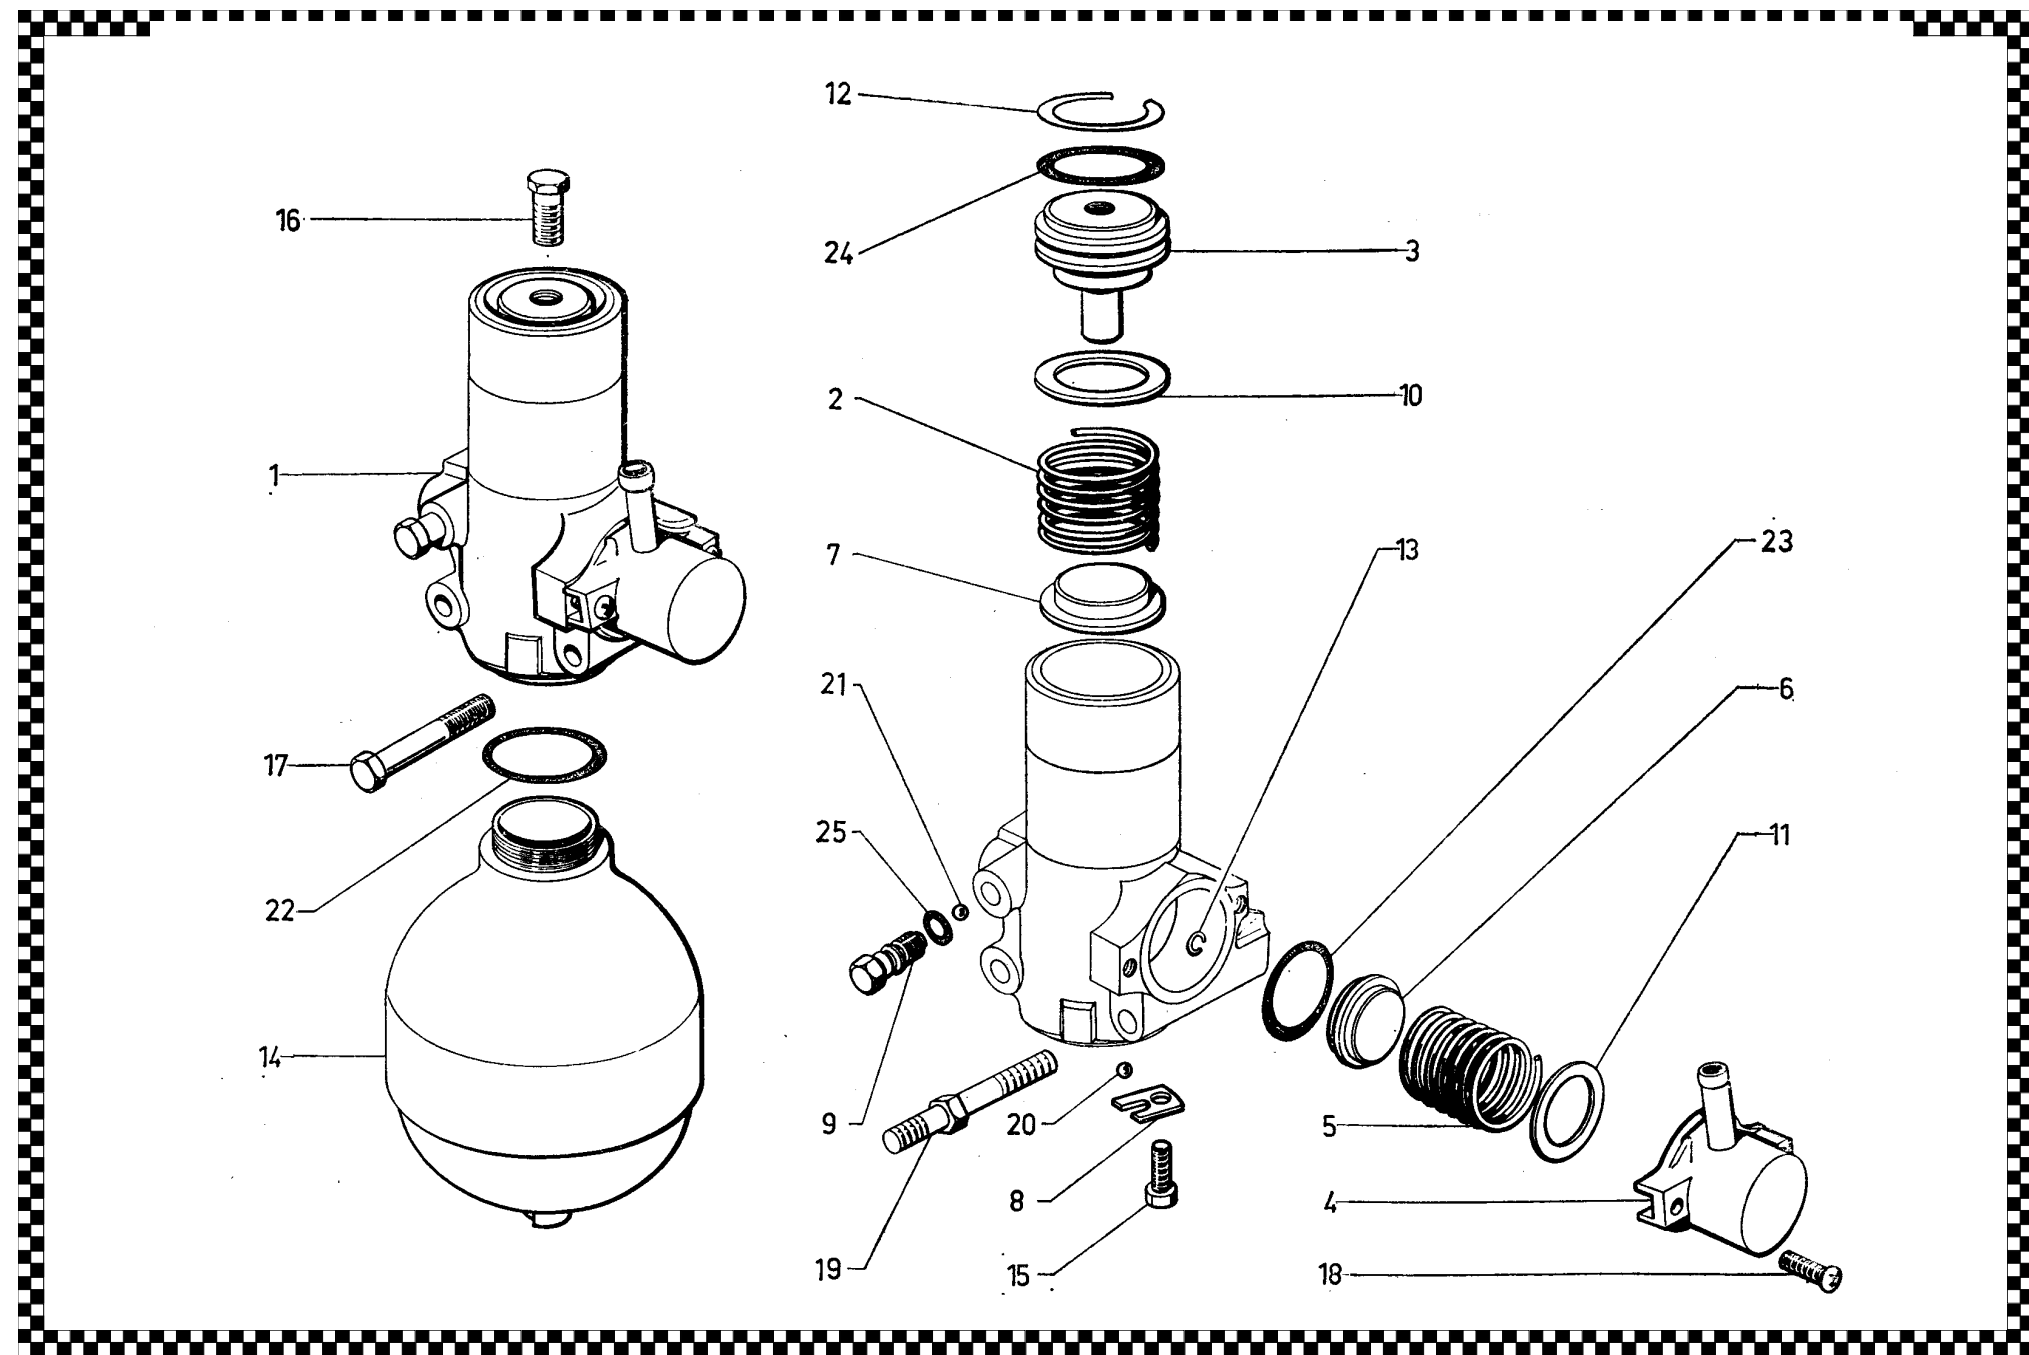


Part ID	Description						
1	Accumulator complete	11	Stop	21		31	
2	Spring	12	Spring shim	22		32	
3	Tie-rod	13	Spring (17 coils)	23		33	
4	Washer	14	Spring cup	24		34	
5	Clamping plate	15	Circlip	25		35	
6	Thrust screw	16	Sealing ring	26		36	
7	Nut	17	Sealing ring	27		37	
8	ball	18		28		38	
9	Valve with pressure switch	19		29		39	
10	Plug	20		30		40	




Group 3: Brake Accumulator Priority Valve

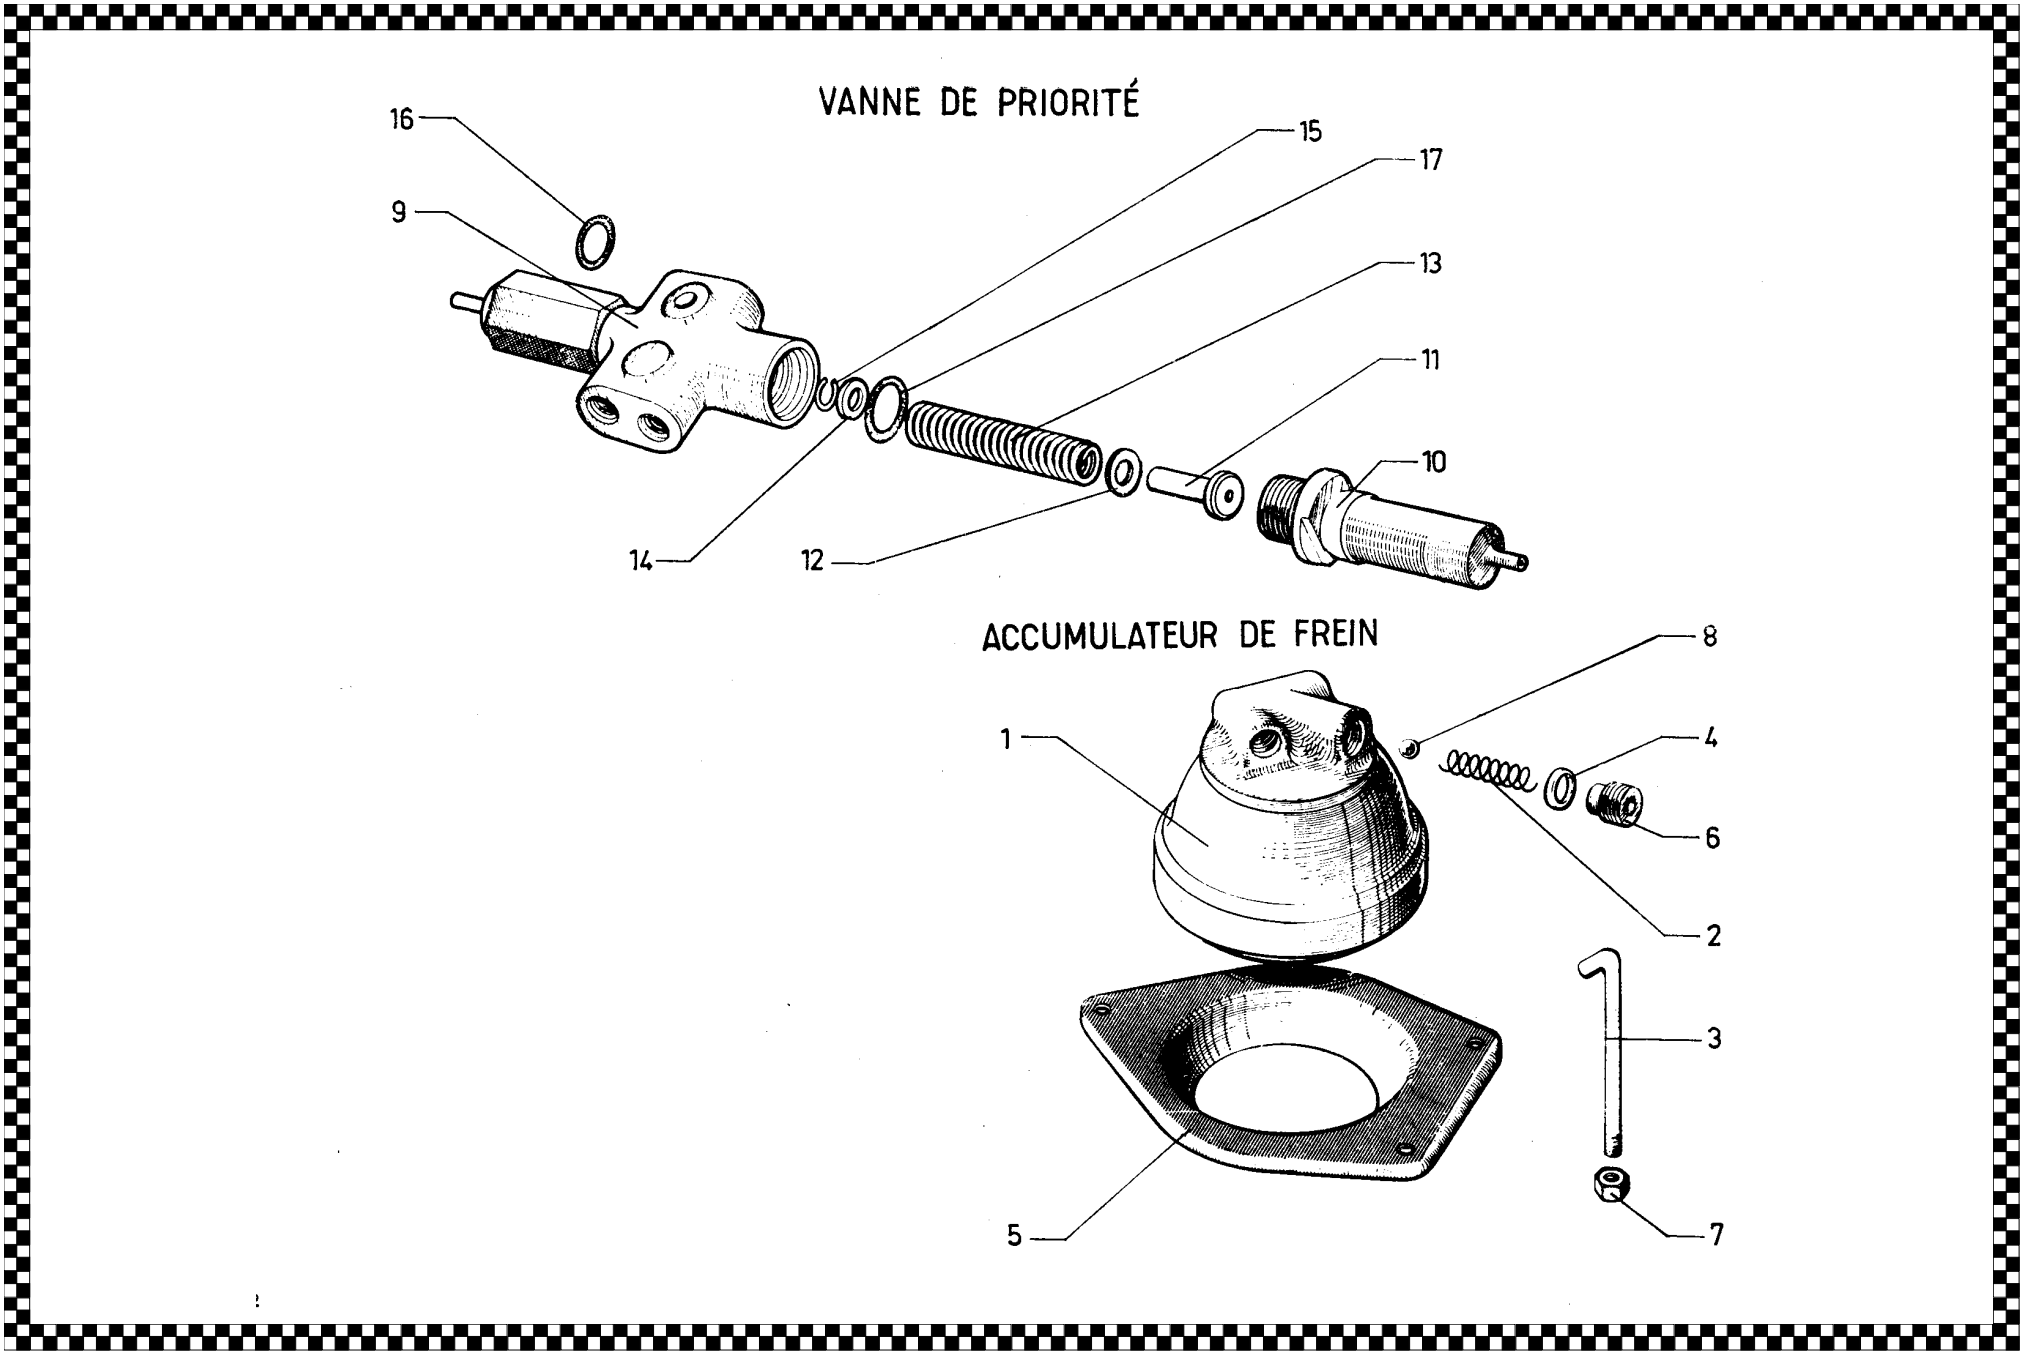

Part ID	Description						
1	Reservoir, complete	11	Filler pipe	21		31	
2	Filter with plunger tube	12	Reinforcement	22		32	
3	Filter	13	Level tube	23		33	
4	Spring	14	Drain tube	24		34	
5	Ring seal	15	Collar	25		35	
6	Tube	16	Bush	26		36	
7	Tube	17	Filtering element	27		37	
8	Sleeve	18		28		38	
9	Complete cap	19		29		39	
10	Baffle-washer	20		30		40	

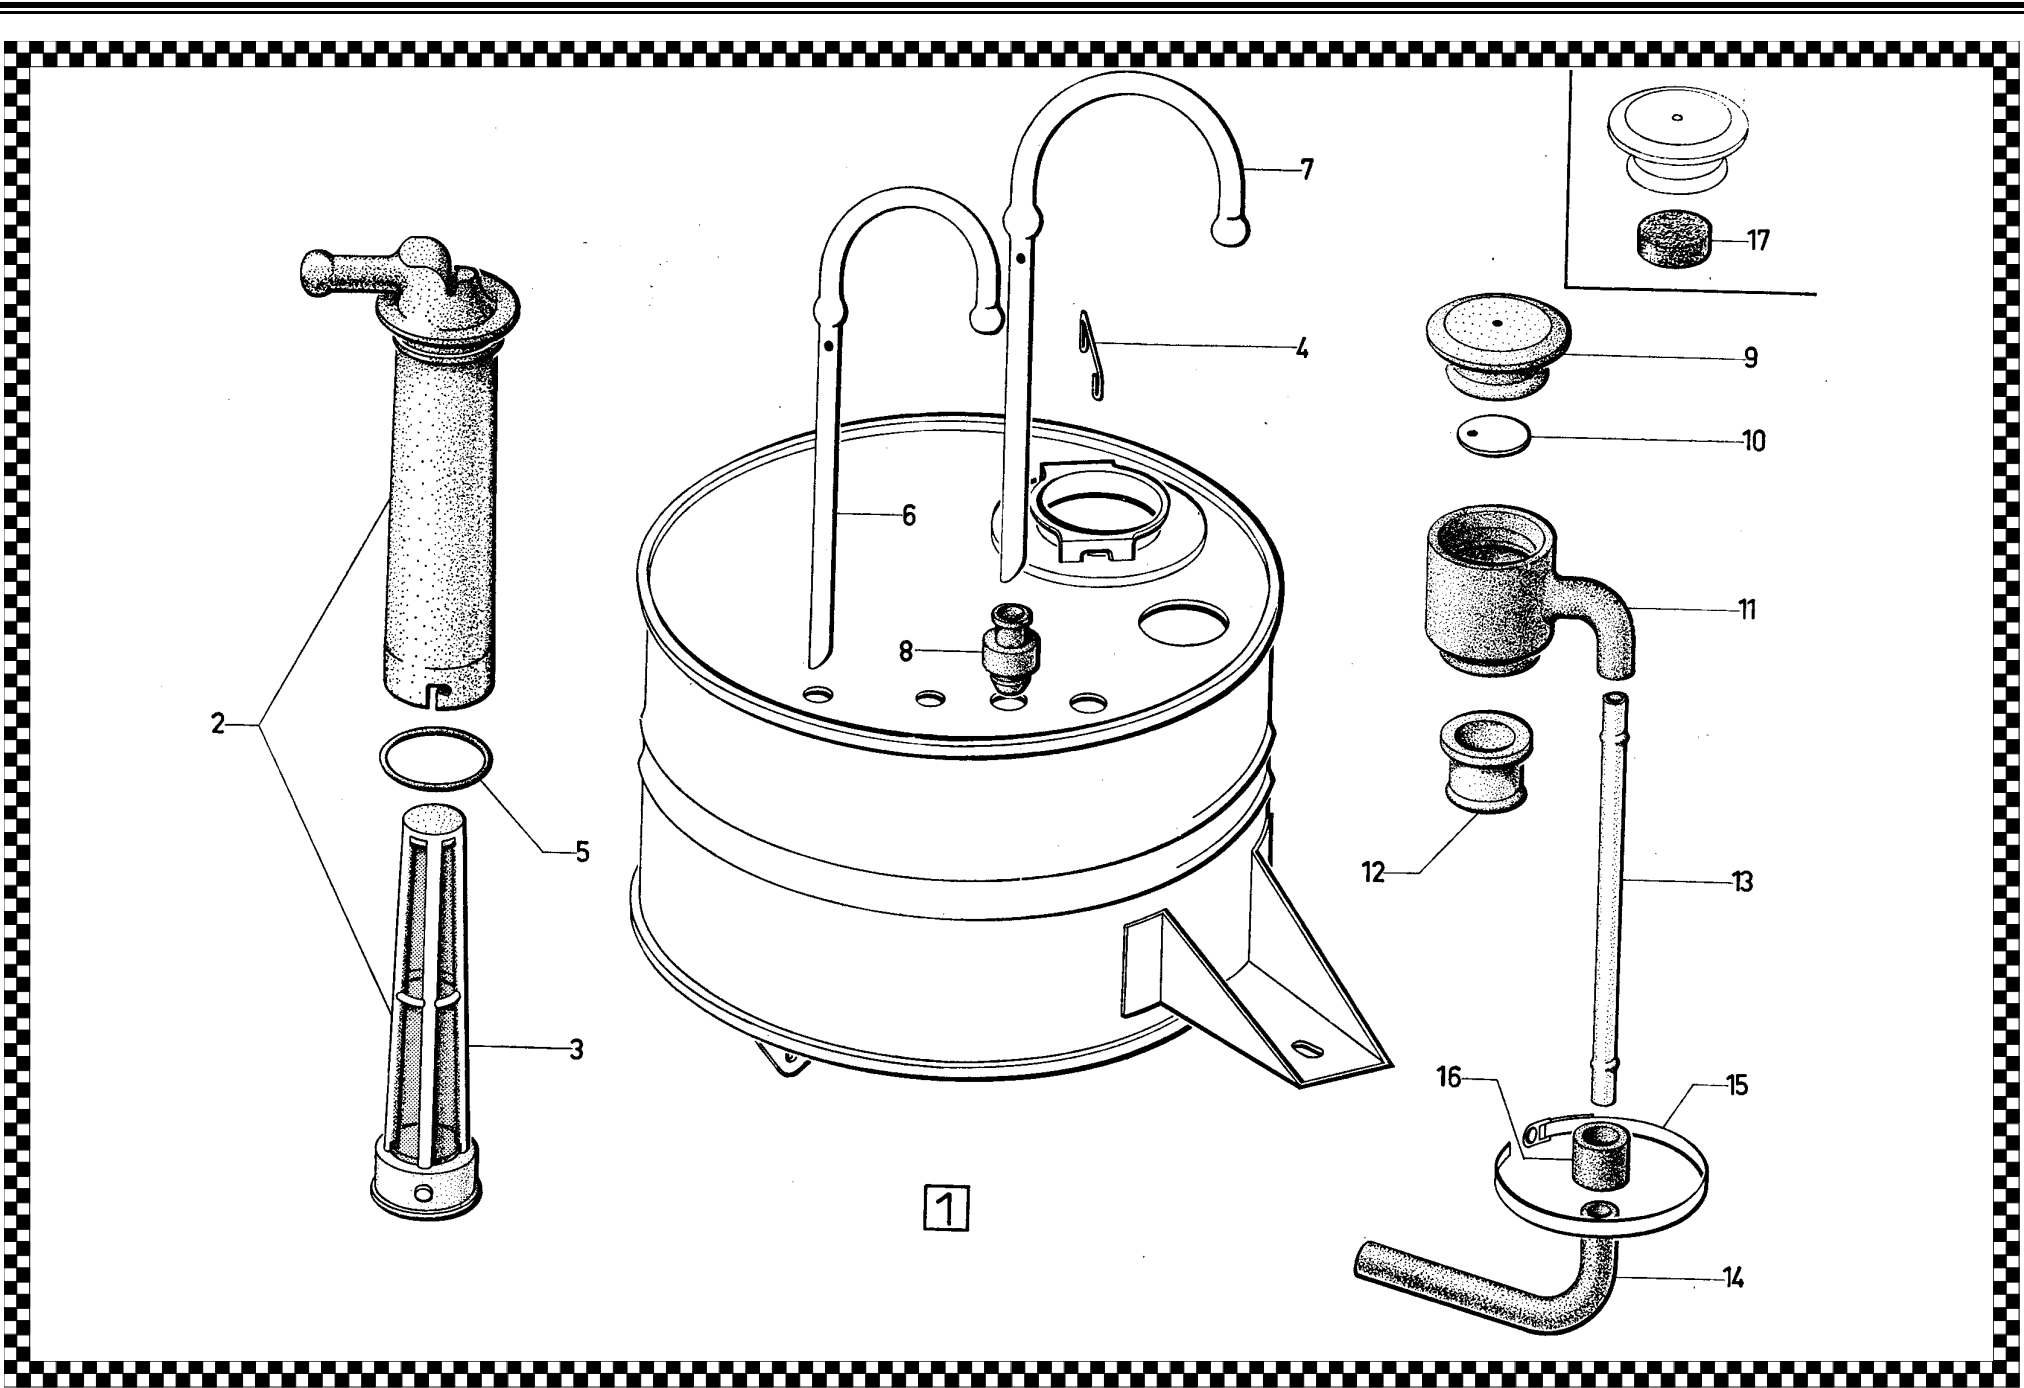


Part ID	Description						
1	Tube rubber	11	Rear main piping	21		31	
2	Tube	12	Tube	22		32	
3	Tube	13	Tube	23		33	
4	Tube	14	Tube	24		34	
5	Tube	15	Tube	25		35	
6	Tube	16	Tube	26		36	
7	Tube	17	Union	27		37	
8	Tube	18		28		38	
9	Tube	19		29		39	
10	Tube	20		30		40	

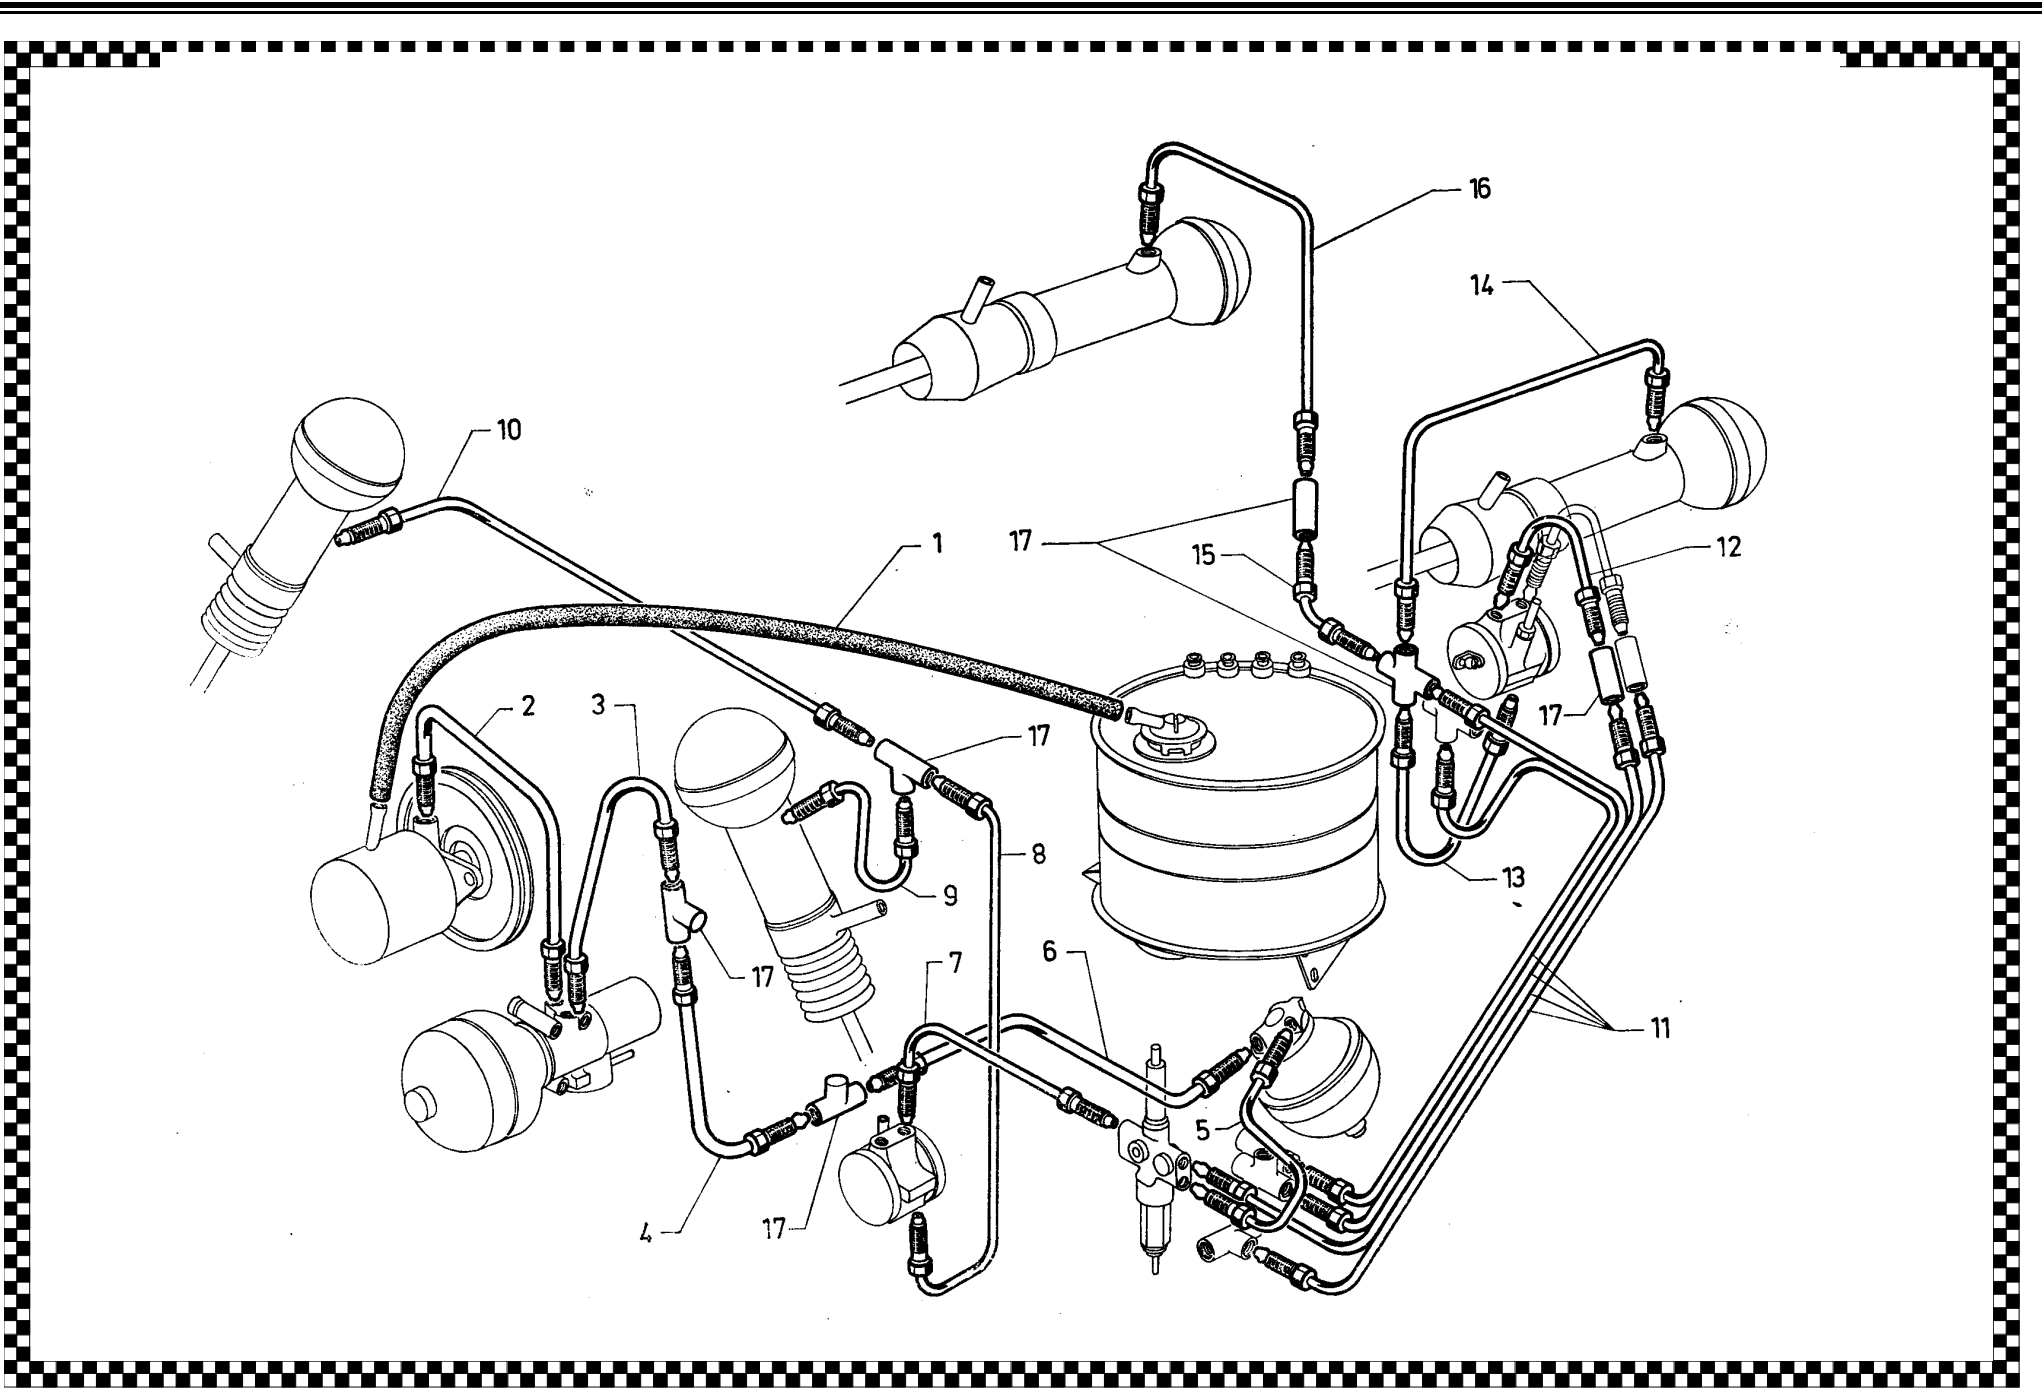

Group 3: Suspension Piping

Part ID	Description						
1	Pipe	11	Pressure switch pipe (air conditioner option)	21		31	
2	For centrifugal regulator	12		22		32	
3	Tube	13		23		33	
4	Tube	14		24		34	
5	Tube	15		25		35	
6	Union pipe f. direction	16		26		36	
7	Pipe rubber	17		27		37	
8	Swiveling	18		28		38	
9	Swiveling	19		29		39	
10	Union	20		30		40	

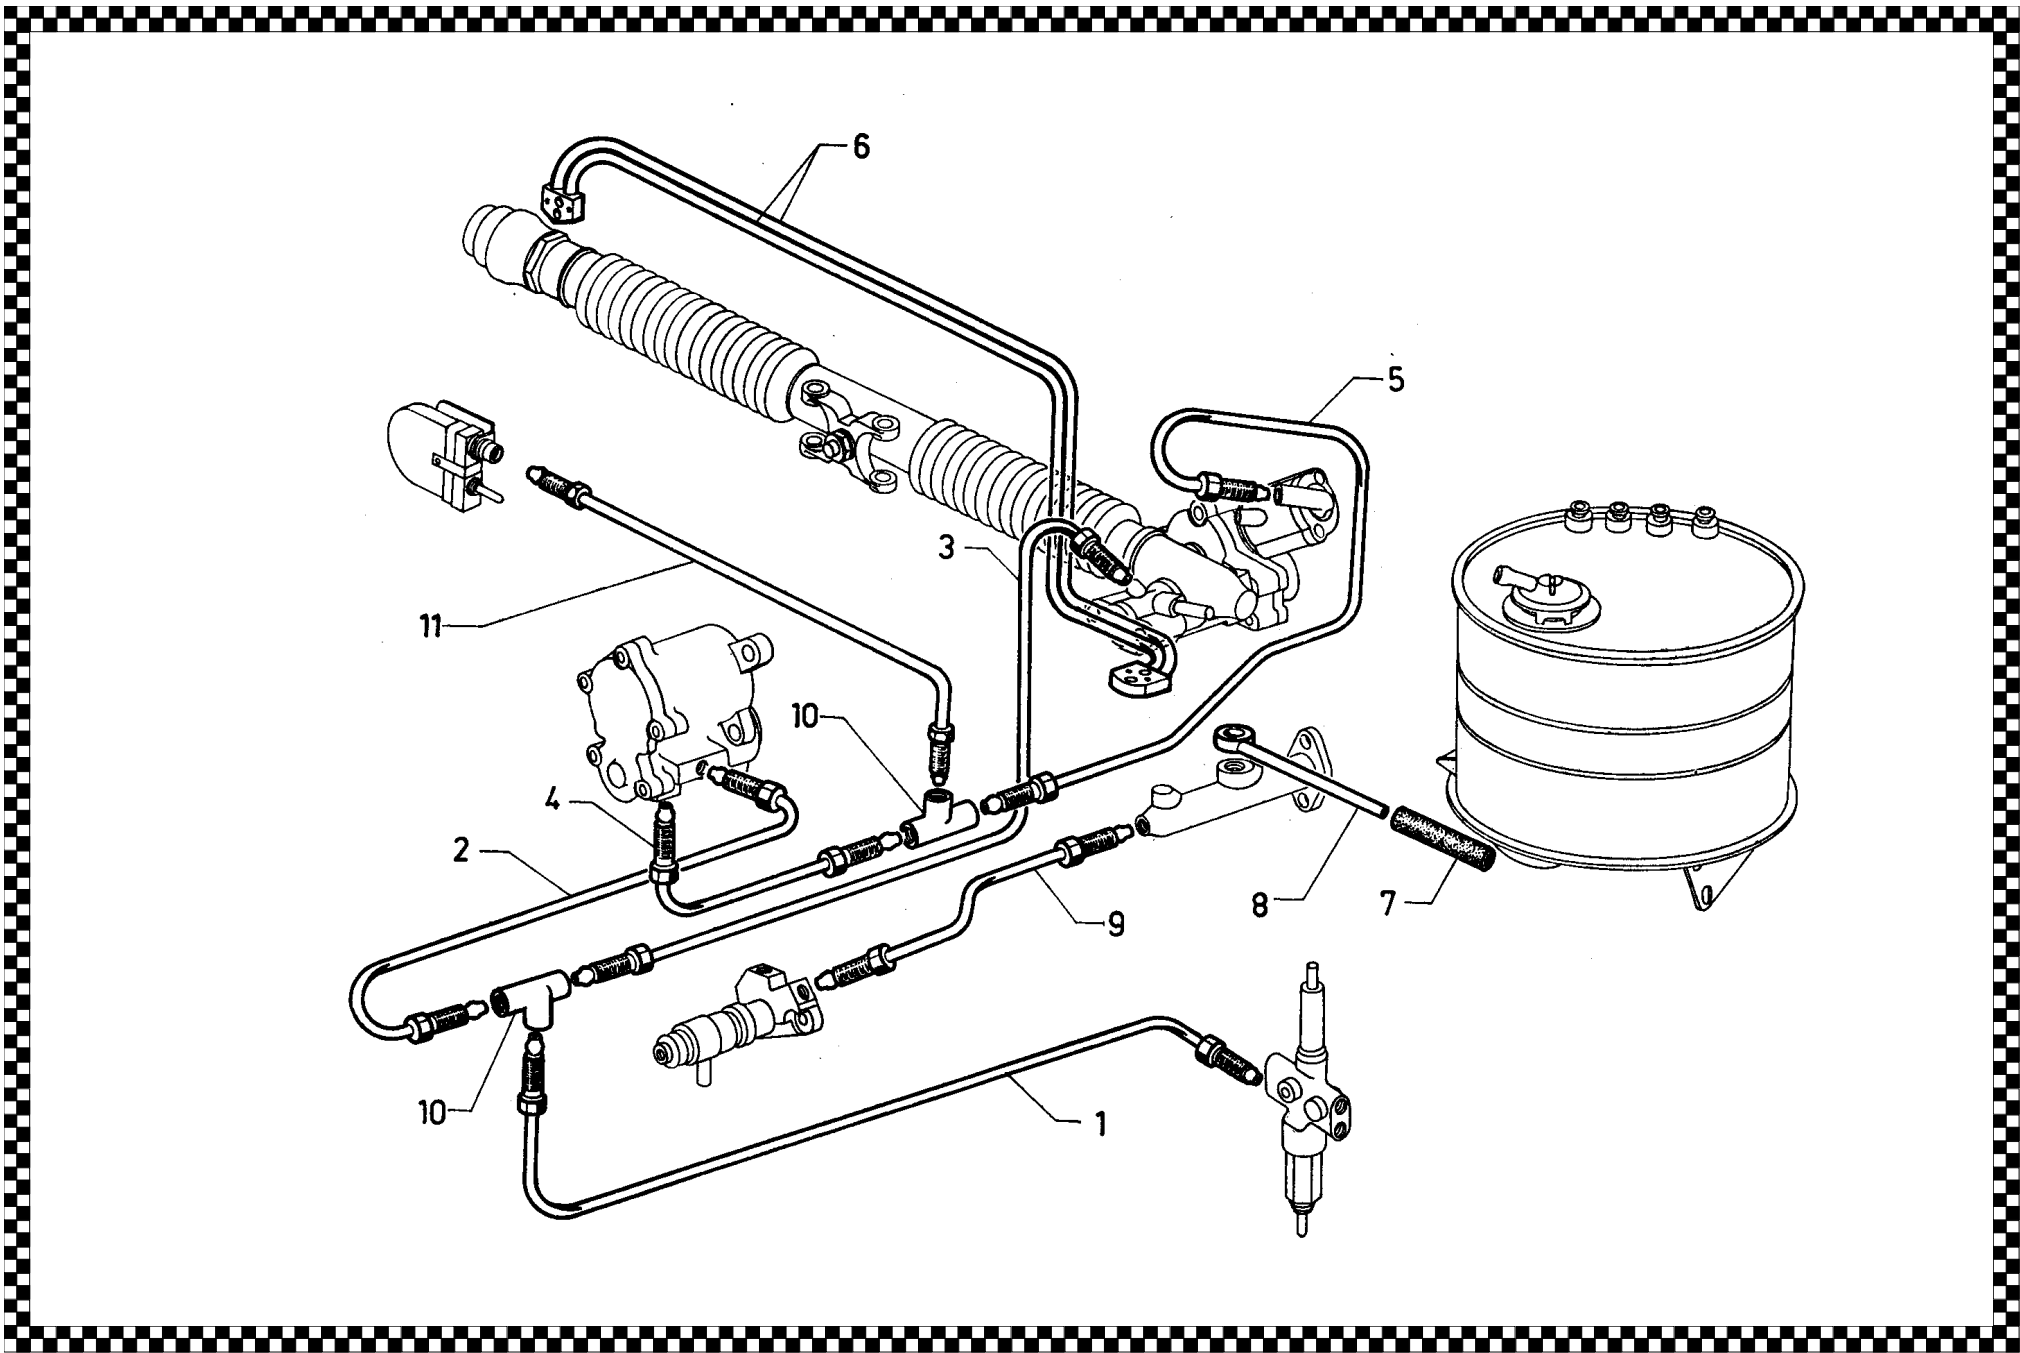


Group 3: Steering and Clutch Piping


Part ID	Description						
1	Pipe assy foro pedal gear	11	pipe	21	Drain screw	31	
2	pipe	12	Rear flexible	22	Gasket	32	
3	pipe	13	Pipe	23		33	
4	pipe	14	Pipe	24		34	
5	pipe	15	Pipe	25		35	
6	pipe	16	Pipe	26		36	
7	pipe	17	Union	27		37	
8	pipe	18	Drain pipe	28		38	
9	pipe	19	Drain pipe	29		39	
10	pipe	20	Union 2 ways	30		40	



Group 3: Piping for Brakes

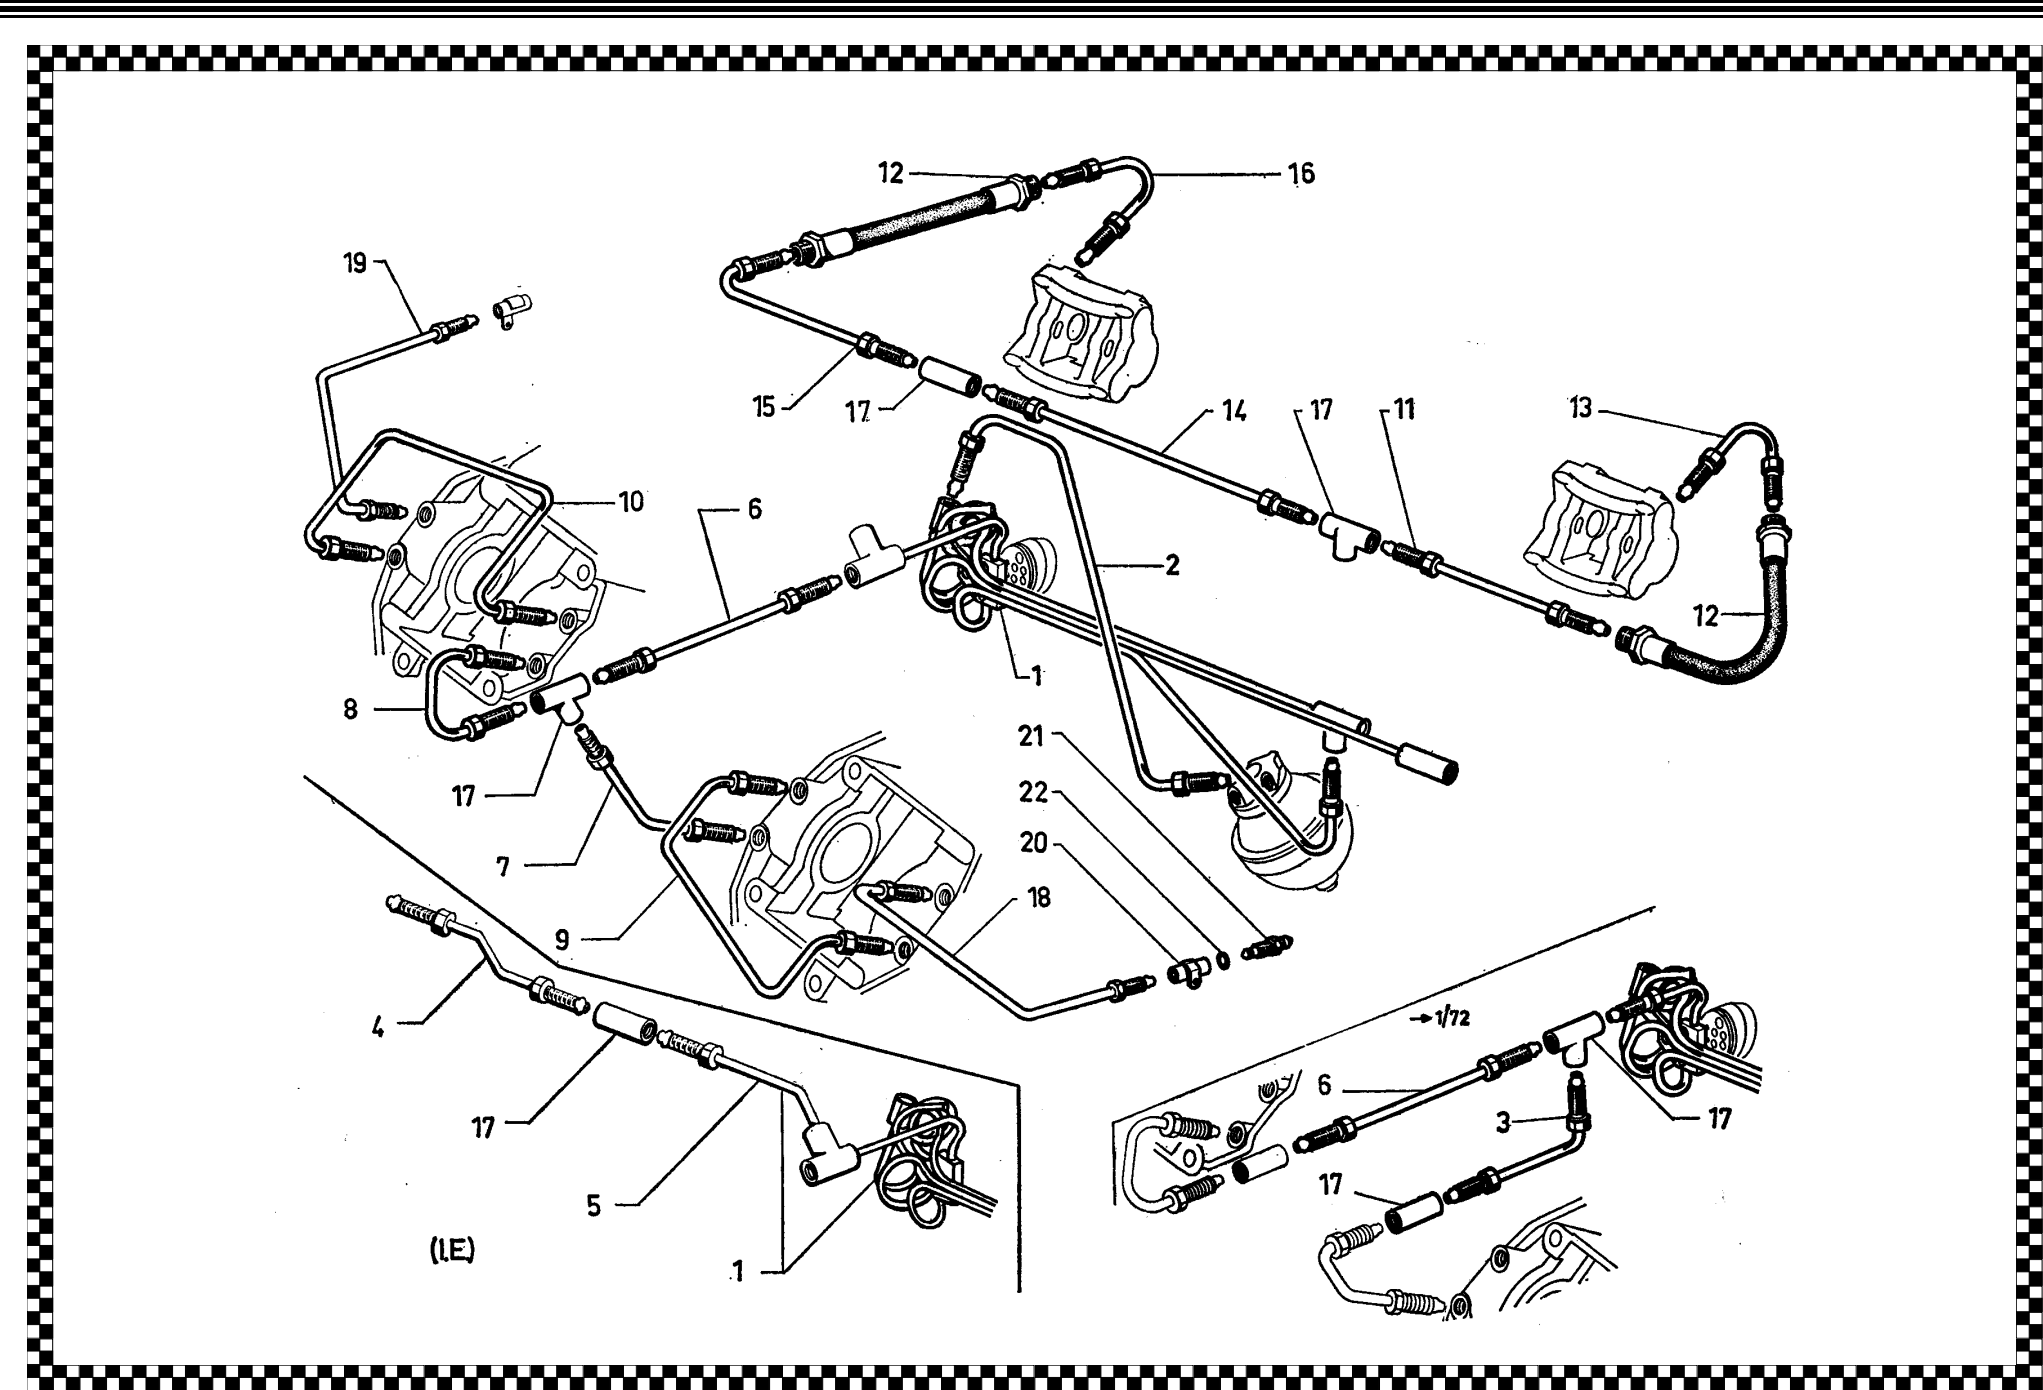


Part ID	Description						
1	Collecting pipe	11	Rubber pipe	21	Union 3 ways	31	
2	Union screw	12	With rilsan sheath	22		32	
3	Union screw	13	Pipe rilsan	23		33	
4	Union screw	14	Pipe rilsan	24		34	
5	Pipe	15	Pipe rilsan	25		35	
6	Pipe	16	Pipe rilsan	26		36	
7	Rubber pipe	17	Pipe rilsan	27		37	
8	Rubber pipe	18	Pipe rilsan	28		38	
9	Rubber pipe	19	Elbowed union	29		39	
10	Rubber pipe	20	Union	30		40	

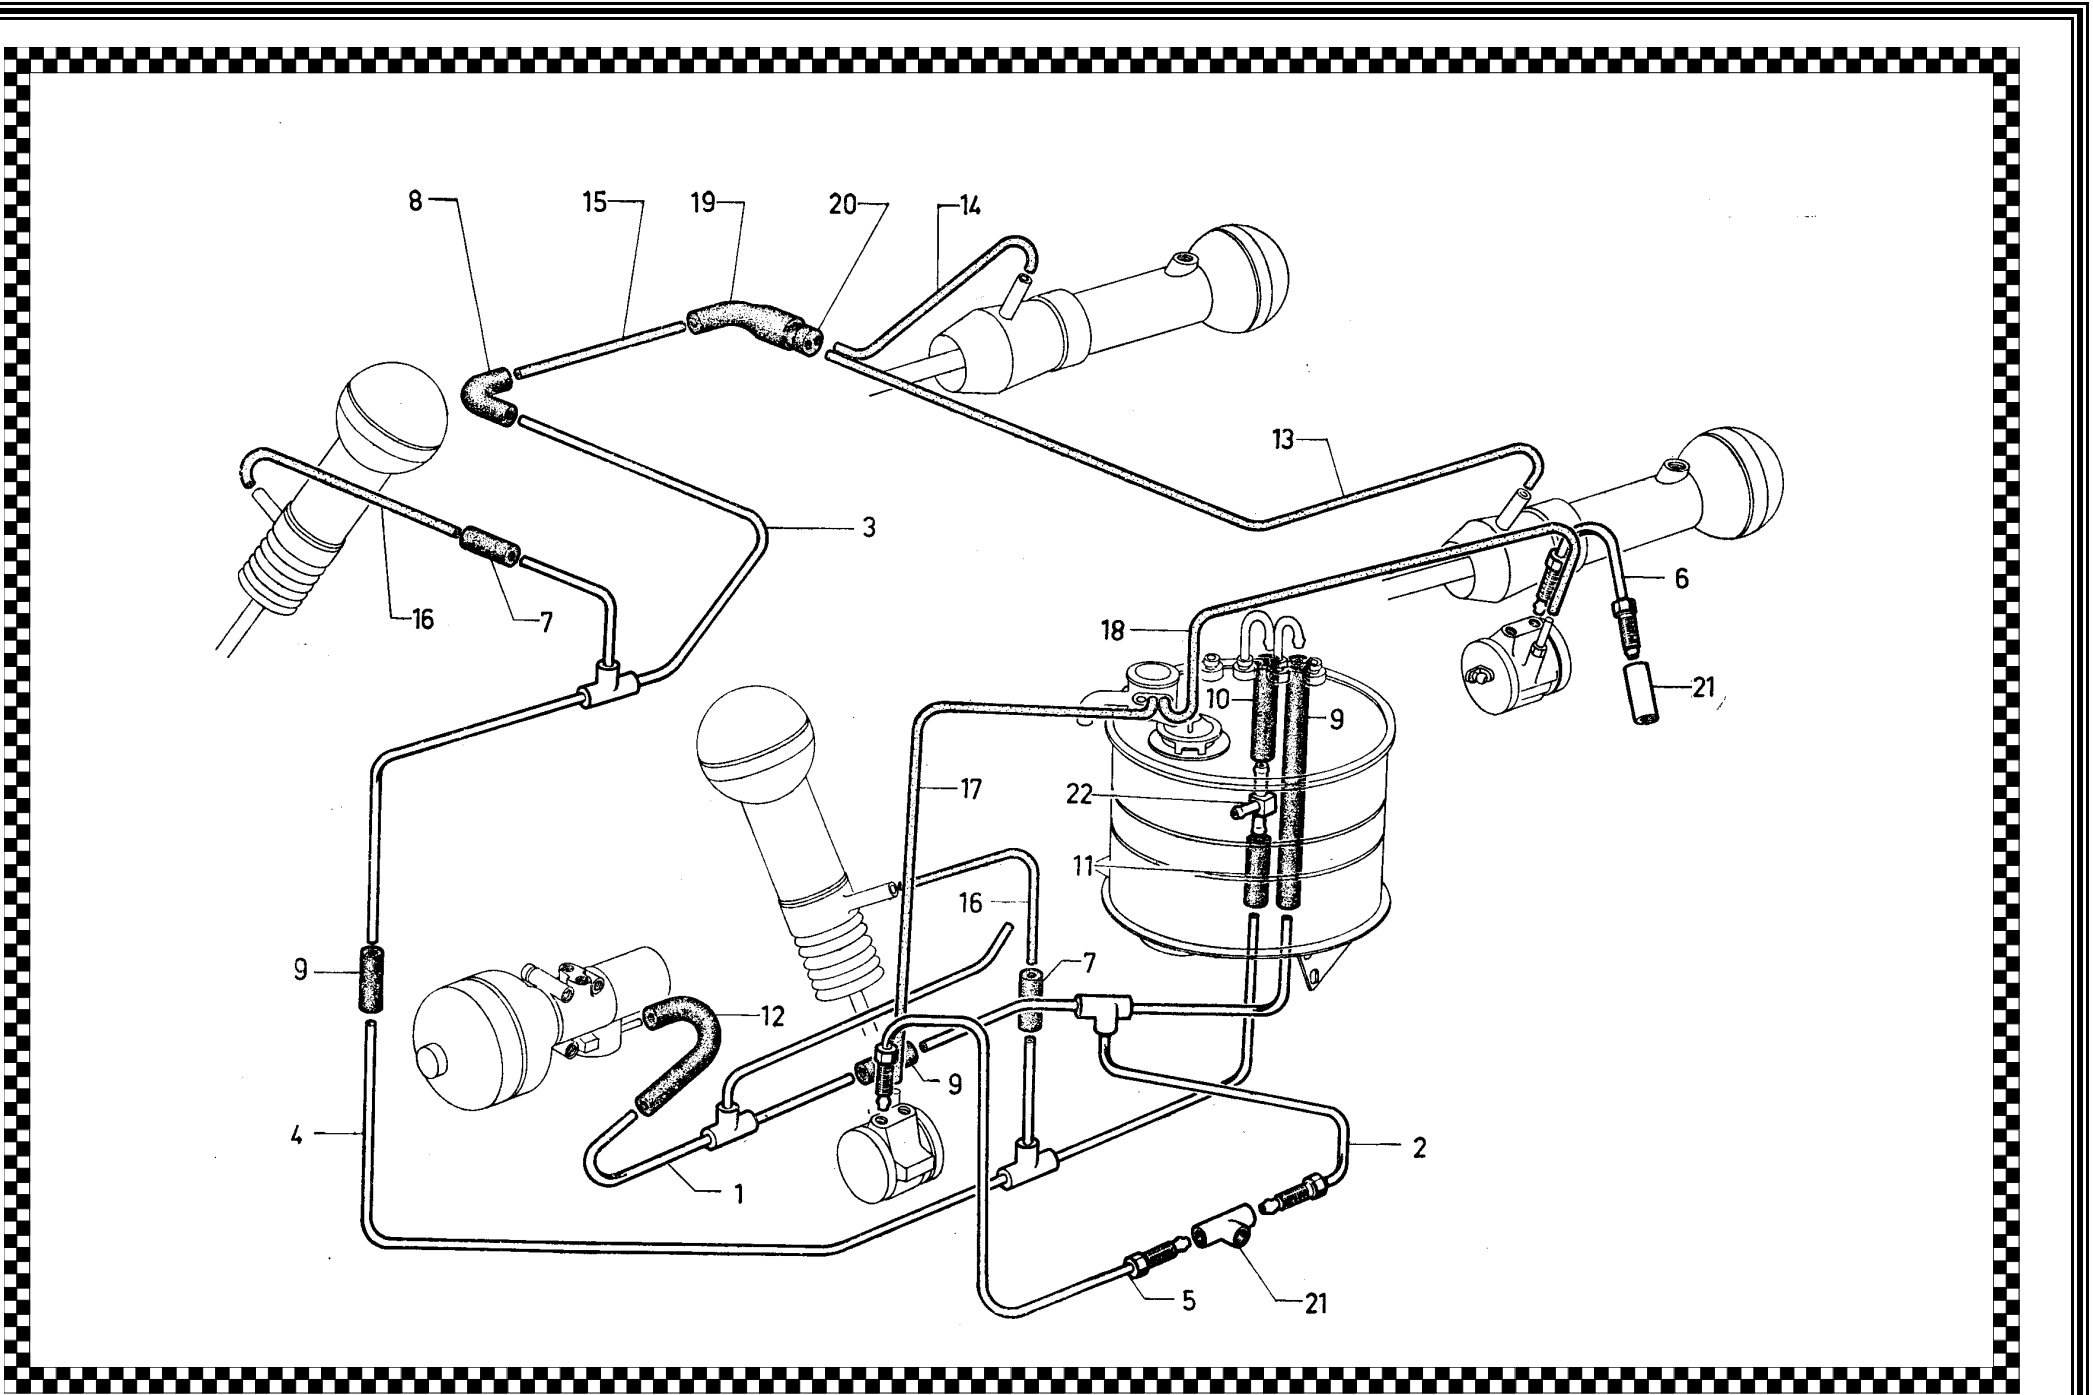


Group 3: Suspension Return Piping

Part ID	Description						
1	Rubber tube	11	Betw. Sheath a. unions	21		31	
2	Rubber tube	12	f. distributor	22		32	
3	Rubber tube	13	Union trimming	23		33	
4	Tube	14	Union 3 ways	24		34	
5	Tube	15	Rubber sleeve	25		35	
6	Union rubber	16	Rubber pipe	26		36	
7	Tube	17		27		37	
8	Tube	18		28		38	
9	Tube	19		29		39	
10	Betw. 3-way union	20		30		40	

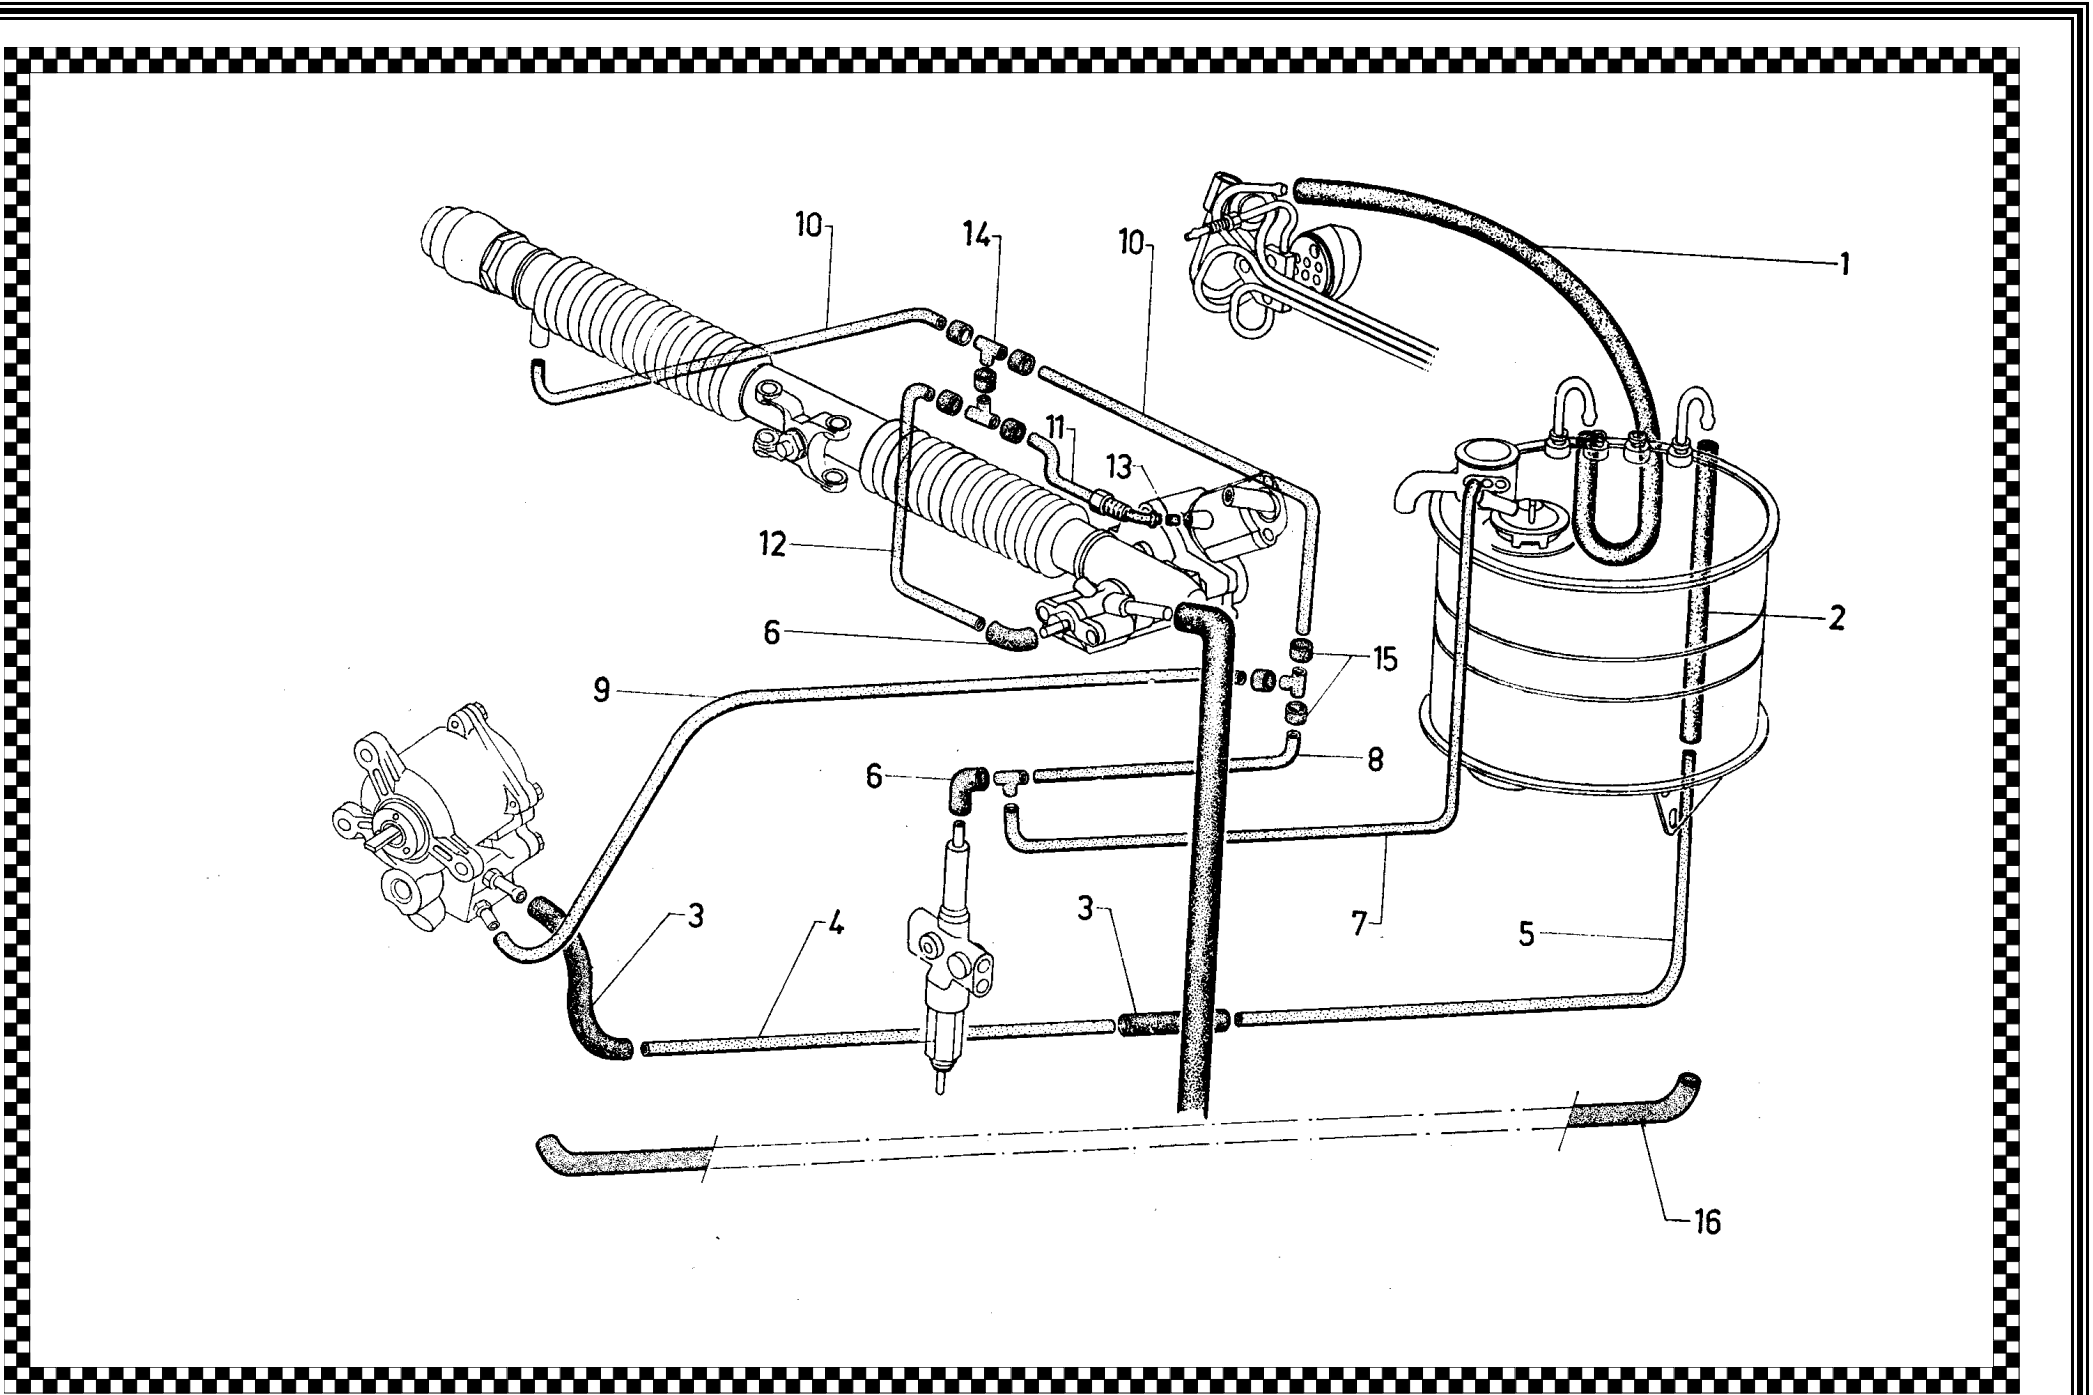


Group 3: Steering and Brake Return Piping

Part ID	Description					
1	Rubber trimming for piping union	11	Flexible lug for rear brake on body	21	Sealing plug (4 passages)	31
2	Flexible bush	12	Nut for rear flexible	22		32
3	Eyelet	13	Square on side member	23		33
4	Rubber collar	14	Rubber plug	24		34
5	Split bush	15	Shouldered screw for pipe	25		35
6	Protective panel	16	Sleeve for pedalgear	26		36
7	Shield for piping	17	Lug (air conditioner option)	27		37
8	Rubber trimming f. shield	18	Lug	28		38
9	Rubber trimming f. shield	19	Cone	29		39
10	Flexible lug for rear brake	20	Ring	30		40

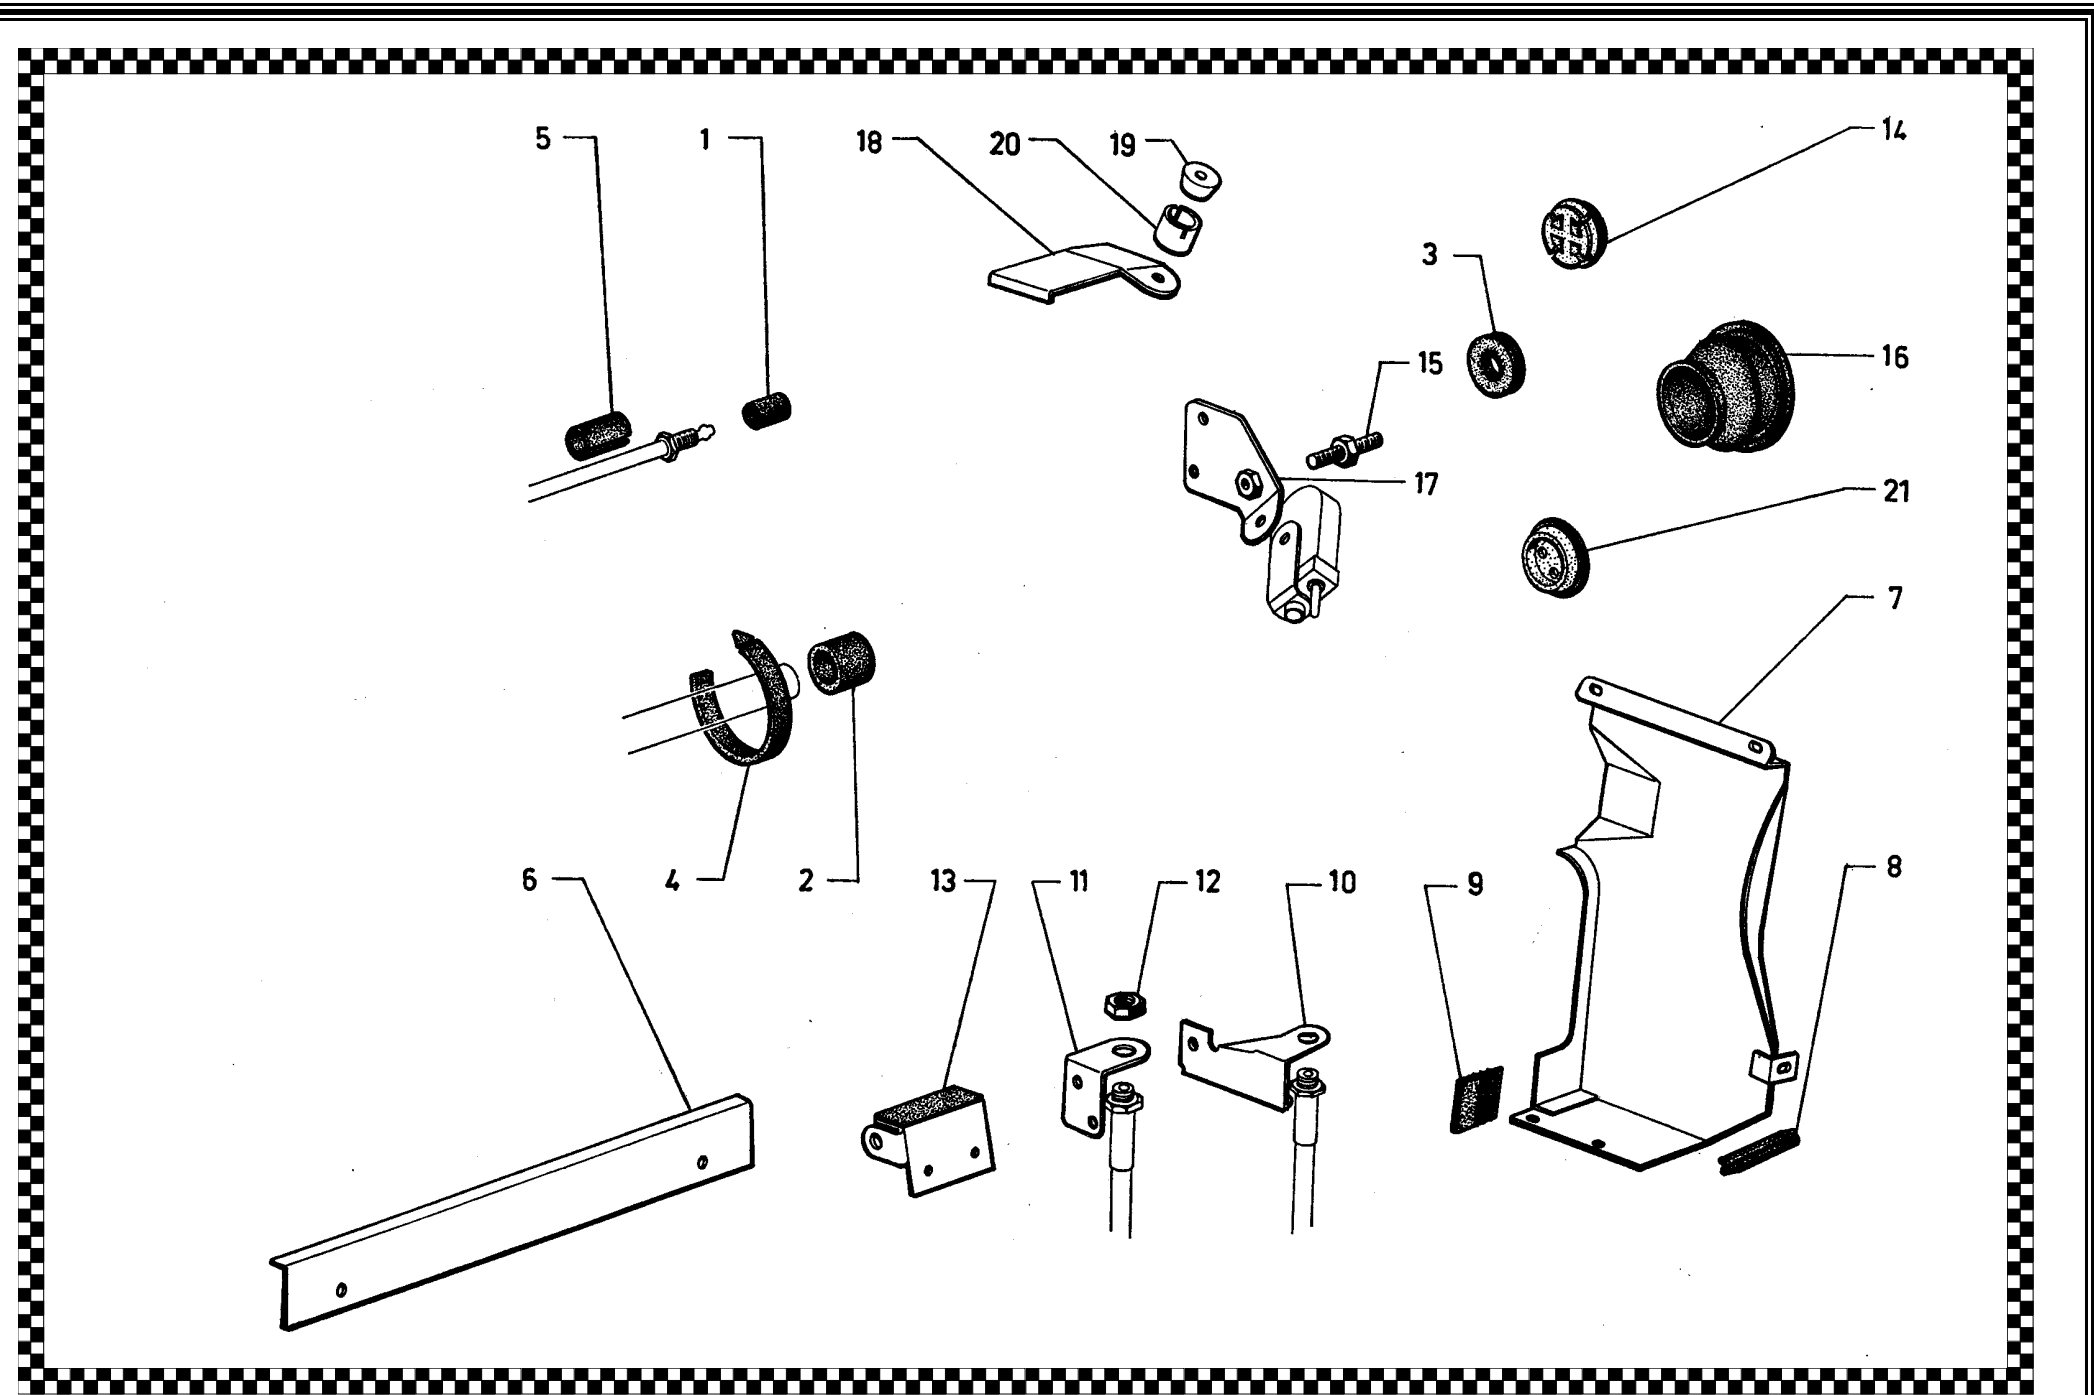

Part ID	Description						
1	Complete half axle	11	Cup	21	Roller bearing	31	
2	Lower arm	12	Sealing bush	22	Cage with 14 balls	32	
3	Arm support	13	Distance piece	23	Conical cup	33	
4	Upper arm	14	Rubber bush	24	Roller bearing	34	
5	Suspension lever	15	Clip	25	Screw	35	
6	Lower nut	16	Washer	26		36	
7	Upper nut (46 on flats)	17	Adjusting washer	27		37	
8	Cap (sheet metal)	18	Lubricator (elbowed)	28		38	
9	Screw	19	Lower nut	29		39	
10	Distance piece	20	Sealing bush	30		40	

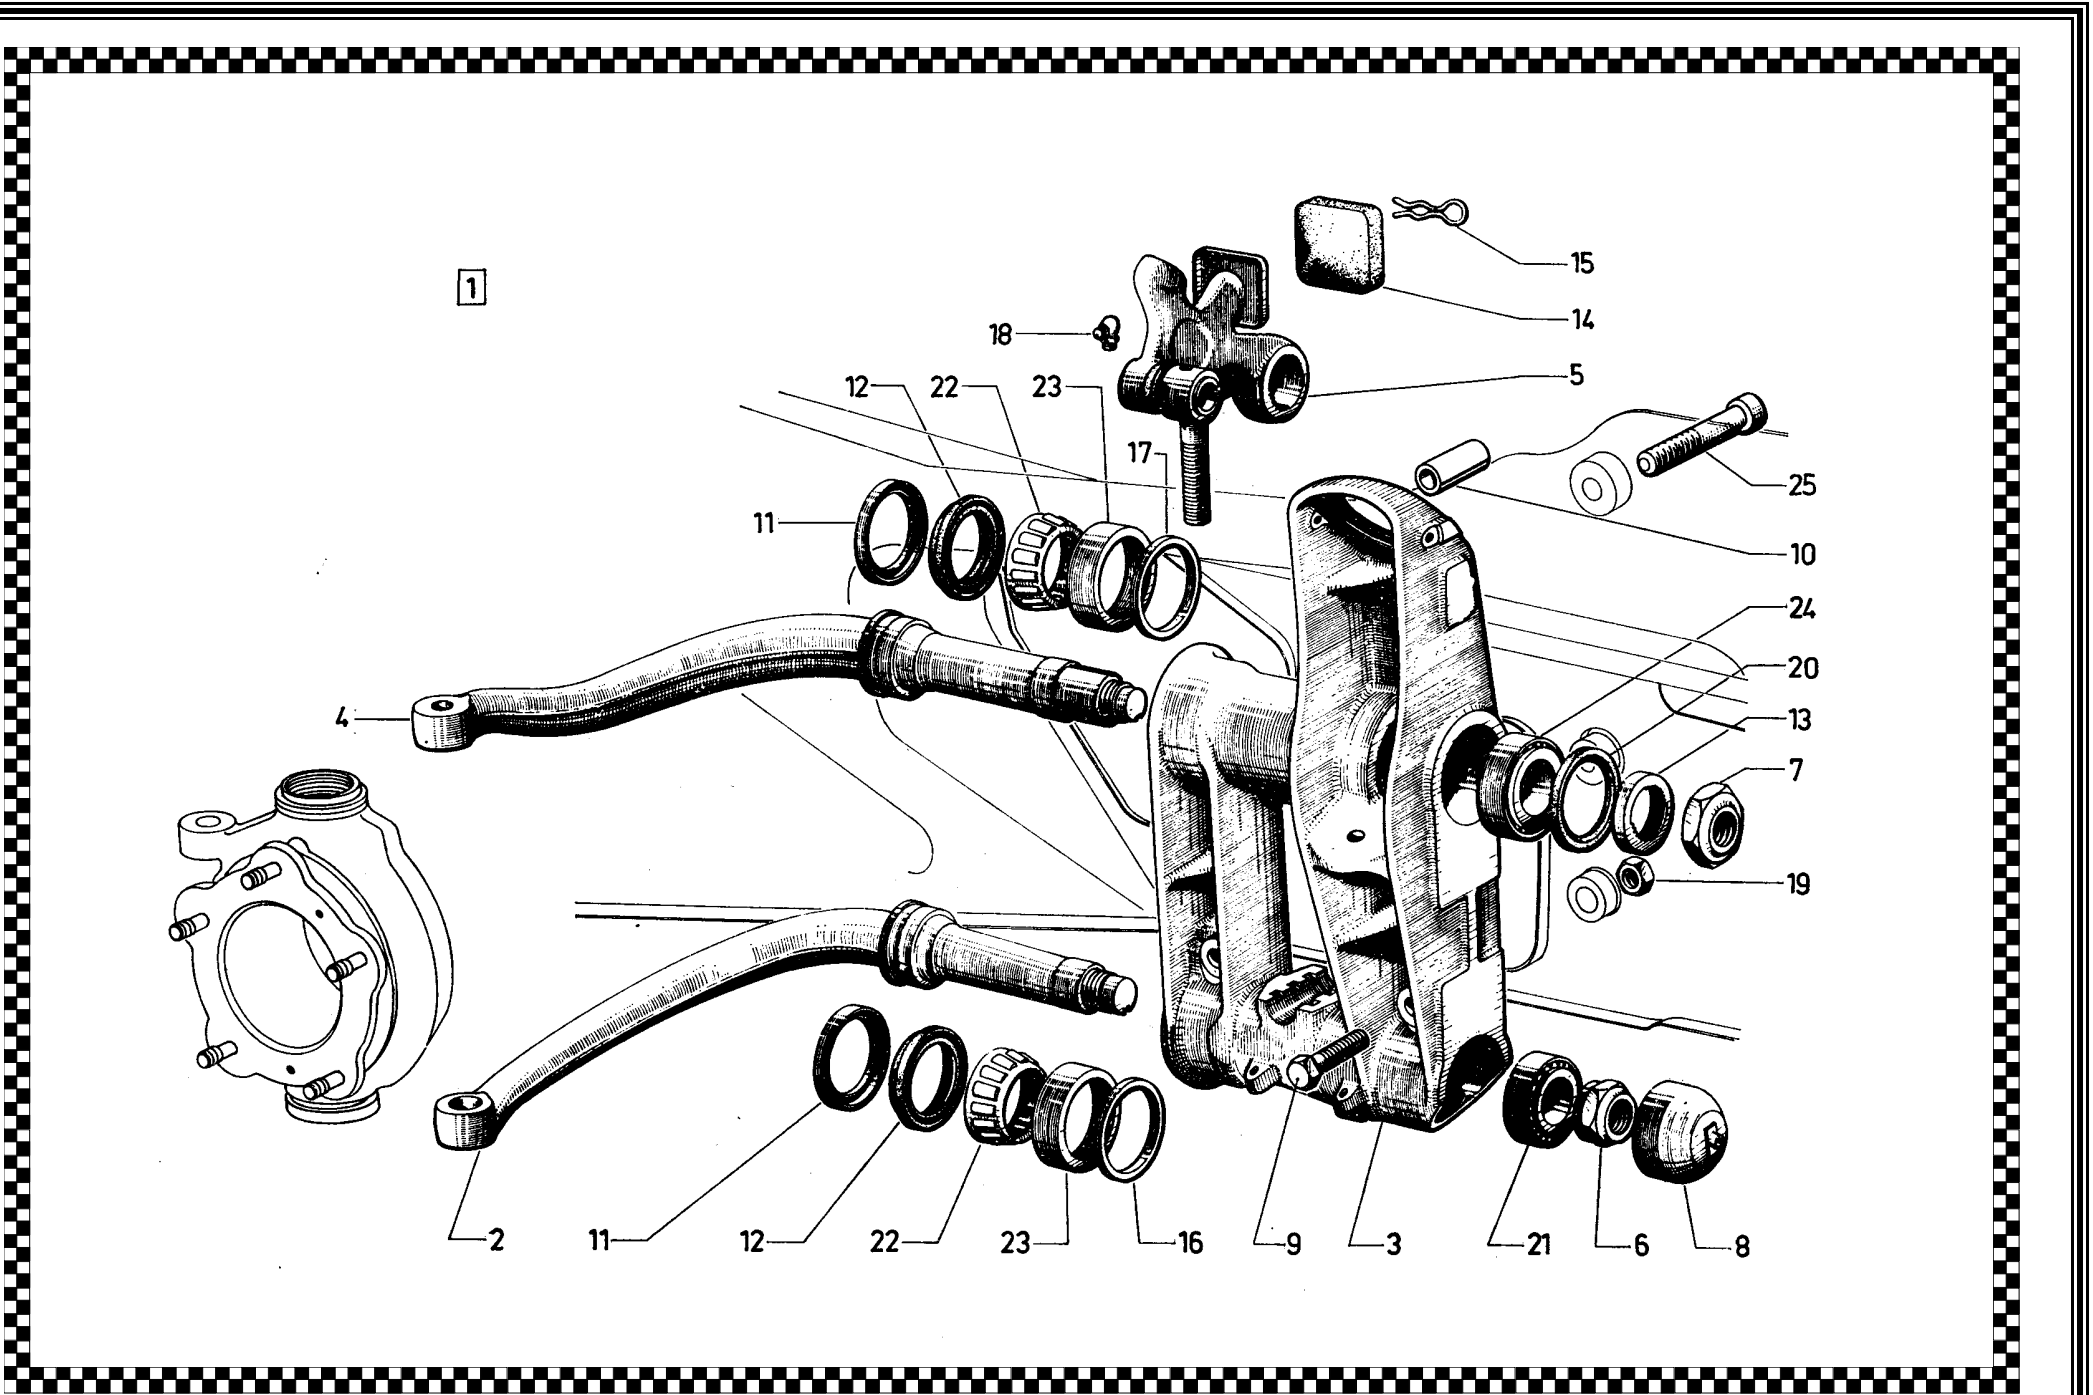


Group 3: Front half axle – Arms


Part ID	Description						
1	Complete pivot	11	Rubber valve	21		31	
2	Wheel only	12	Balance weight	22		32	
3	Ball pin assy.	13	Weight spring	23		33	
4	Ball pin assy. (with adjust. size)	14	Lubricator	24		34	
5	Nut	15	Nut	25		35	
6	Shim	16	Pin	26		36	
7	Sheath collar	17	Flexible washer	27		37	
8	Sheath	18		28		38	
9	Adjusting washer	19		29		39	
10	Wheel nut	20		30		40	



Group 3: Front axle Pivots – Wheels

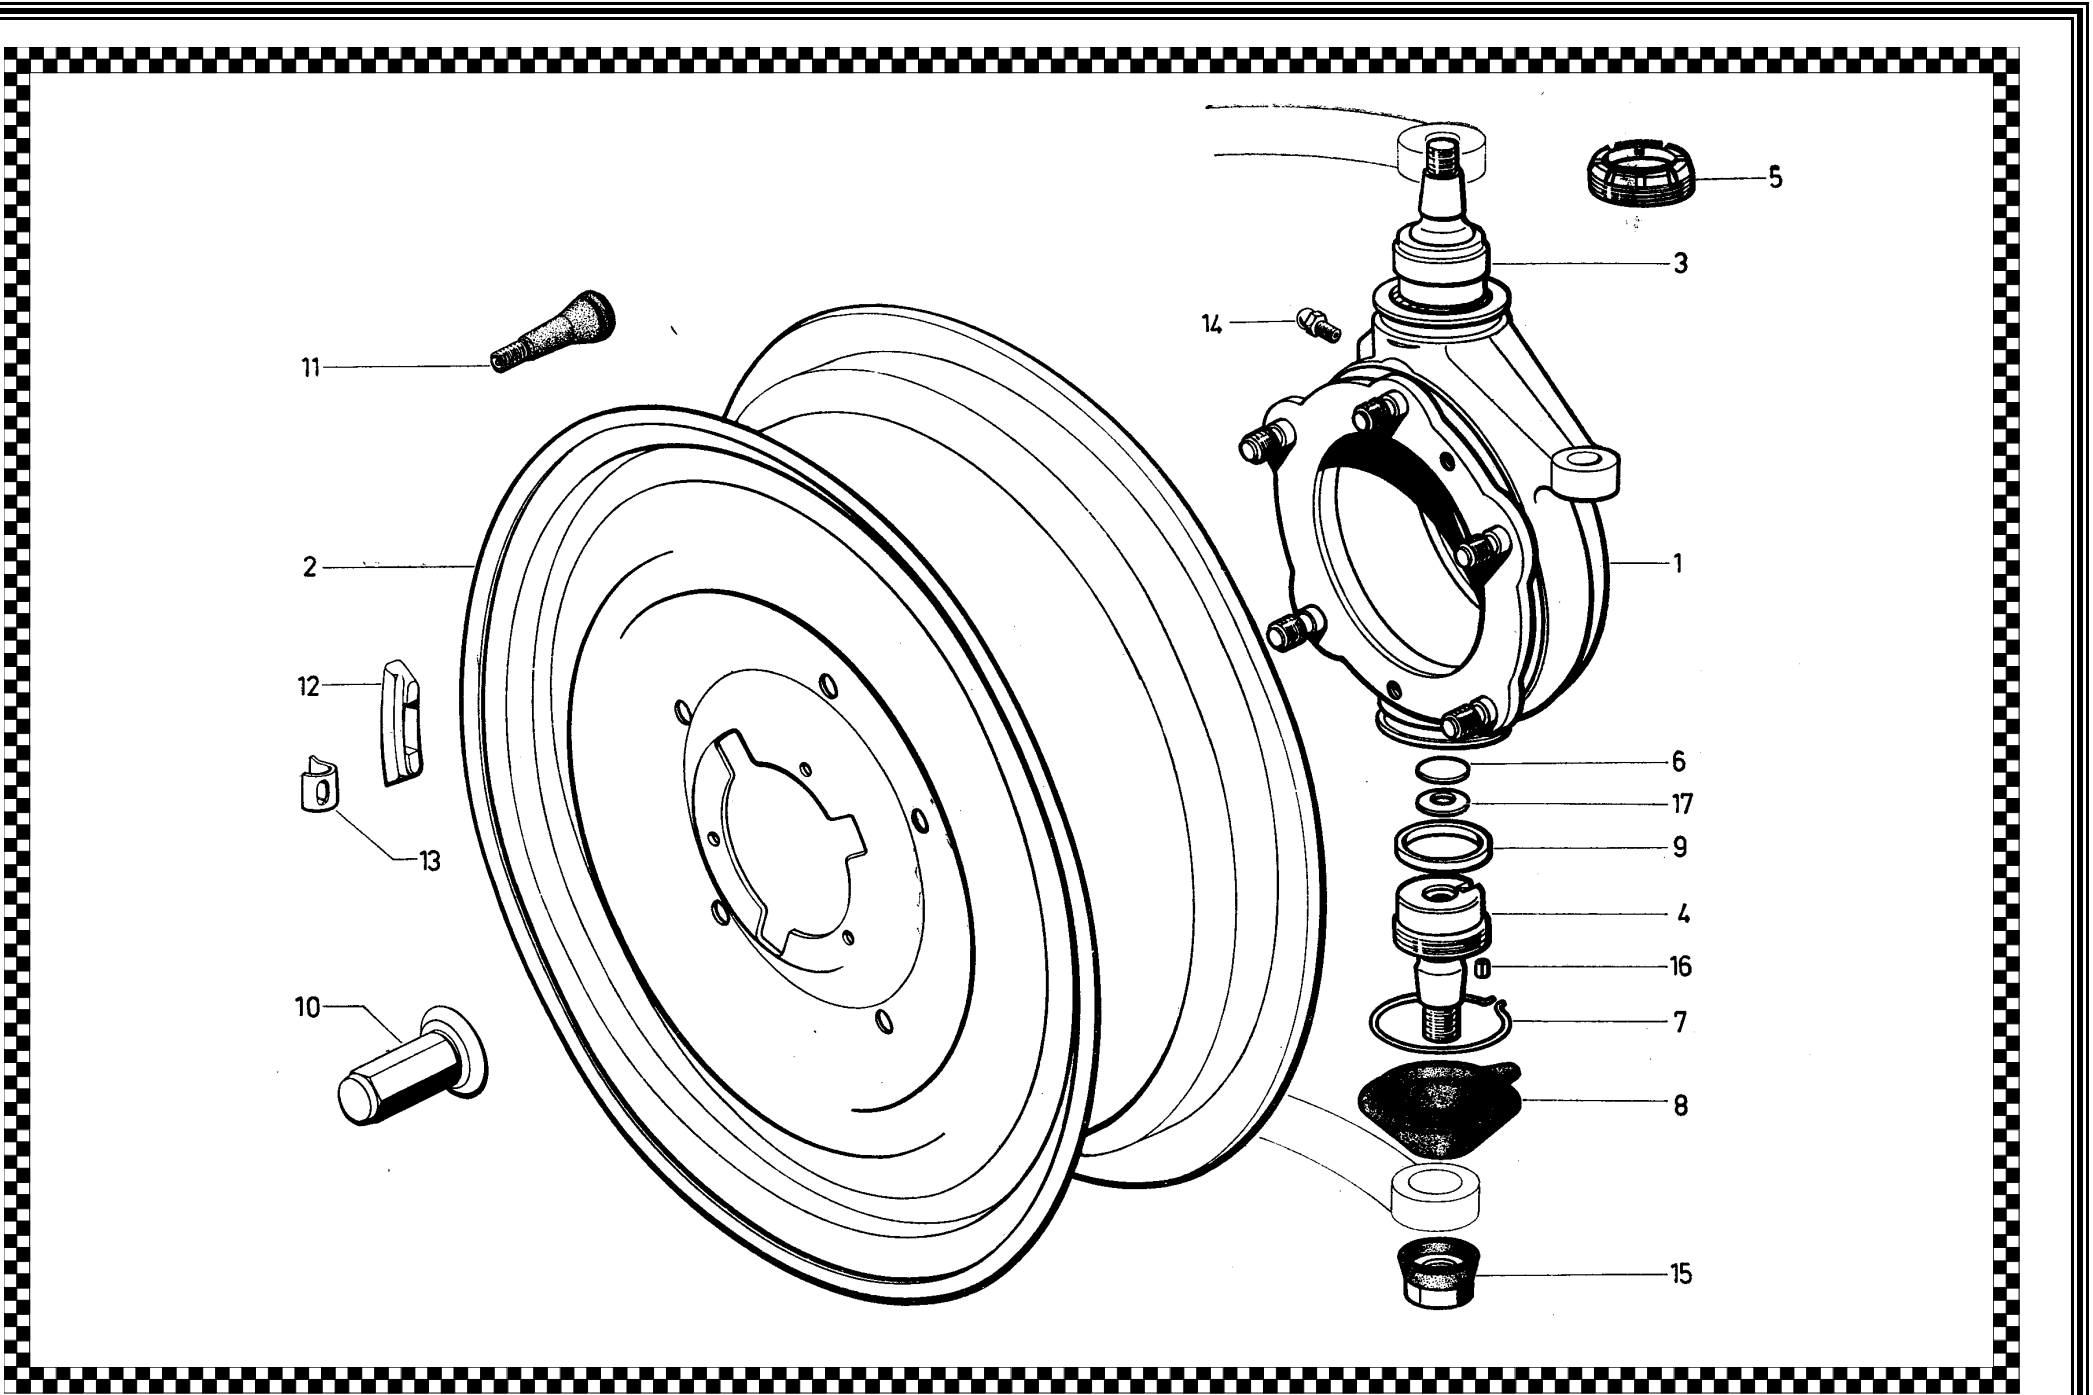


Part ID	Description						
1	Arc complete	11	Sealing hub	21	Rubber buffer	31	
2	Arm only	12	Bearing (body 0 66)	22	Protective disk	32	
3	Stub axle with studs	13	Cup	23	Screw	33	
4	Disc for brake	14	Stud	24	Sealing bush	34	
5	Nut with cup	15	Wheel nut	25	Cage with 14 rollers	35	
6	Nut with grooves	16	Distance piece	26	Cage with rollers	36	
7	Nut with collar	17	Bush	27	Roller bearing	37	
8	Screw	18	Washer (50 on flats)	28	Roller bearing	38	
9	Cup	19	Lock washer	29	Nut for stub axle	39	
10	Rubber ring	20	Adjusting washer	30		40	

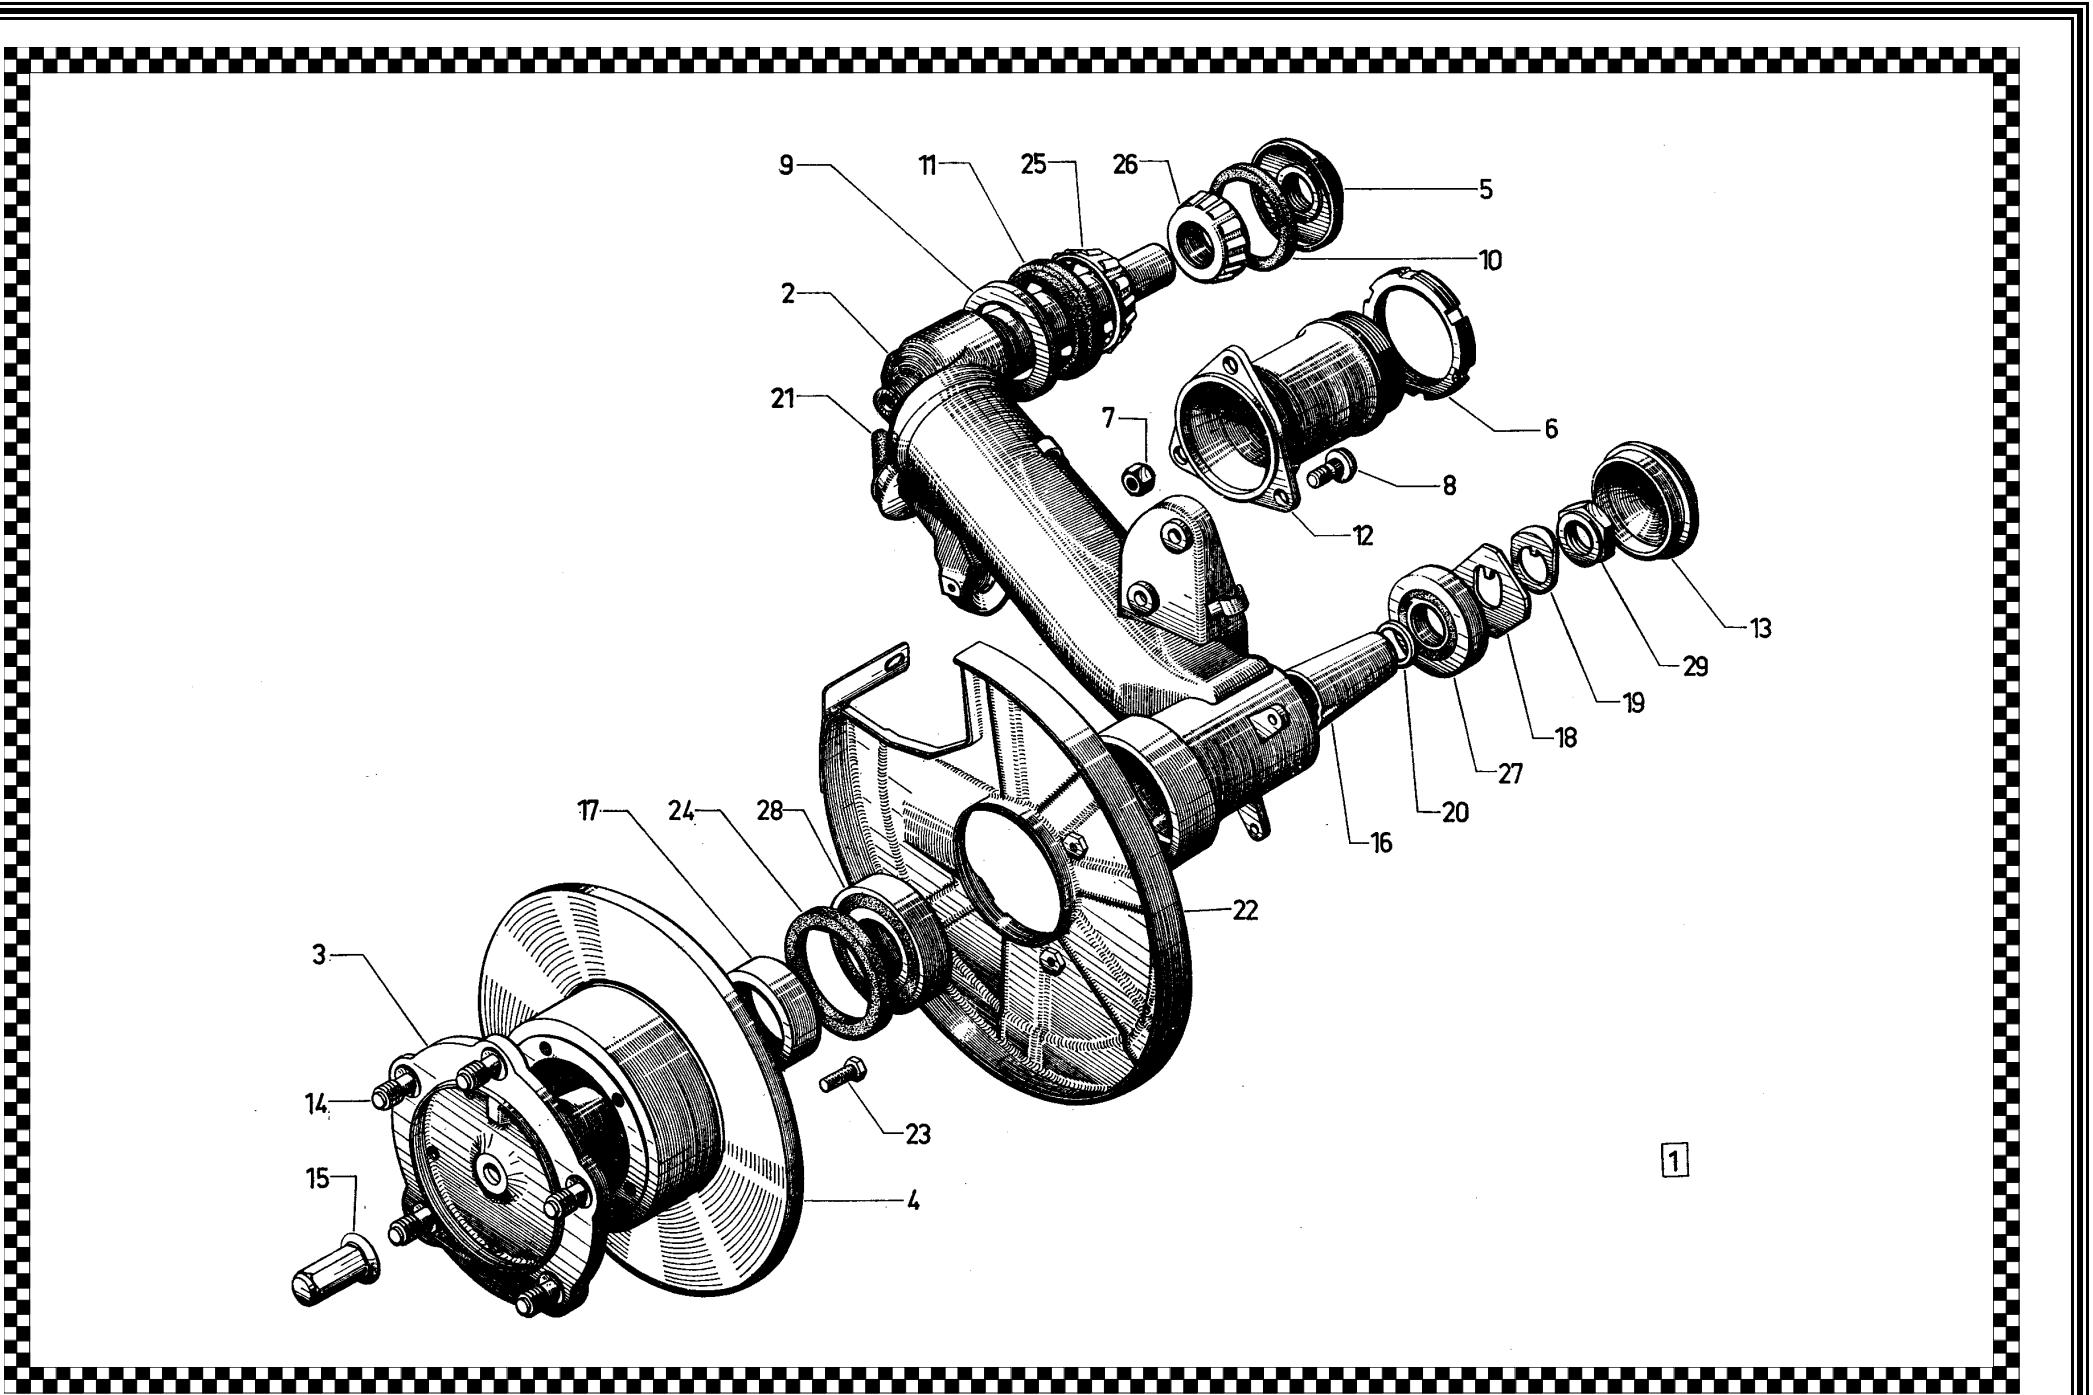


Part ID	Description						
1	Sphere with damper marked 40 on screw	11	Joint (white)	21		31	
2	Cylinder, complete	12	Sealing ring	22		32	
3	Rod with ball and seat	13	Sealing ring	23		33	
4	Rubber bush	14	Collar	24		34	
5	Rubber ring	15	Collar	25		35	
6	Dust cover	16	Nut	26		36	
7	Felt washer	17	Screw	27		37	
8	Nut, 1 inner groove	18	Dust cover	28		38	
9	Thrust washer	19	For sealing	29		39	
10	Joint teflon	20		30		40	



Group 3: Front Suspension Cylinders

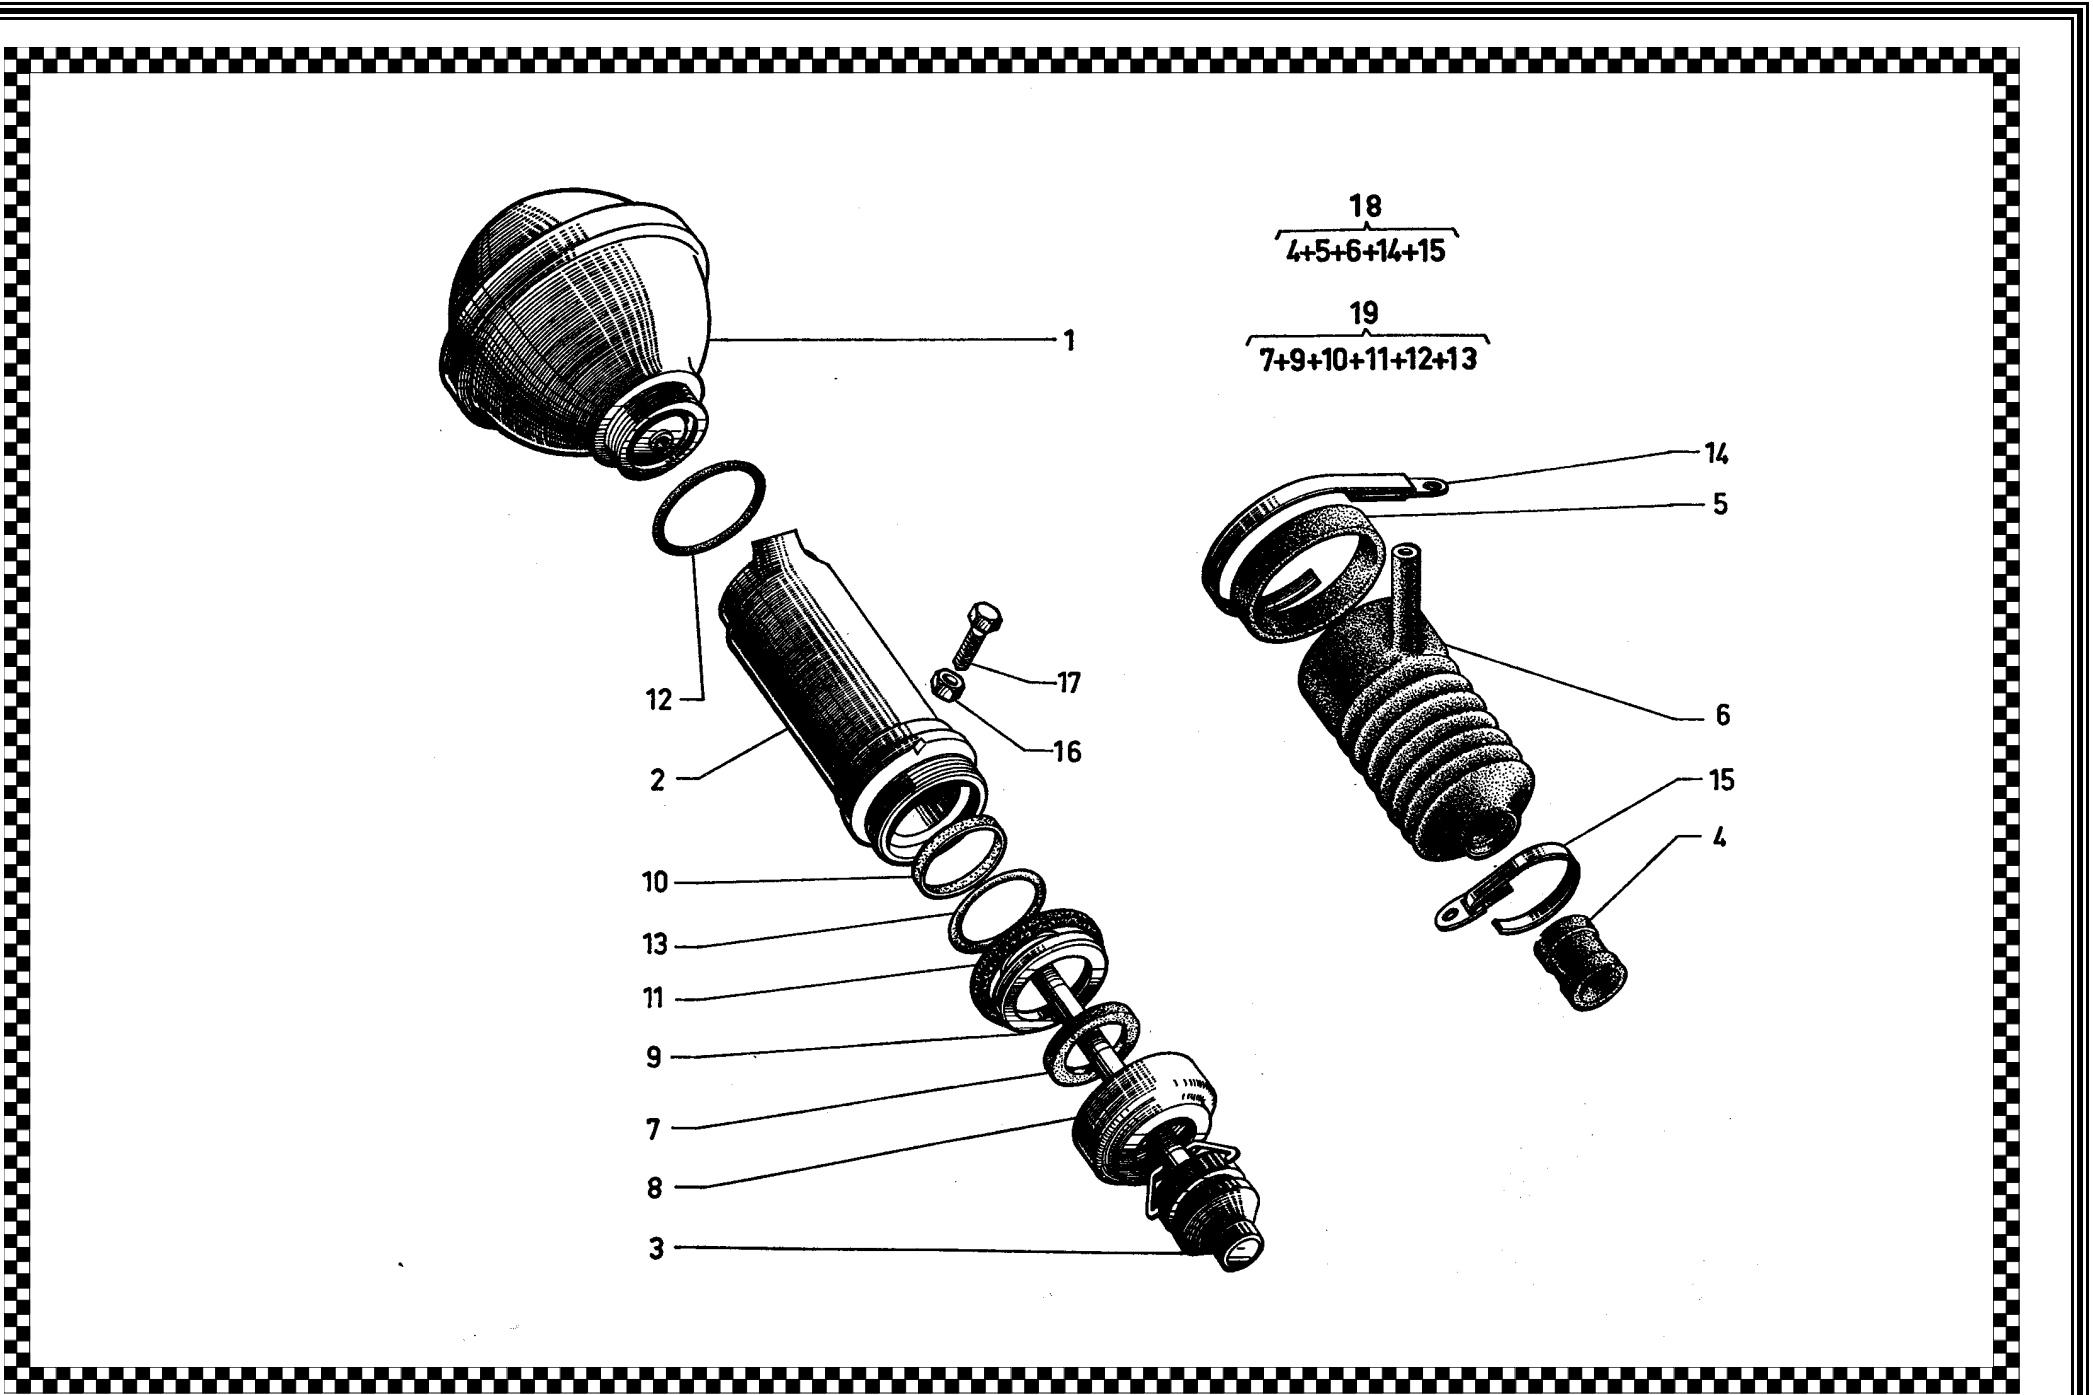


Part ID	Description						
1	Sphere with damper, marked 26 on screw	11	Cylinder nut	21	Seat with groove	31	
2	Cylinder complete	12	Thrust washer	22	Dust cover	32	
3	Piston rod	13	Joint, Teflon	23	Rod	33	
4	Rubber bush	14	Joint (white marking)	24	For sealing	34	
5	Rubber ring	15	Screw	25		35	
6	Plate	16	Ball	26		36	
7	Dust cover, rubber	17	Sealing ring (white marking)	27		37	
8	Felt washer	18	Sealing ring	28		38	
9	Pin	19	Collar	29		39	
10	Dust cover	20	collar	30		40	

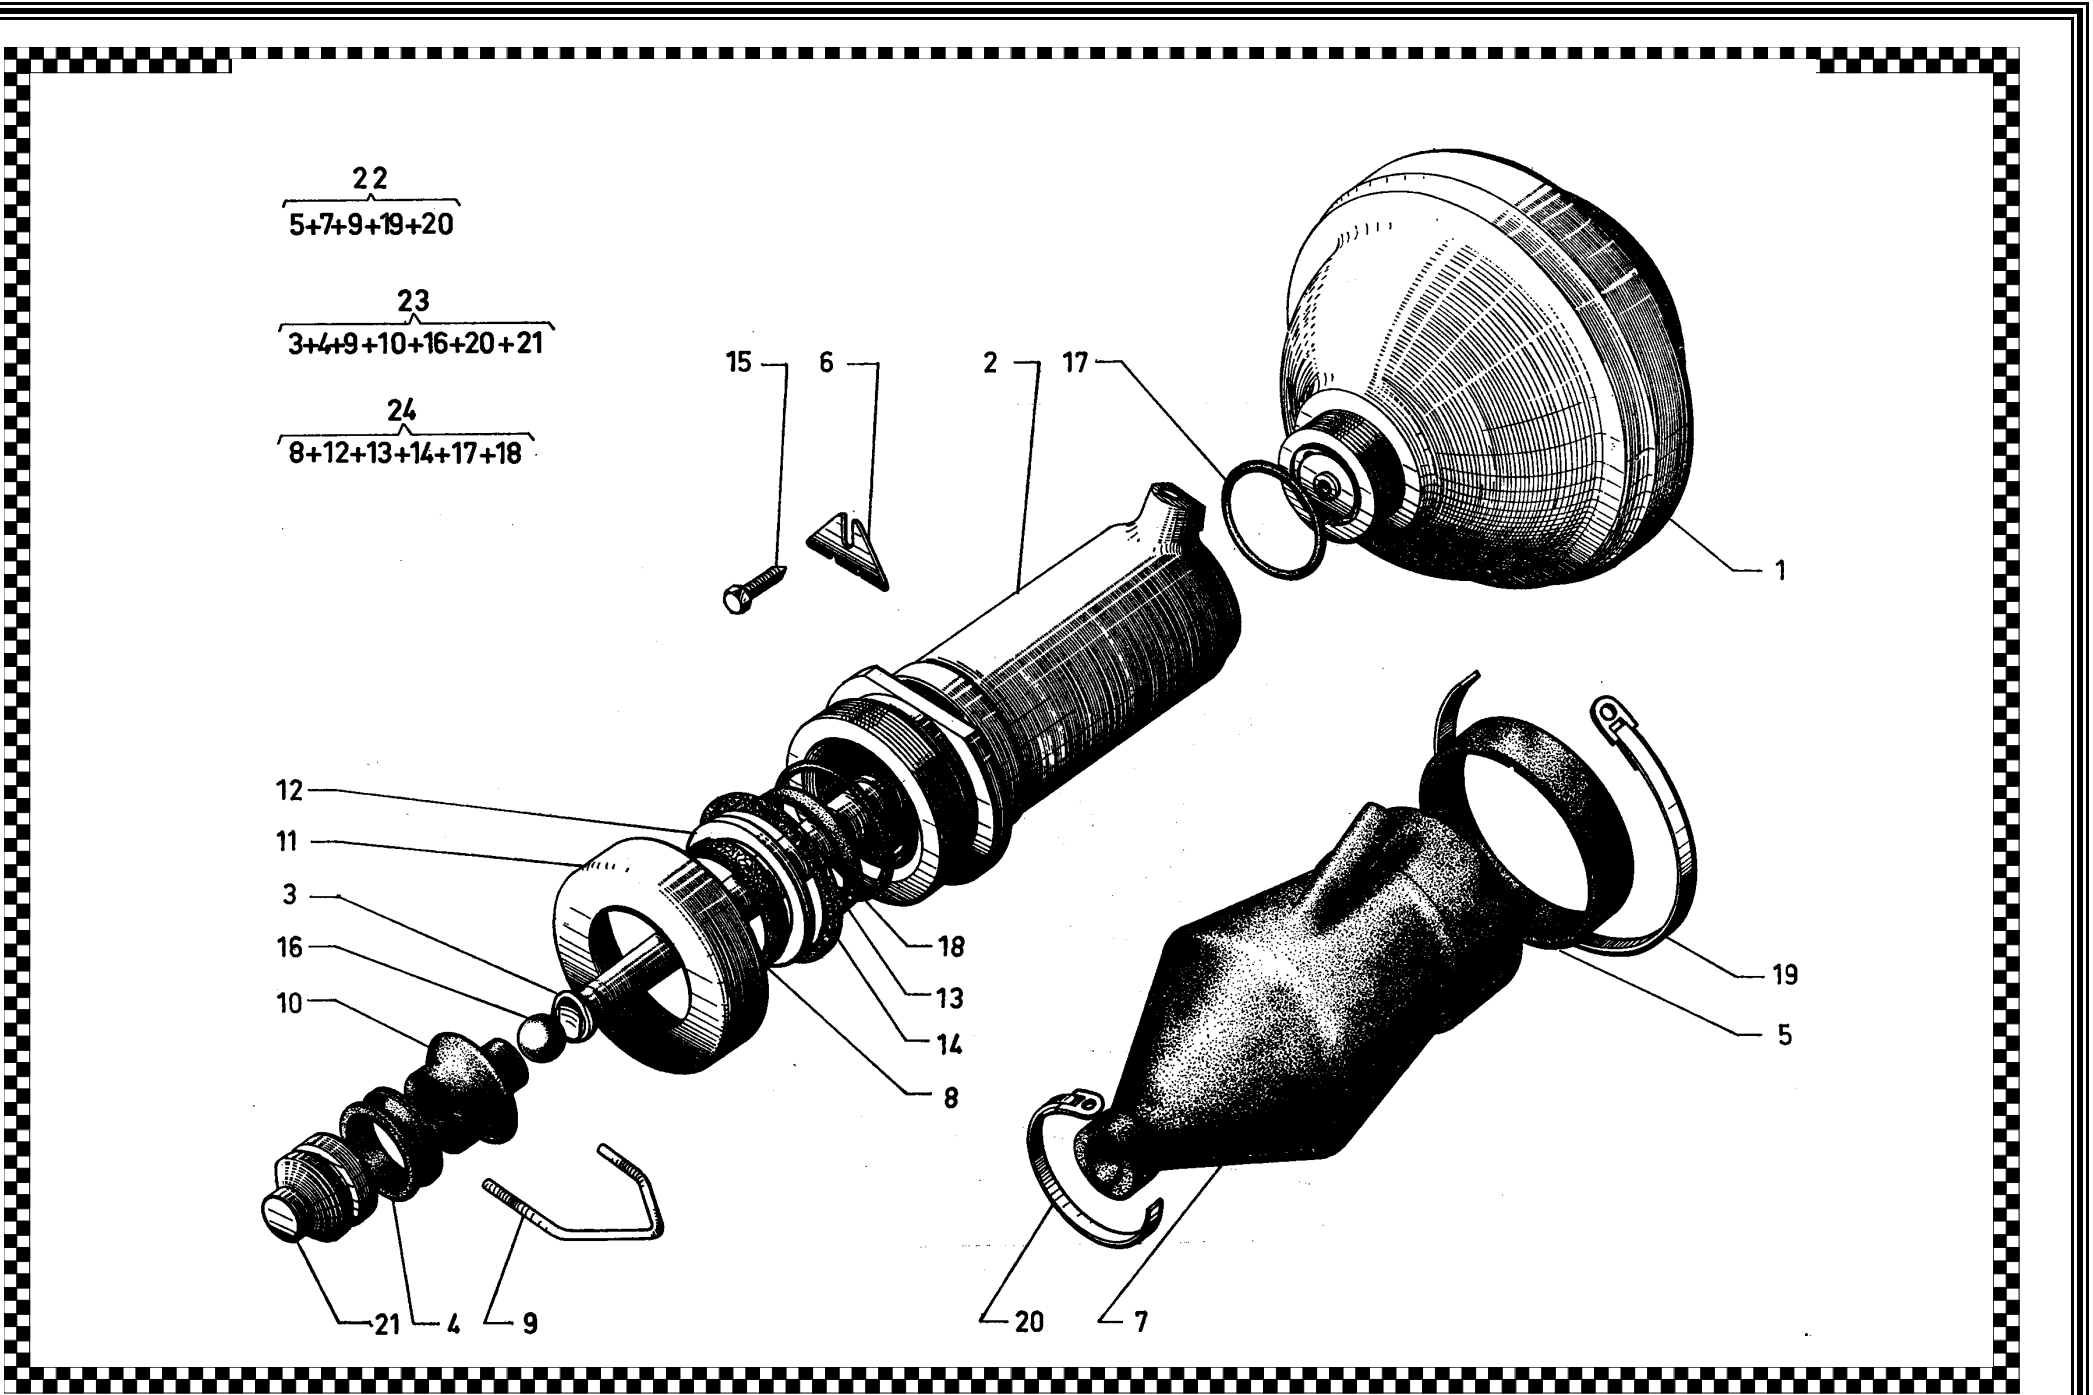


Part ID	Description						
1	Corrector complete	11	Sealing cup ring	21		31	
2	Control rod	12	Sealing cup- nut side	22		32	
3	Control rod	13	Sealing cup- yoke side	23		33	
4	Corrector bracket	14	Valve circlip	24		34	
5	Bushed	15	Screw for corrector	25		35	
6	Protector plate	16	Control rod	26		36	
7	Diaphragm	17	valve	27		37	
8	Valve spring	18		28		38	
9	Inner cup for diaphragm	19		29		39	
10	Cup	20		30		40	



Group 3: Height correctors and controls

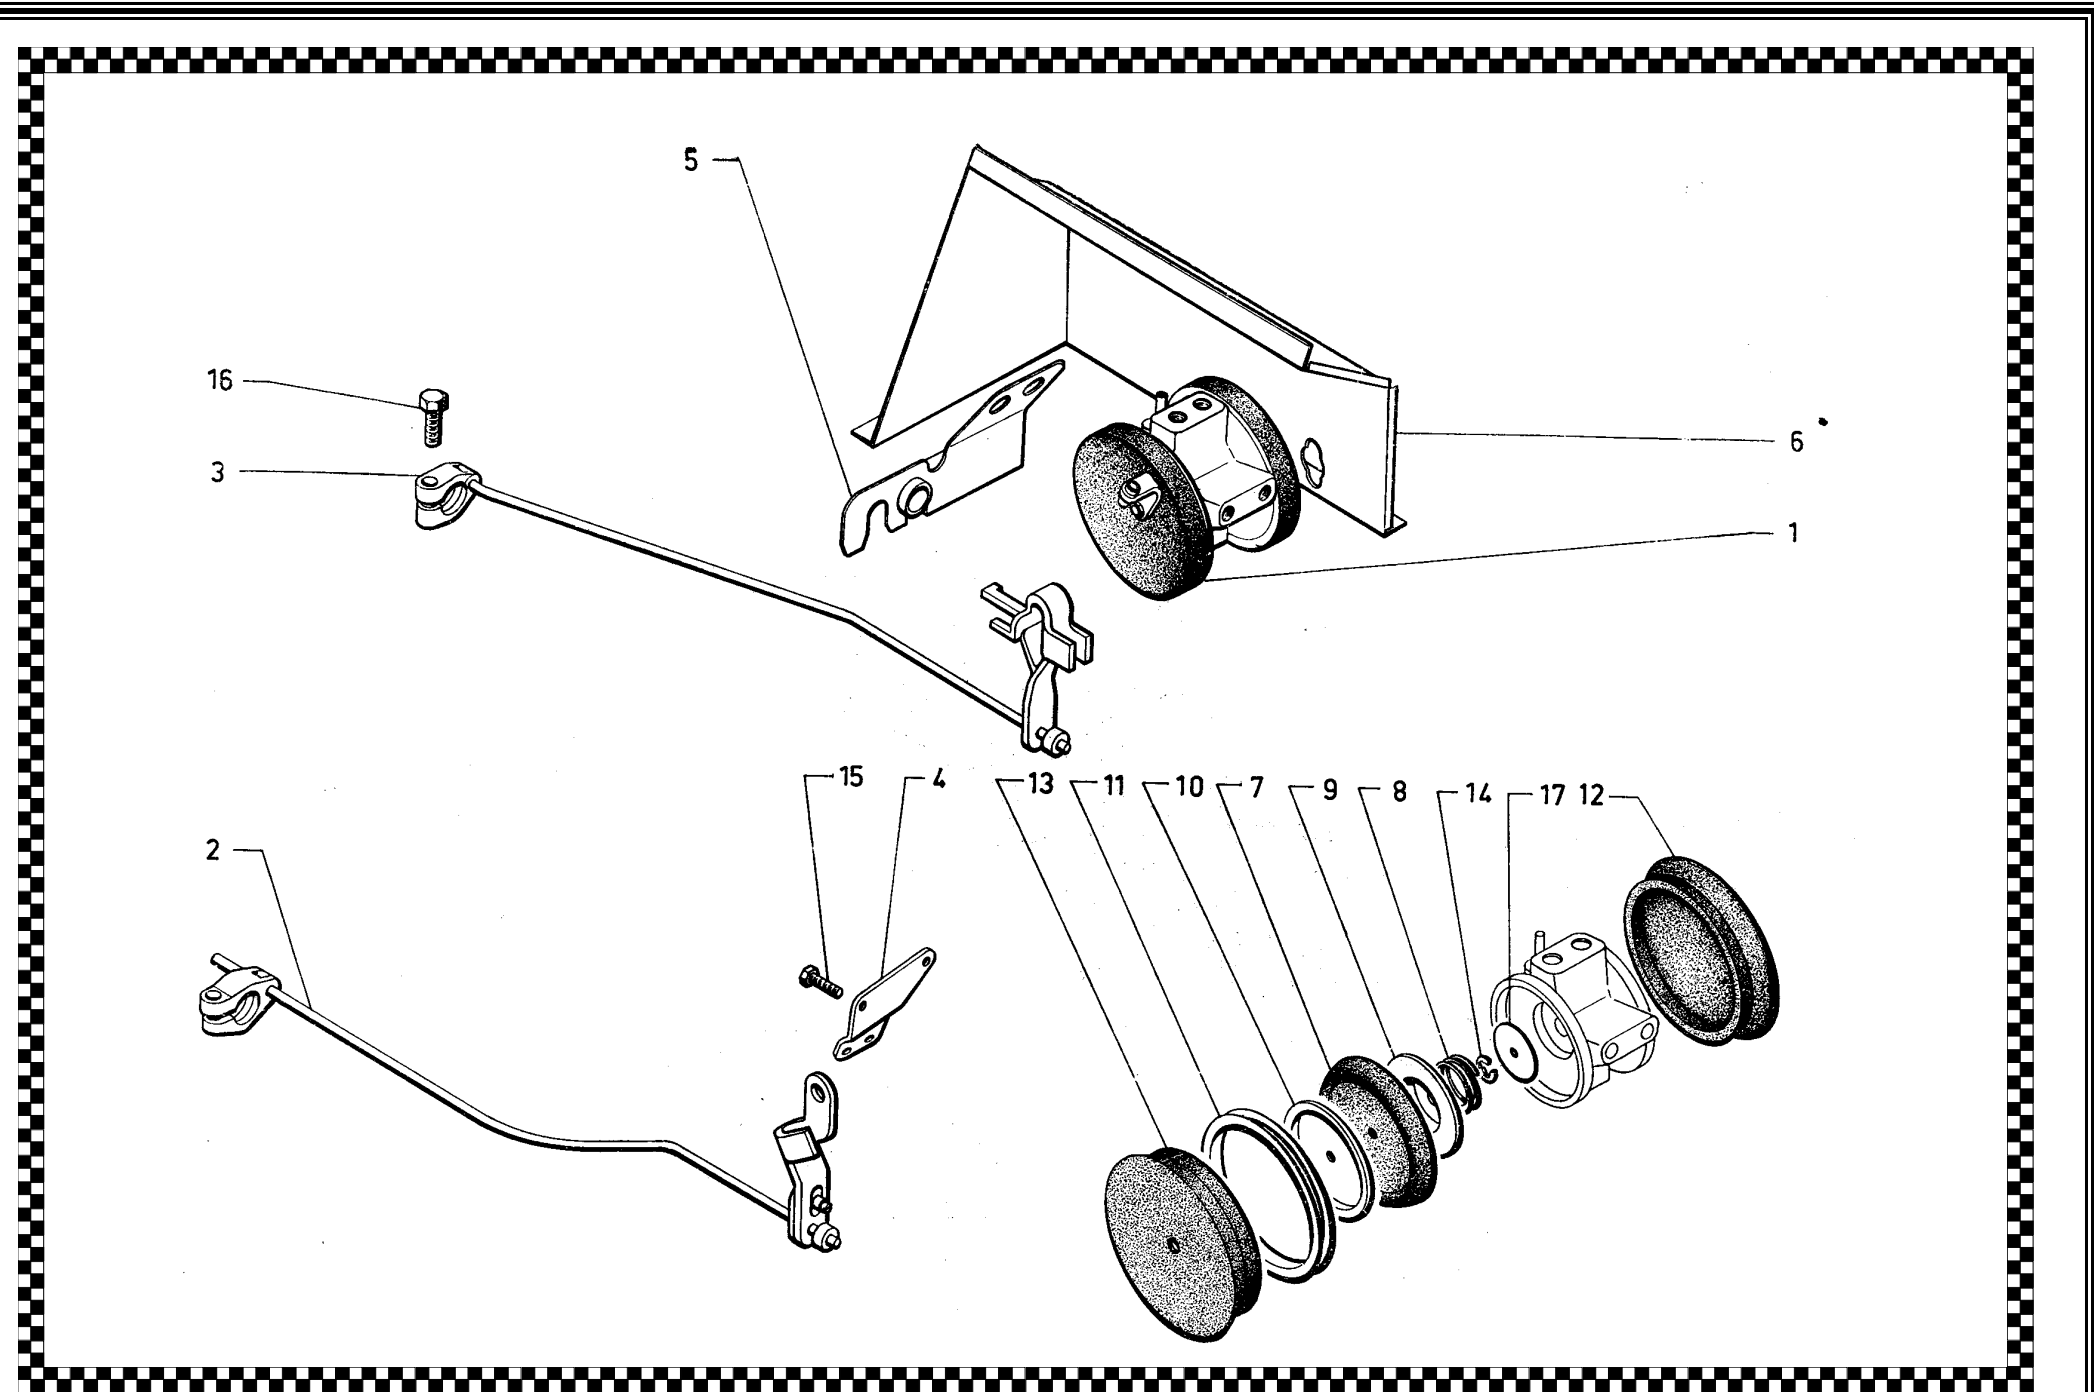

Part ID	Description						
Front Bar							
1	Complete bar	11	Sleeve clamp	20	Flange nut		
2	Ball pin spring	12	Sleeve screw	21	clip		
3	Clamp for bearing	13	Sleeve nut				
4	Collar for bush	14	Lubricator				
5	Half-bearing (marking 3mm)	15	Collar bush screw				
6	Bearing with cap and dowel		Rear Bar				
7	Cup for ball pin	16	Bar				
8	Nut for cup	17	Coupling flange				
9	Adjusting shim	18	Protector plate				
10	Bar sleeve	19	Flange screw				

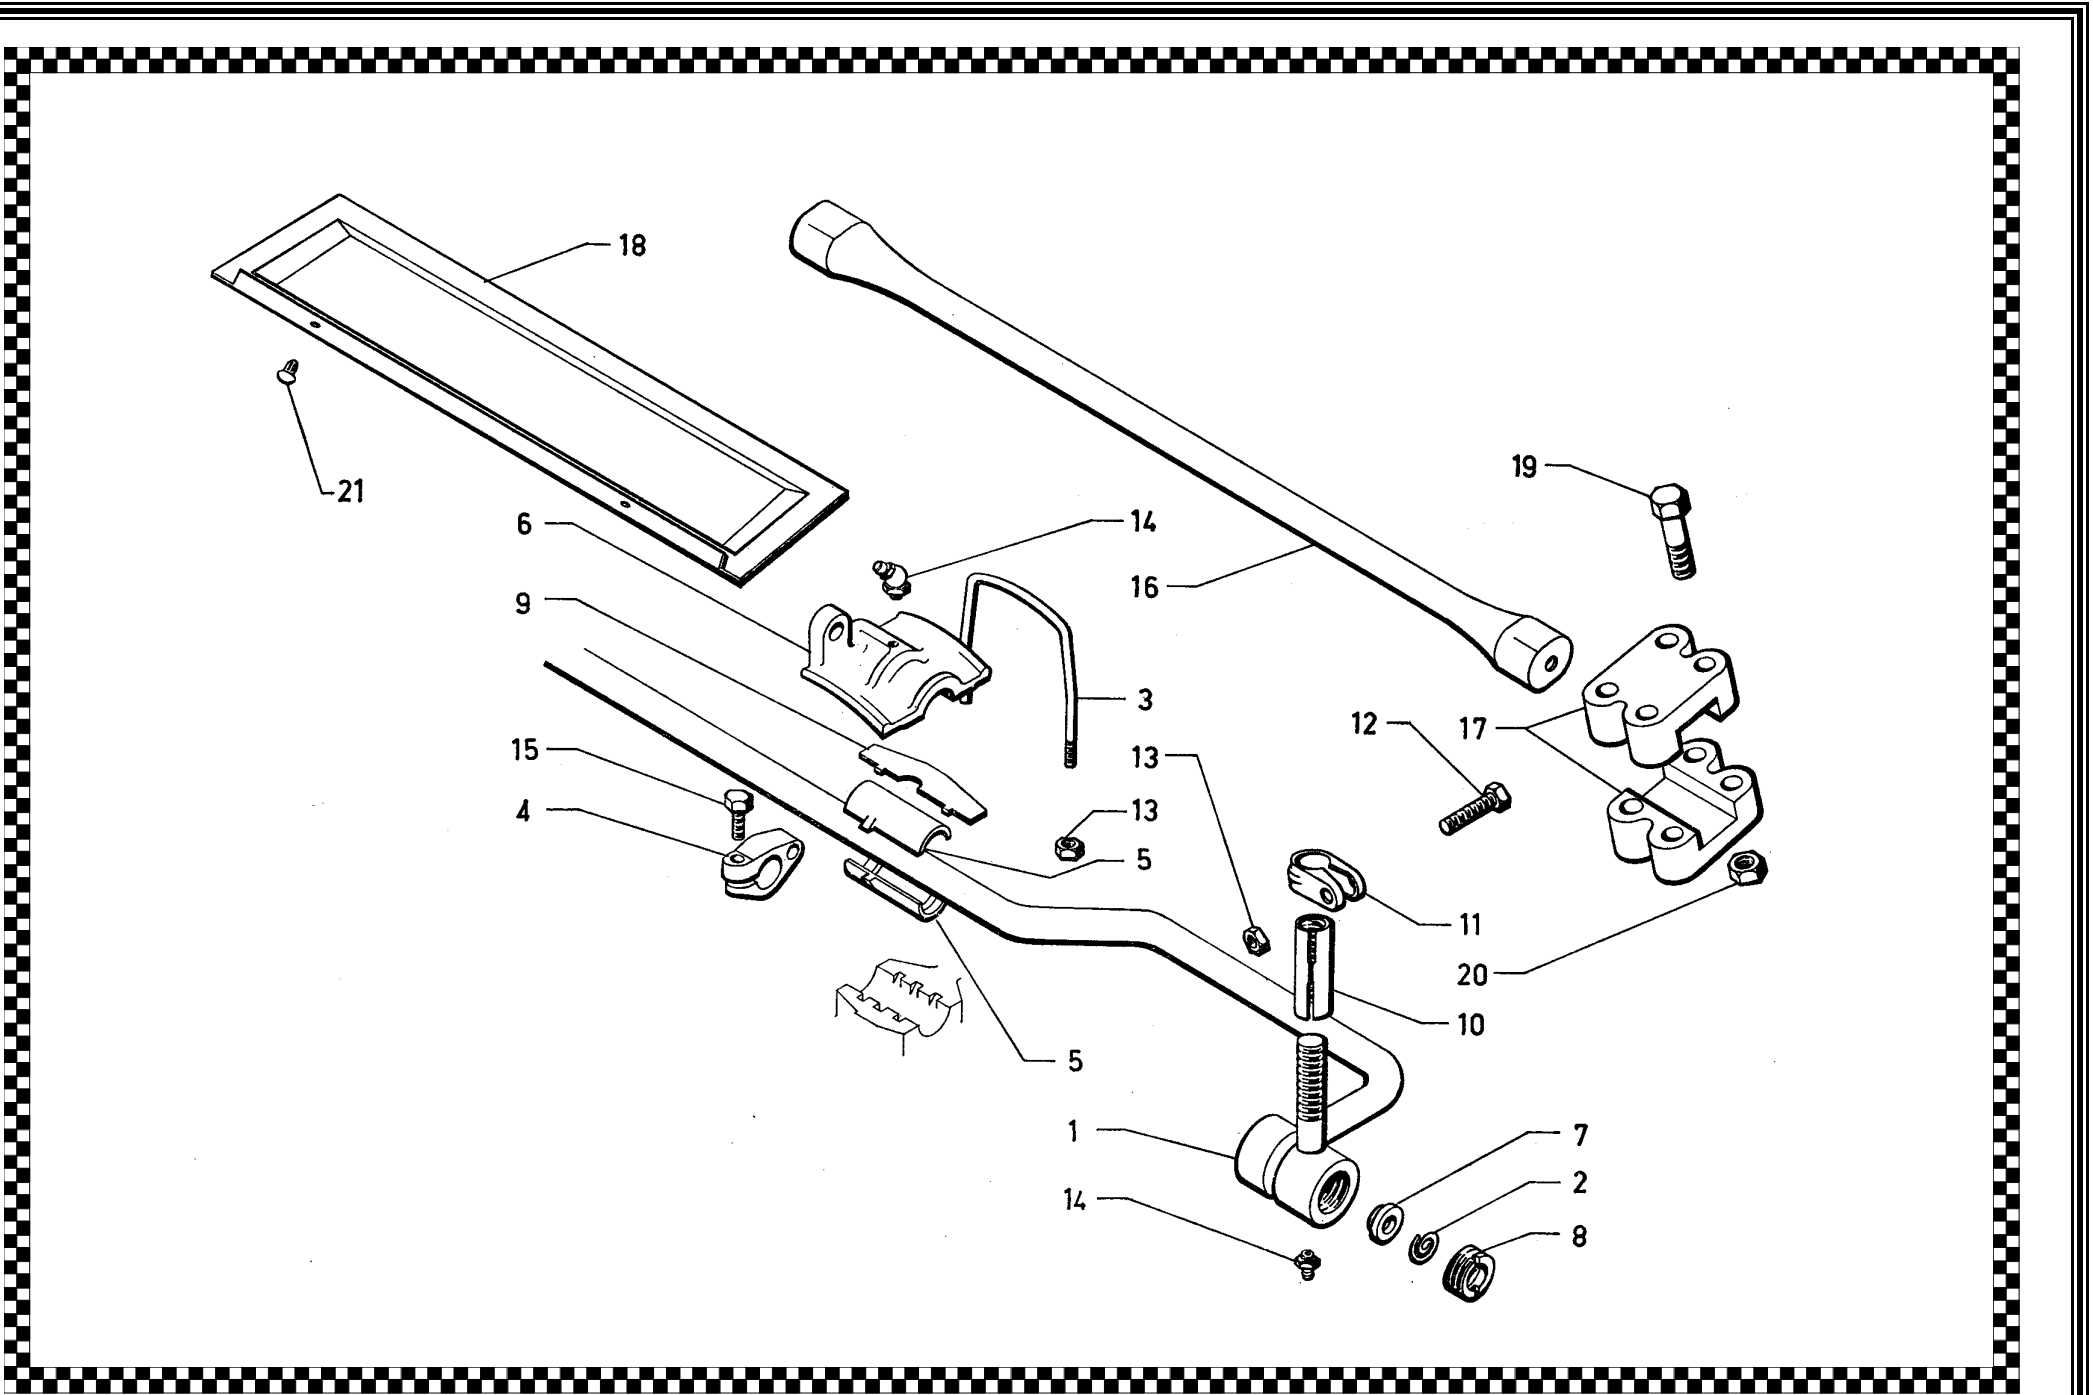


Group 3: Front and Rear Anti Roll Bars


Part ID	Description					
1	Lever only	11	Locking clip	21	31	
2	Lever body	12	Bearing	22	32	
3	Lever knob	13	Pin f. central relay lever	23	33	
4	Lever spring	14	Pin f. lever	24	34	
5	Casing with quadrant	15	Adjusting shim	25	35	
6	Stainless embellisher	16	Screw	26	36	
7	Embellisher trimming	17	Screw	27	37	
8	Locking control	18	nut	28	38	
9	Locking hook	19		29	39	
10	Locking hook	20		30	40	




Group 3: Manual Height Control Casing–Lever

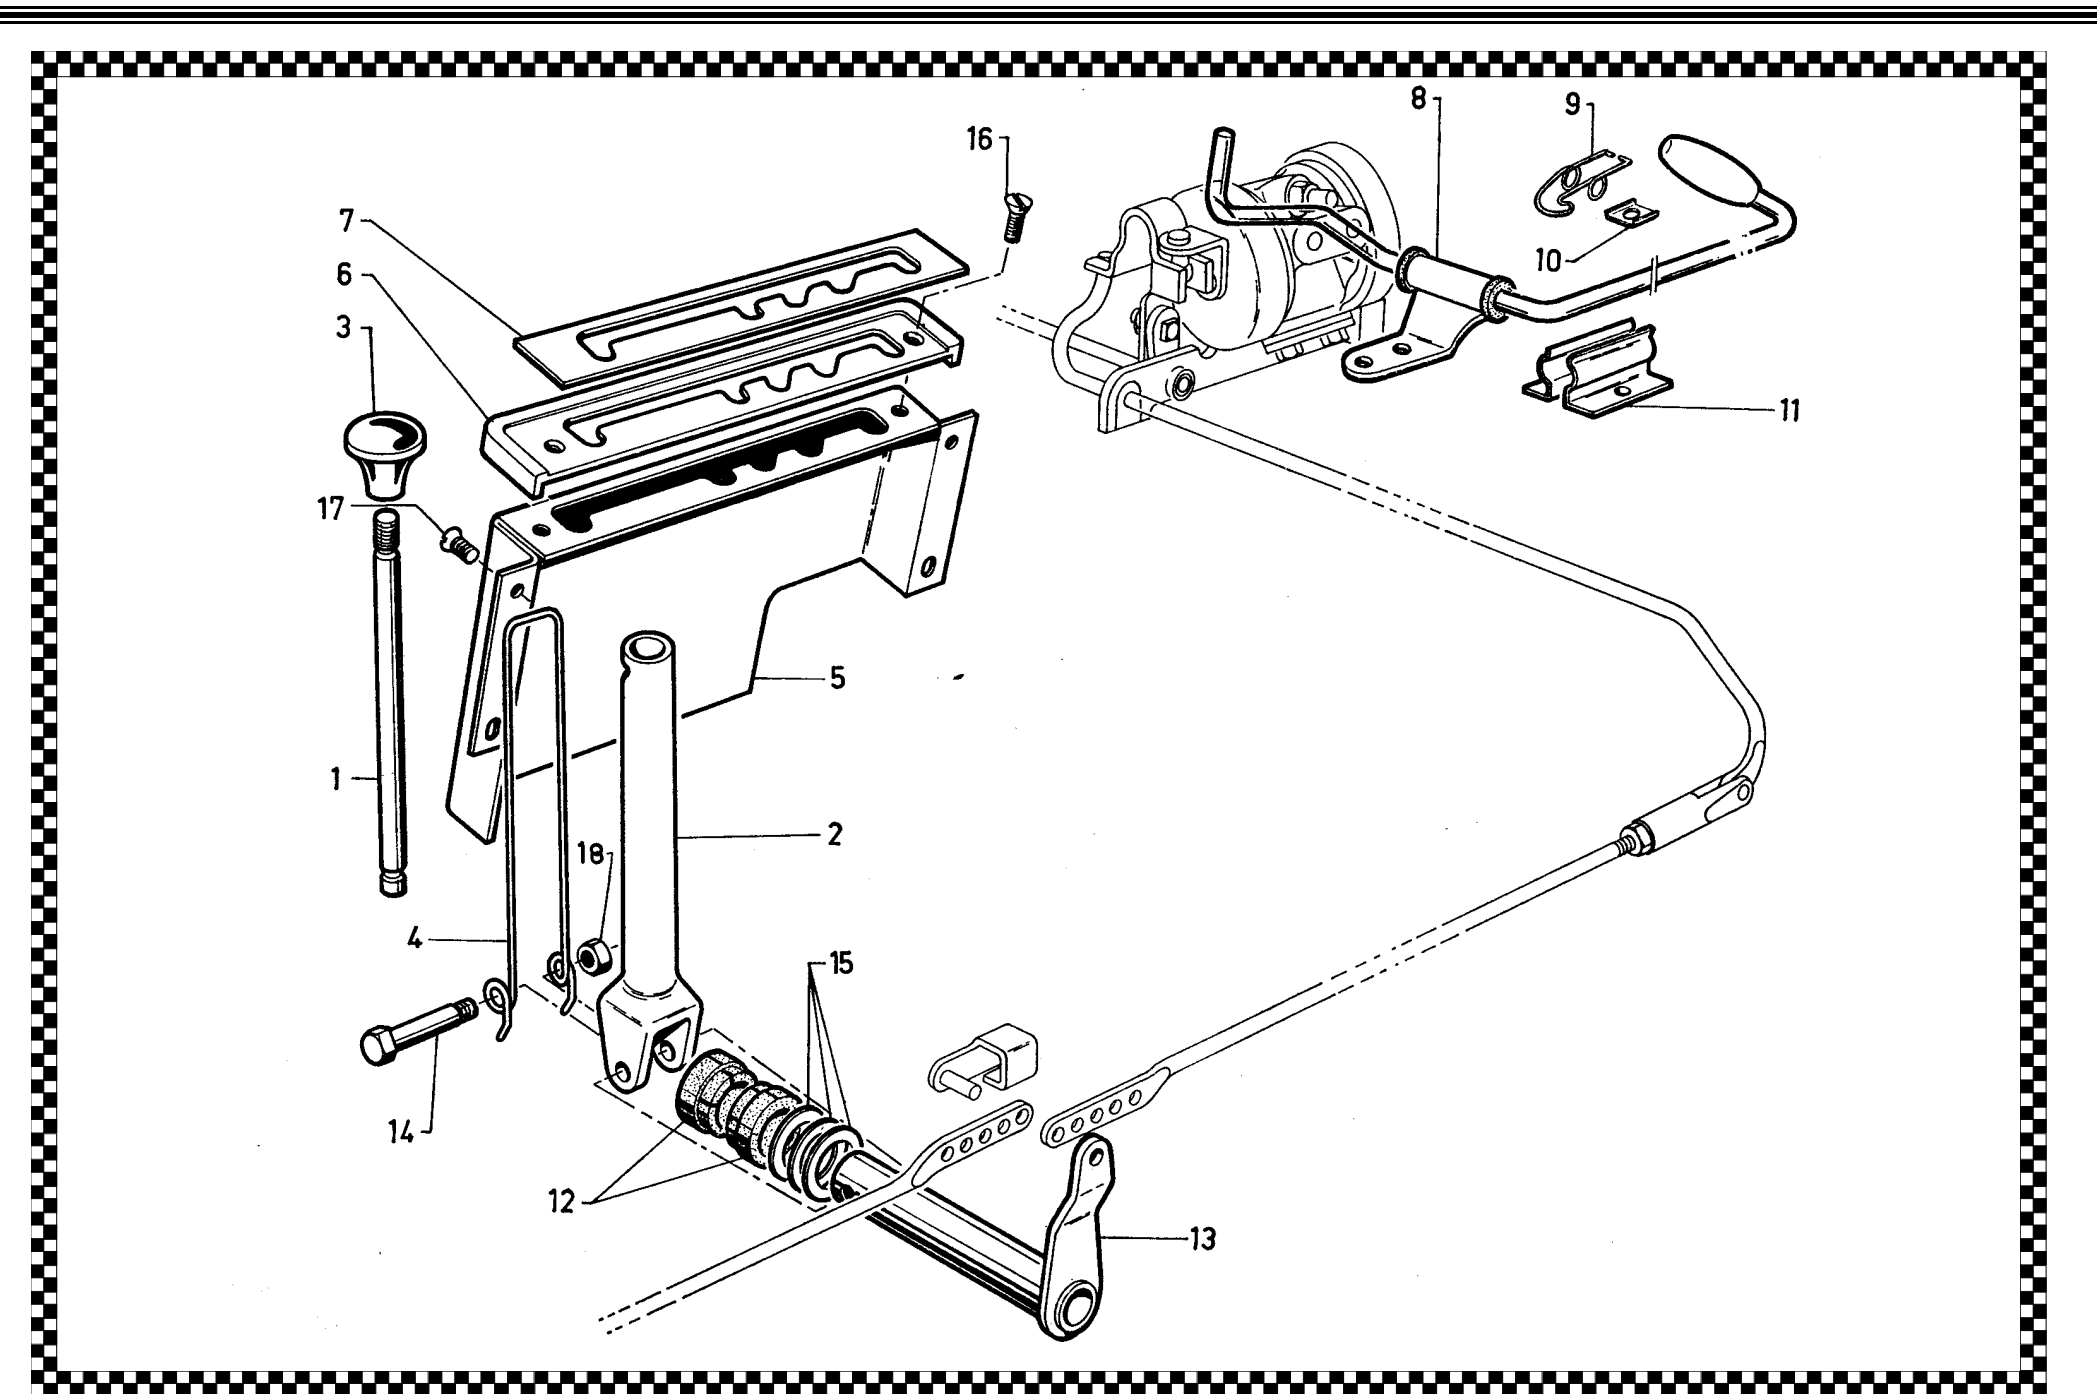


Part ID	Description						
1	Rod f. front corrector	11	Torsion rod, front	21	Lock nut	31	
2	Clevis	12	Centre rod, front	22	Screw	32	
3	Front relay lever	13	Central spindle	23	Screw	33	
4	Front bearing	14	Centre rod, rear	24	Screw	34	
5	Distance piece lever	15	Torsion rod, rear	25	Nut	35	
6	Front relay lever	16	Bearing, rear	26	Nut	36	
7	Front rod	17	Collar, rear	27	Rivet	37	
8	Nylon bush f. rods	18	Rubber rush, rear	28		38	
9	Front clamp	19	Nylon bush for rear rod	29		39	
10	Front lever	20	Nut	30		40	

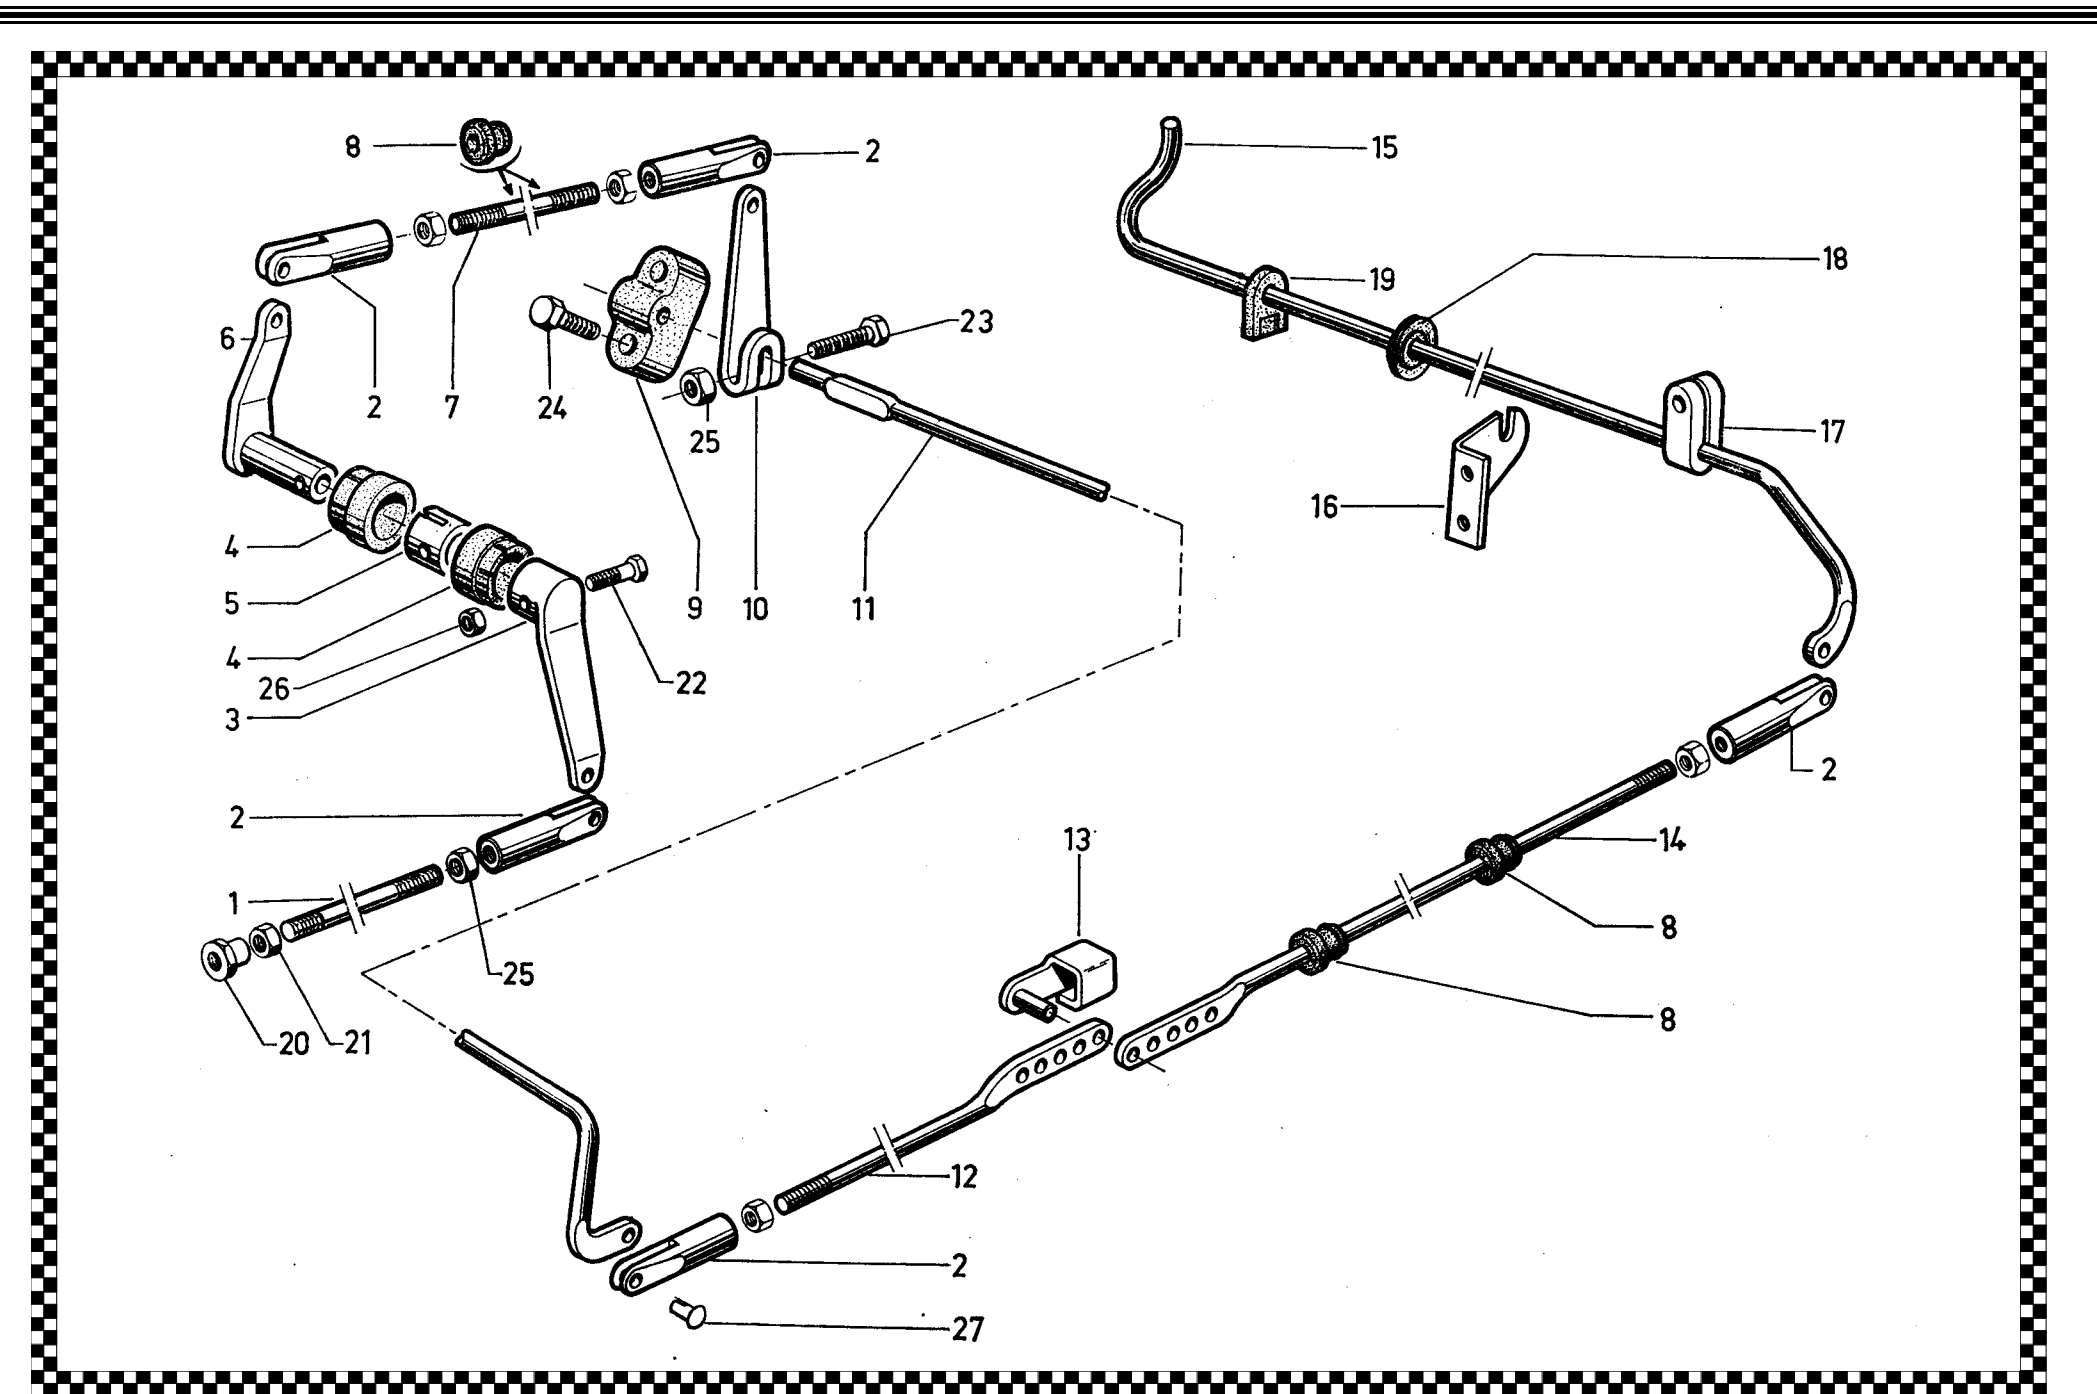

Part ID	Description						
1	Steering wheel, only	11	Friction washer	21	Screw	31	
2	Embellisher, padded	12	Washer	22	Screw	32	
3	Embellisher	13	Adjusting lever	23	Screw	33	
4	Counterplate	14	Black knob	24	Nut	34	
5	Closing panel	15	Sleeve	25	Nut	35	
6	Anti-theft	16	Adjusting screw	26	Nut	36	
7	Screw (nsap off head)	17	Spindle	27		37	
8	Bracket	18	Flexible washer	28		38	
9	Flange	19	Washer	29		39	
10	Washer	20	Bush	30		40	

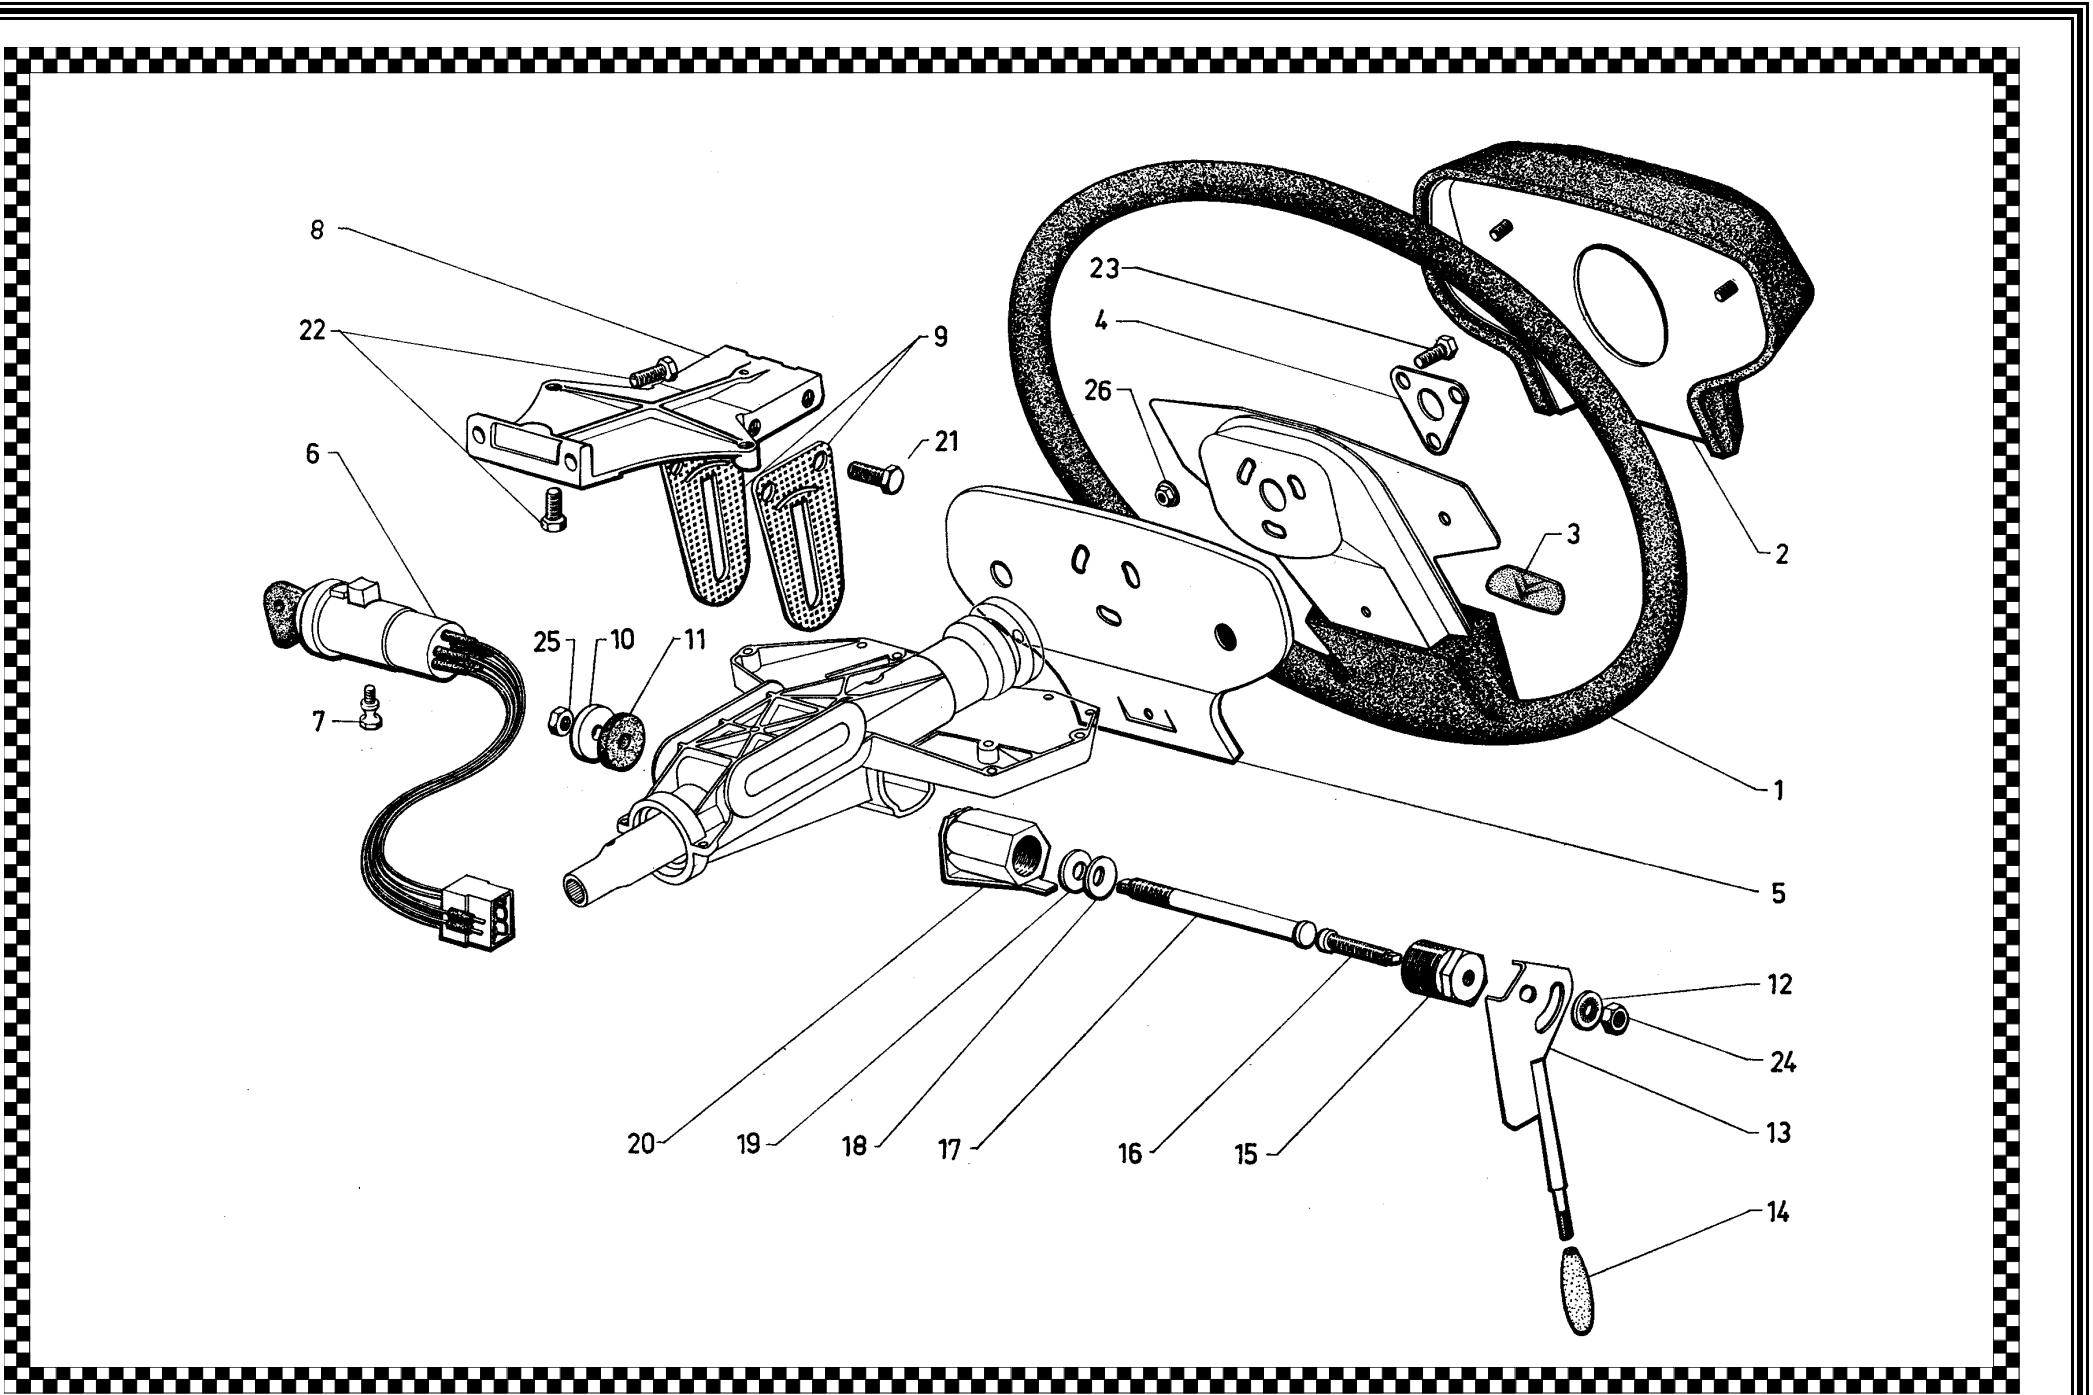


Part ID	Description						
1	Support with tube a. ball bearing	11	Bbearing	21		31	
2	Tube 26 teeth	12	Bush	22		32	
3	Shaft 26 teeth	13	Collar	23		33	
4	Cardan shaft	14	Collar	24		34	
5	Bush with springs	15	Sheath	25		35	
6	End piece bearing	16	Bush	26		36	
7	Bush	17	Screw	27		37	
8	Bush	18	Screw	28		38	
9	Nut	19	Nut	29		39	
10	Ball	20		30		40	

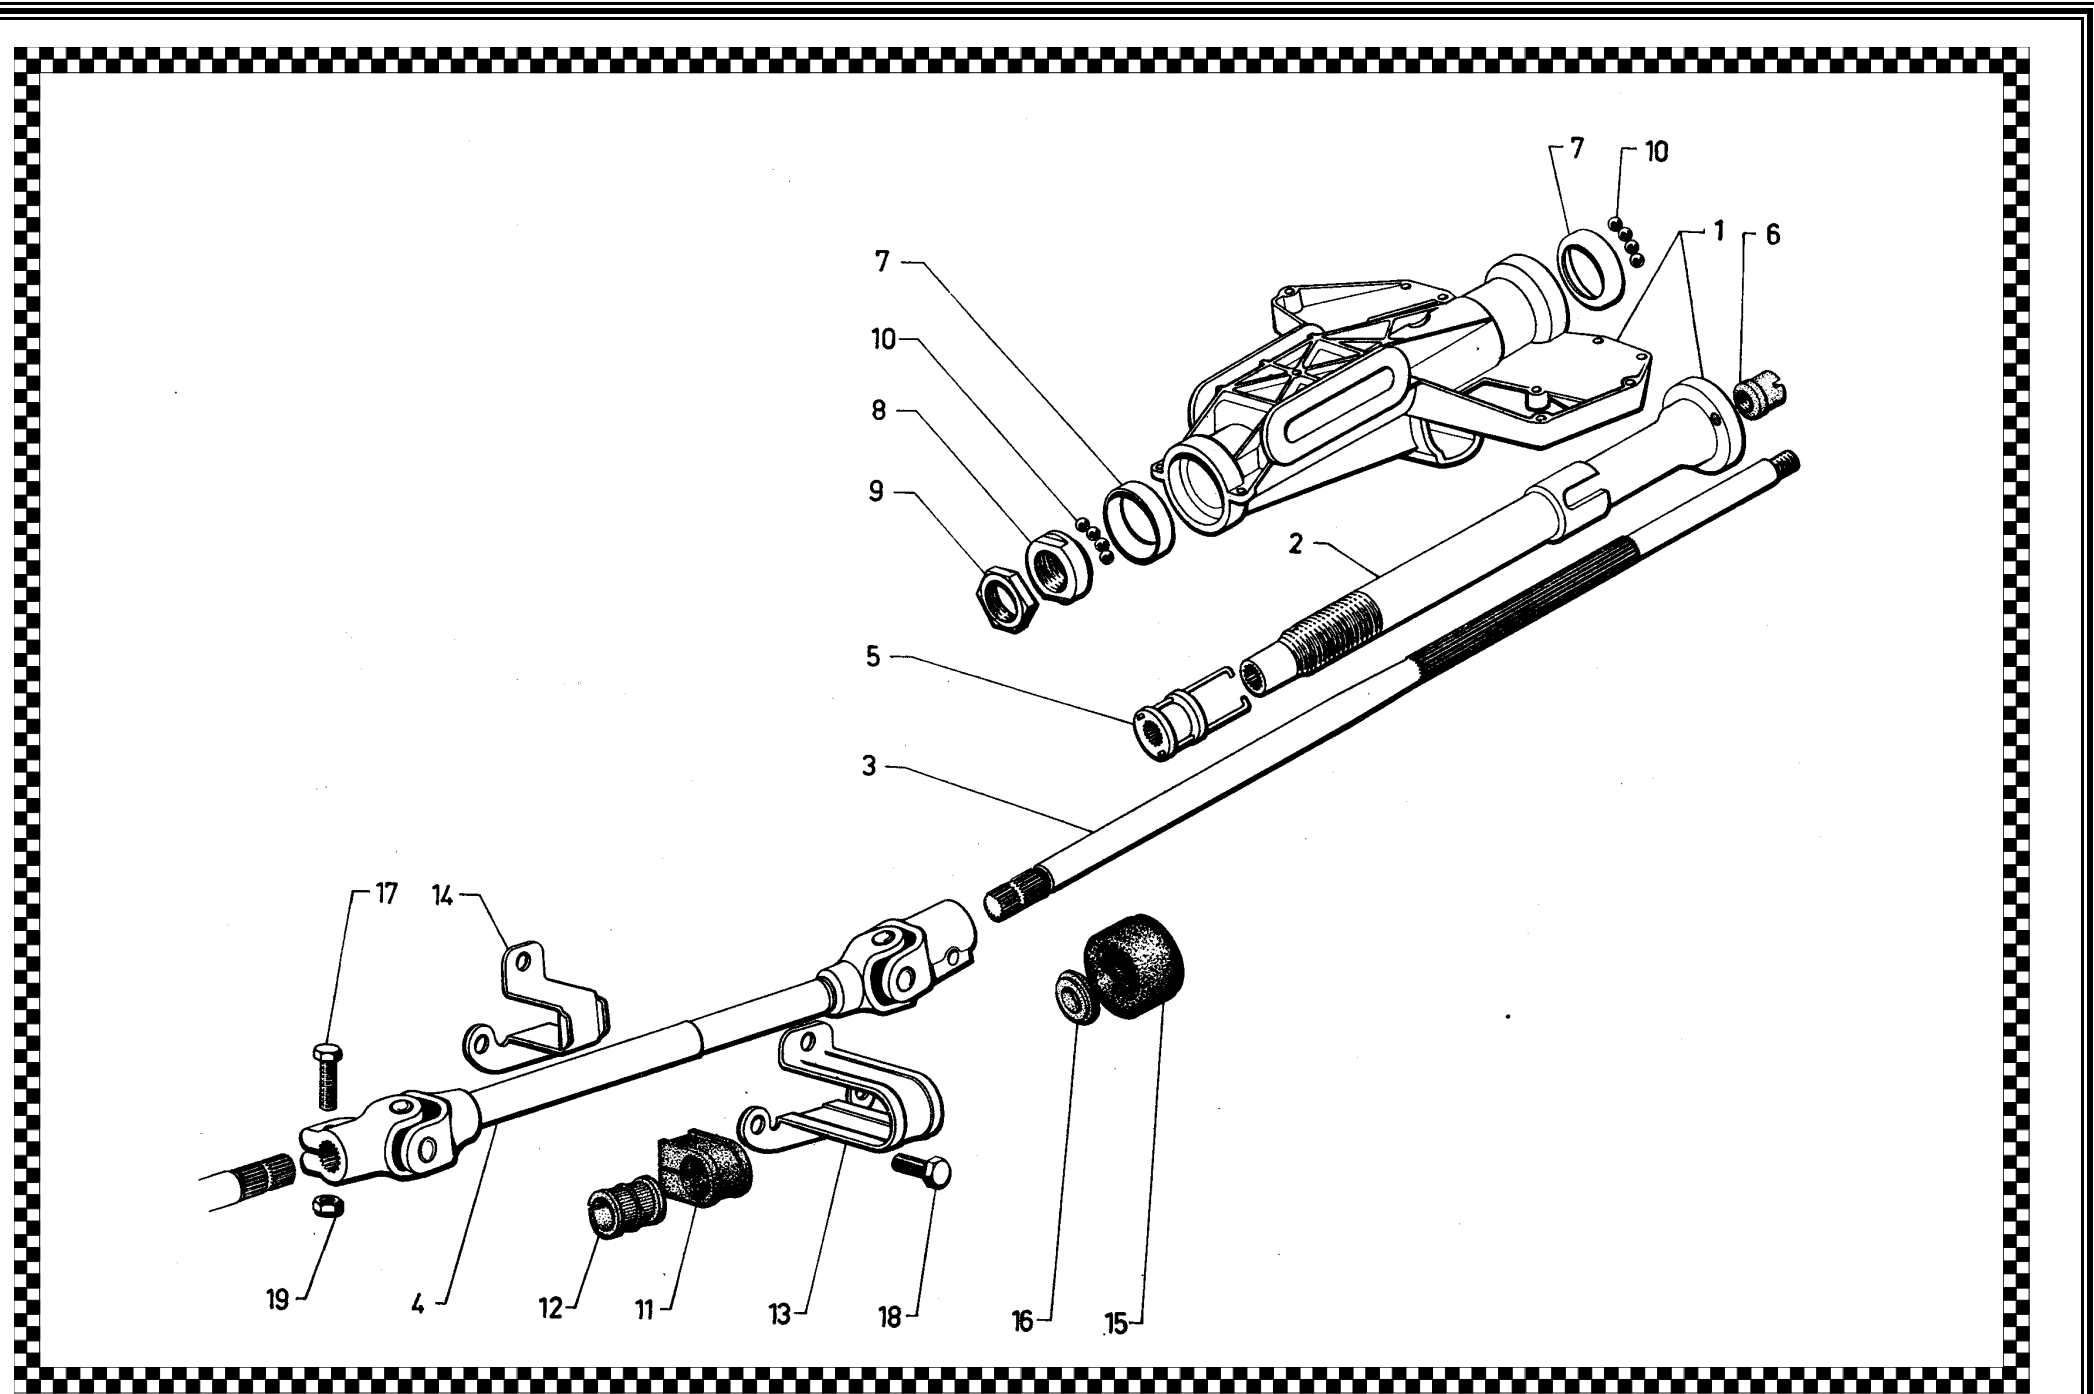

Group 3: Steering Support Tube Shafts

Part ID	Description					
1	Steering, complete	11	Nut	21	Sela holder plate servo-control side	31
2	Rubber gaiter	12	Lock washer	22	Ring seal for holder plate	32
3	Rubber gaiter	13	Ball pin	23	Clamp	33
4	f. leaks recovery	14	Clamp	24	Cylinder head	34
5	Collar	15	Cover	25	piston	35
6	Slide upper	16	Cylinder head with filter	26		36
7	Slide lower	17	Spring (4 turns)	27		37
8	Guide block	18	Valve	28		38
9	Circlip	19	Cup	29		39
10	Pin	20	Seal holder plate housing side	30		40

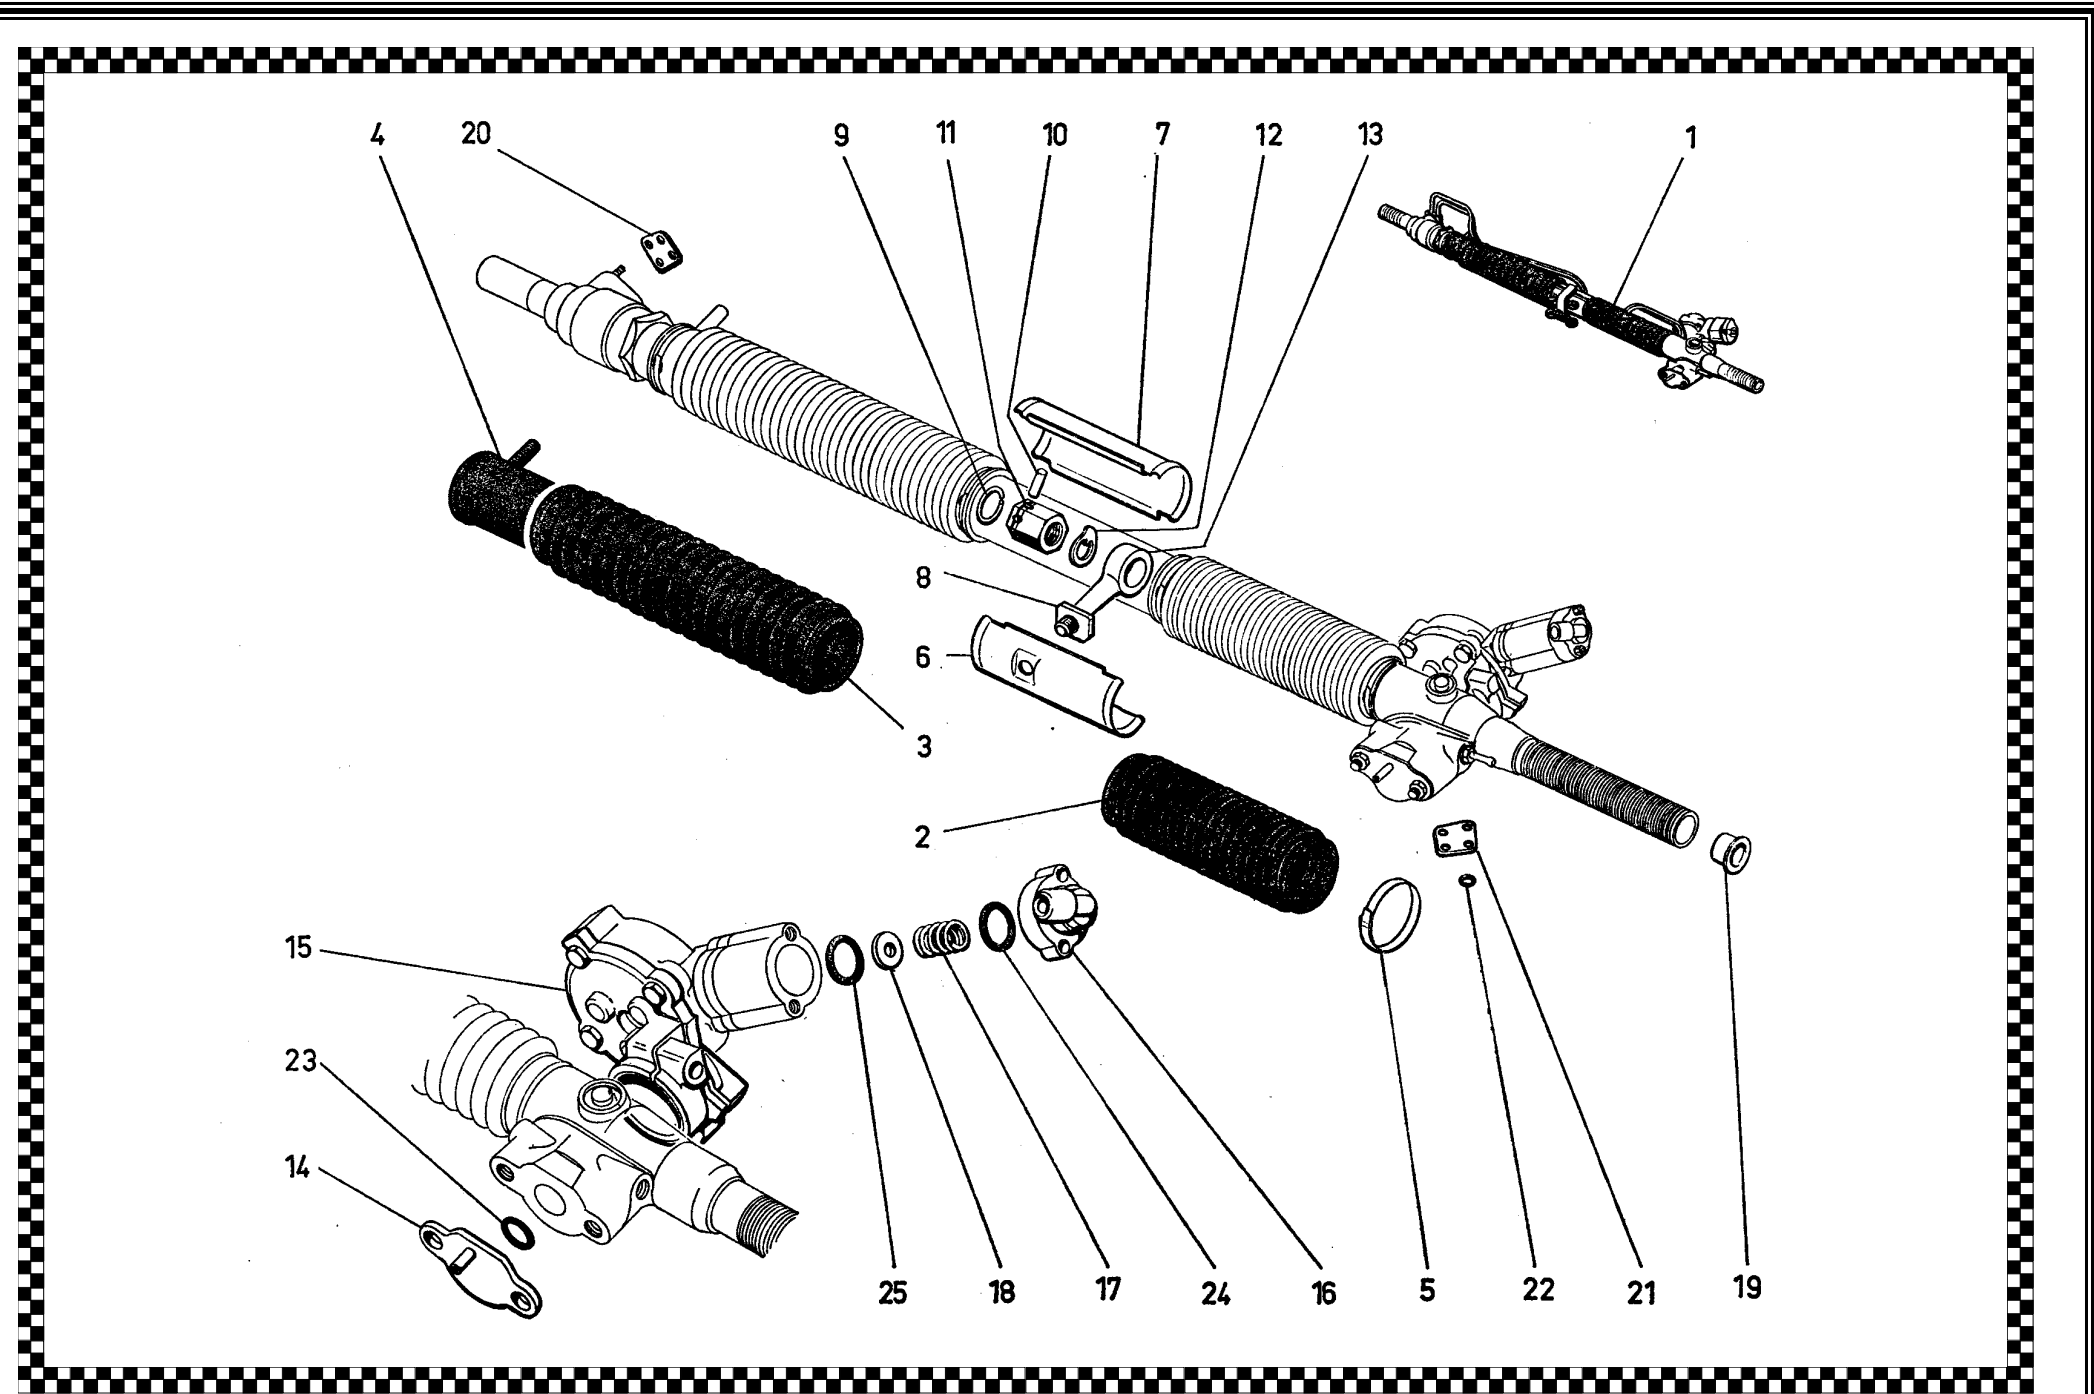


Group 3: Power Steering


Part ID	Description						
1	Regulator: centrifugal on gearbox	11	Stud	21		31	
2	Pression regulator	12	Counter-nut	22		32	
3	Oldham gasket	13	Adjusting screw	23		33	
4	Rubber tube	14	Needle	24		34	
5	Union pipe	15	Valve diaphragm	25		35	
6	Union pipe	16	Holding bush	26		36	
7	Gasket	17	Sealing ring	27		37	
8	Gasket	18	Stop ring	28		38	
9	Union with filter	19		29		39	
10	Sealing ring	20		30		40	



Group 3: Steering Regulators

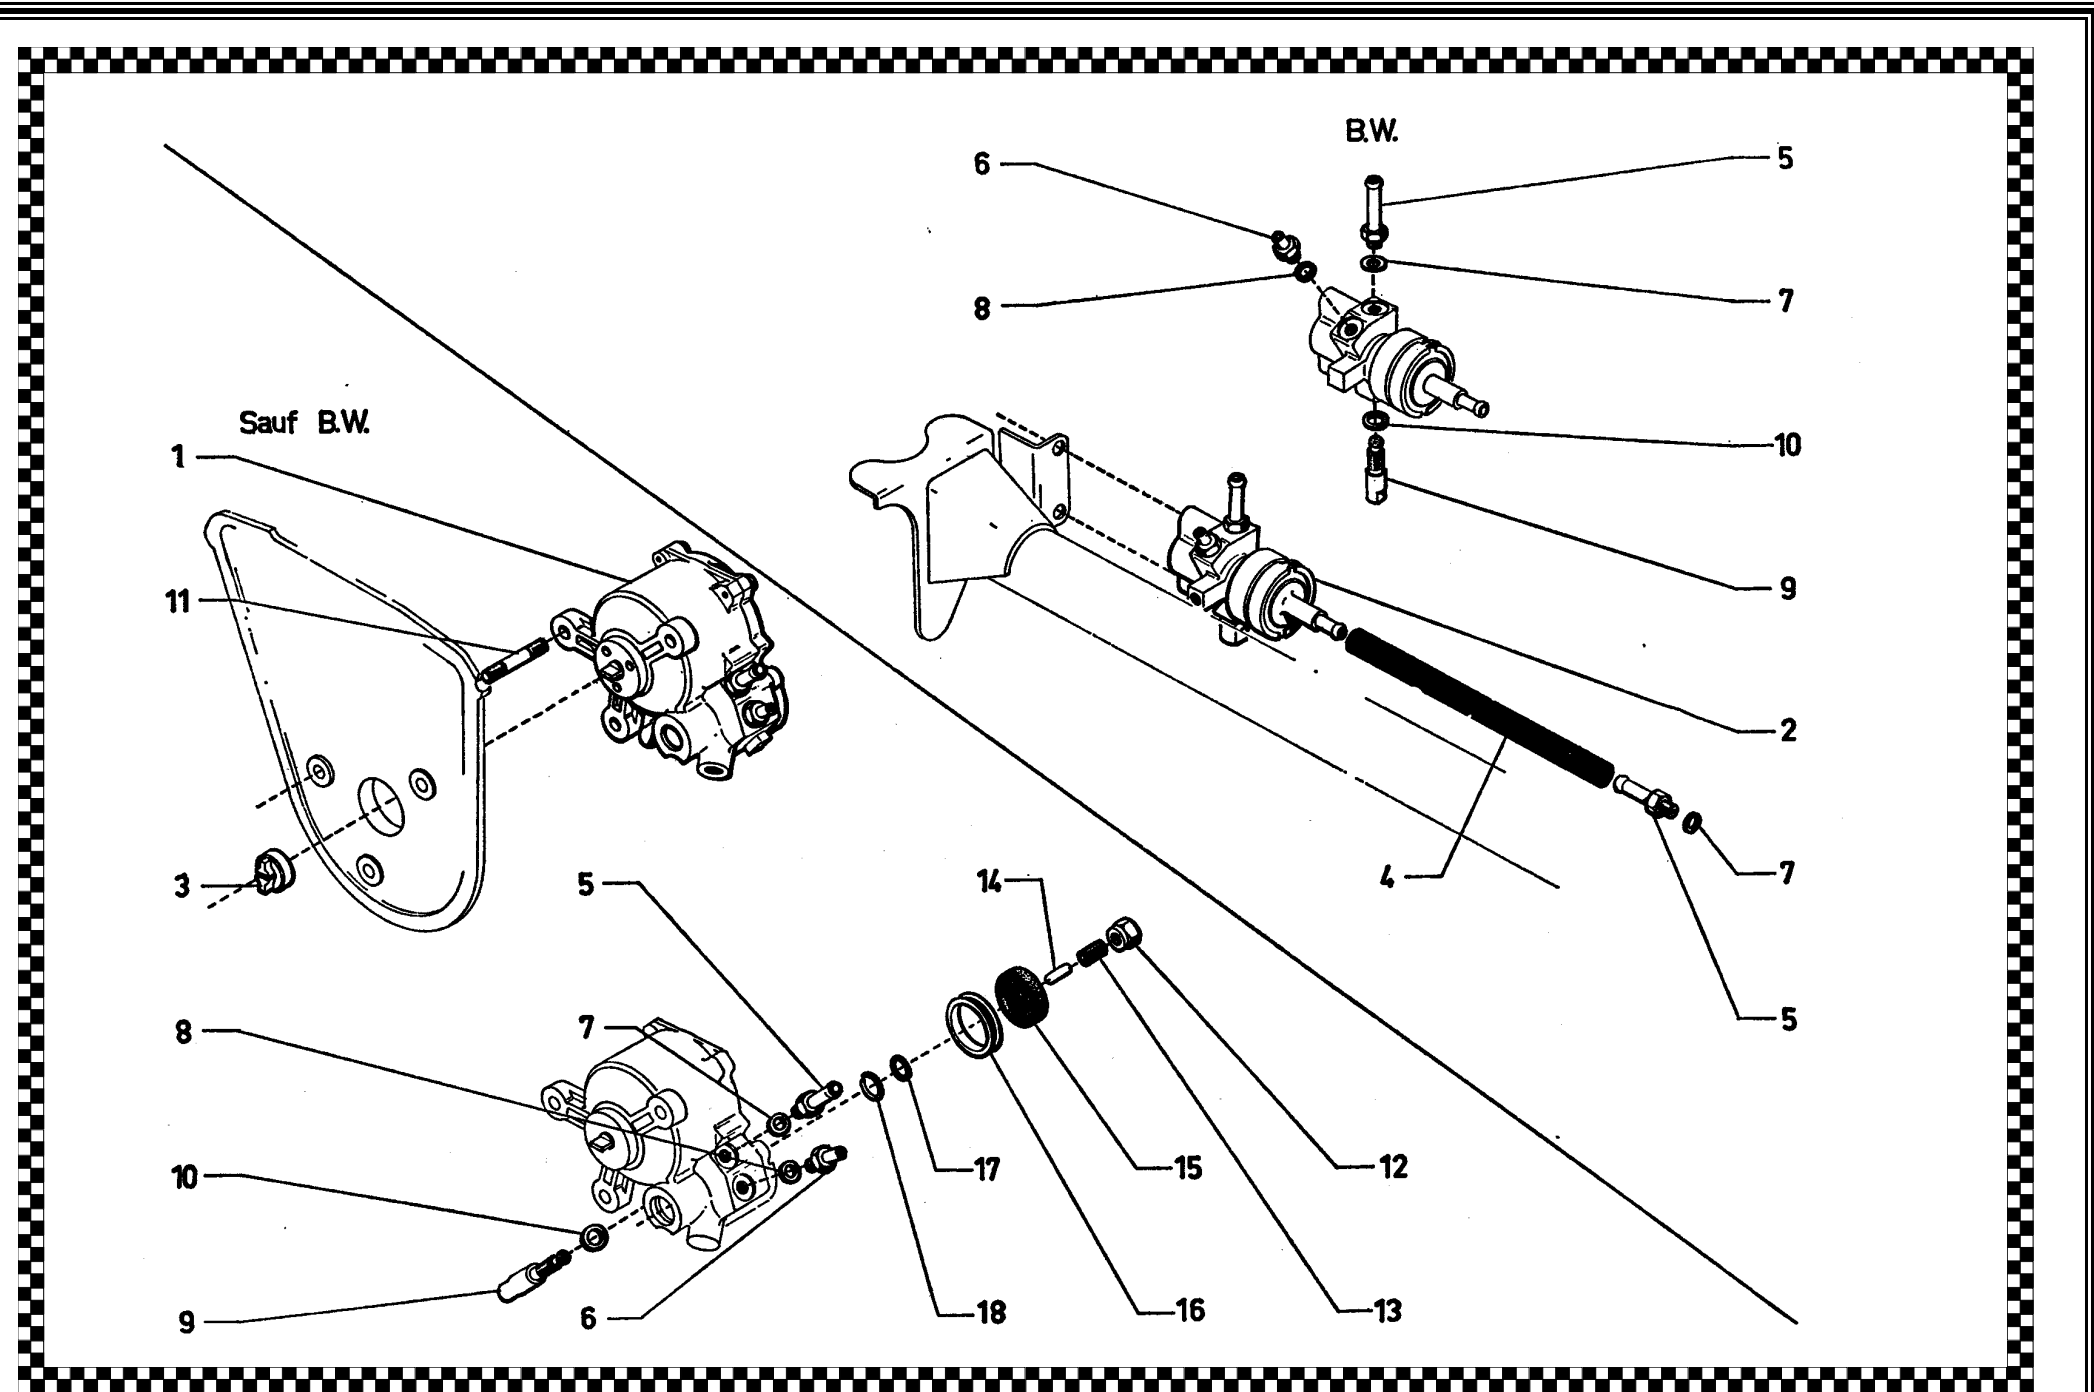


Part ID	Description						
1	Steering rod	11	Rubber sleeve f. ball pin	21		31	
2	Coupling rod	12	Screw f. adjustable sleeve	22		32	
3	Shackle	13	Nut: f. adjustable sleeve	23		33	
4	Rubber washer for shackle	14	Nut: f. ball pin	24		34	
5	Shackle spring	15	Nut: f. shackle bolt	25		35	
6	Shackle bolt	16	Nut: f. central ball pin	26		36	
7	Flexible bearing	17	Lock plate	27		37	
8	Sleeve, adjustable	18		28		38	
9	Collar f. adjustable sleeve	19		29		39	
10	Steering rod end piece (with ball pin)	20		30		40	

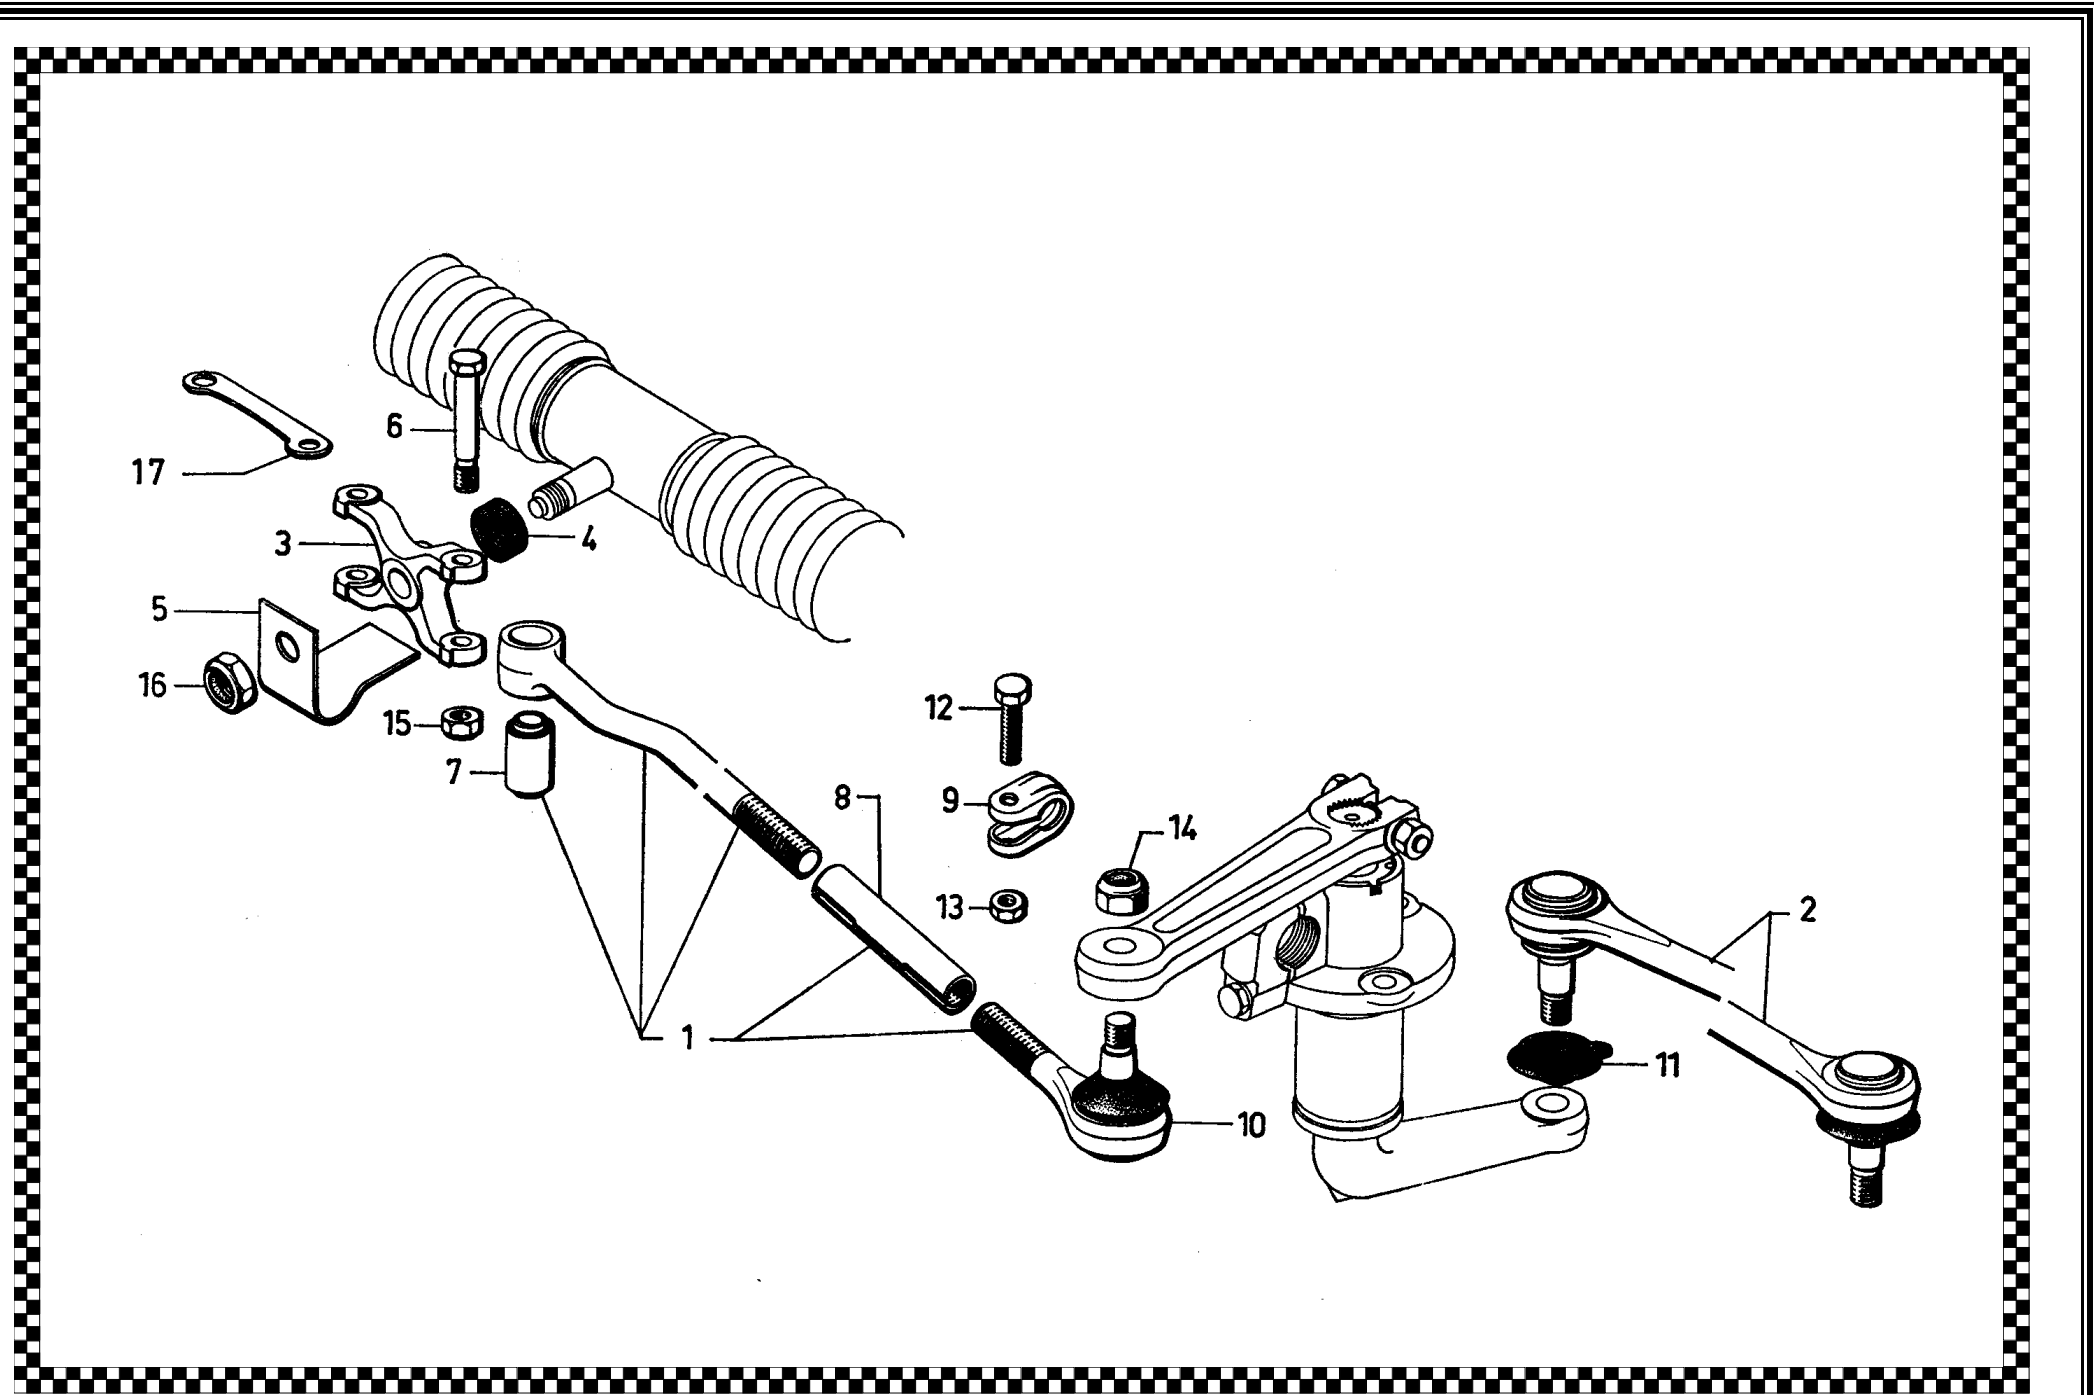

Part ID	Description					
1	Relay housing complete	11	Sealing bush	21		31
2	Lever	12	Sealing bush	22		32
3	Lever	13	Circlip	23		33
4	Lever screw	14	Bearing cup	24		34
5	Cap for housing	15	Screw: f. cup	25		35
6	Nut for housing	16	Screw: for housing	26		36
7	Flexible washer	17	Nut	27		37
8	Bearing race	18	shim	28		38
9	Bearing race	19		29		39
10	ball	20		30		40



Group 3: Steering Relay Housings

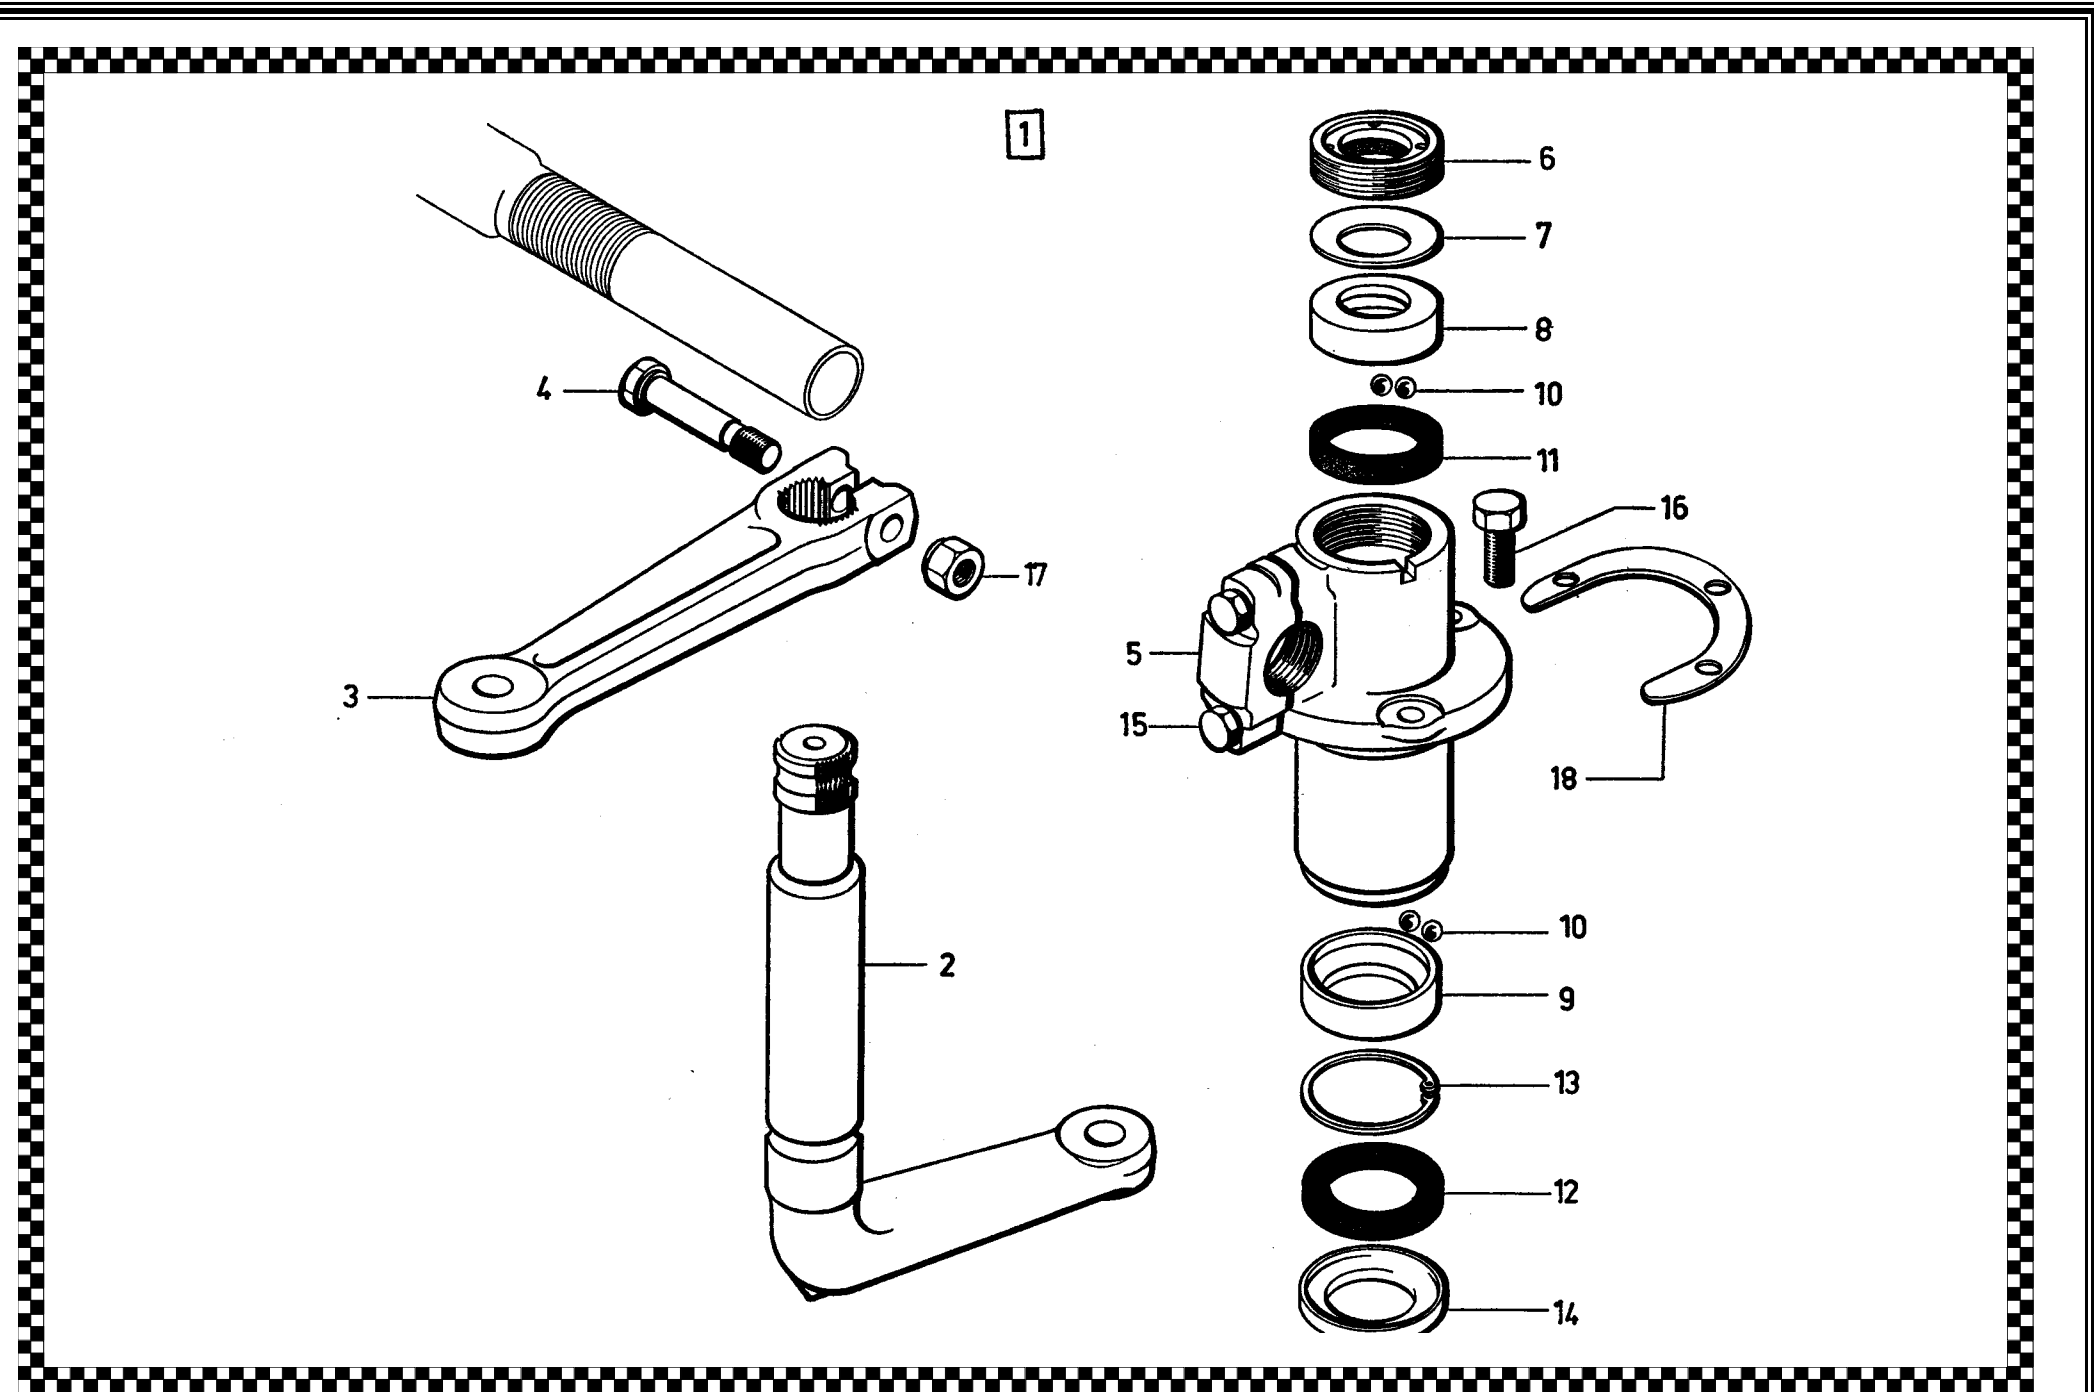

Part ID	Description						
1	Complete control unit	11	Sealing ring	21	Rislan washer	31	
2	End piece	12	Sealing ring	22	Stud	32	
3	End piece	13	Sealing ring	23		33	
4	Spacer	14	Seal -felt	24		34	
5	Cylinder, only	15	Ring seal	25		35	
6	Nut	16	Rilsan seal	26		36	
7	Washer	17	Sealing rubber	27		37	
8	Seal holder	18	Sealing ring	28		38	
9	Piston	19	Sealing rislan seal	29		39	
10	rod	20	Sealing rubber	30		40	

